


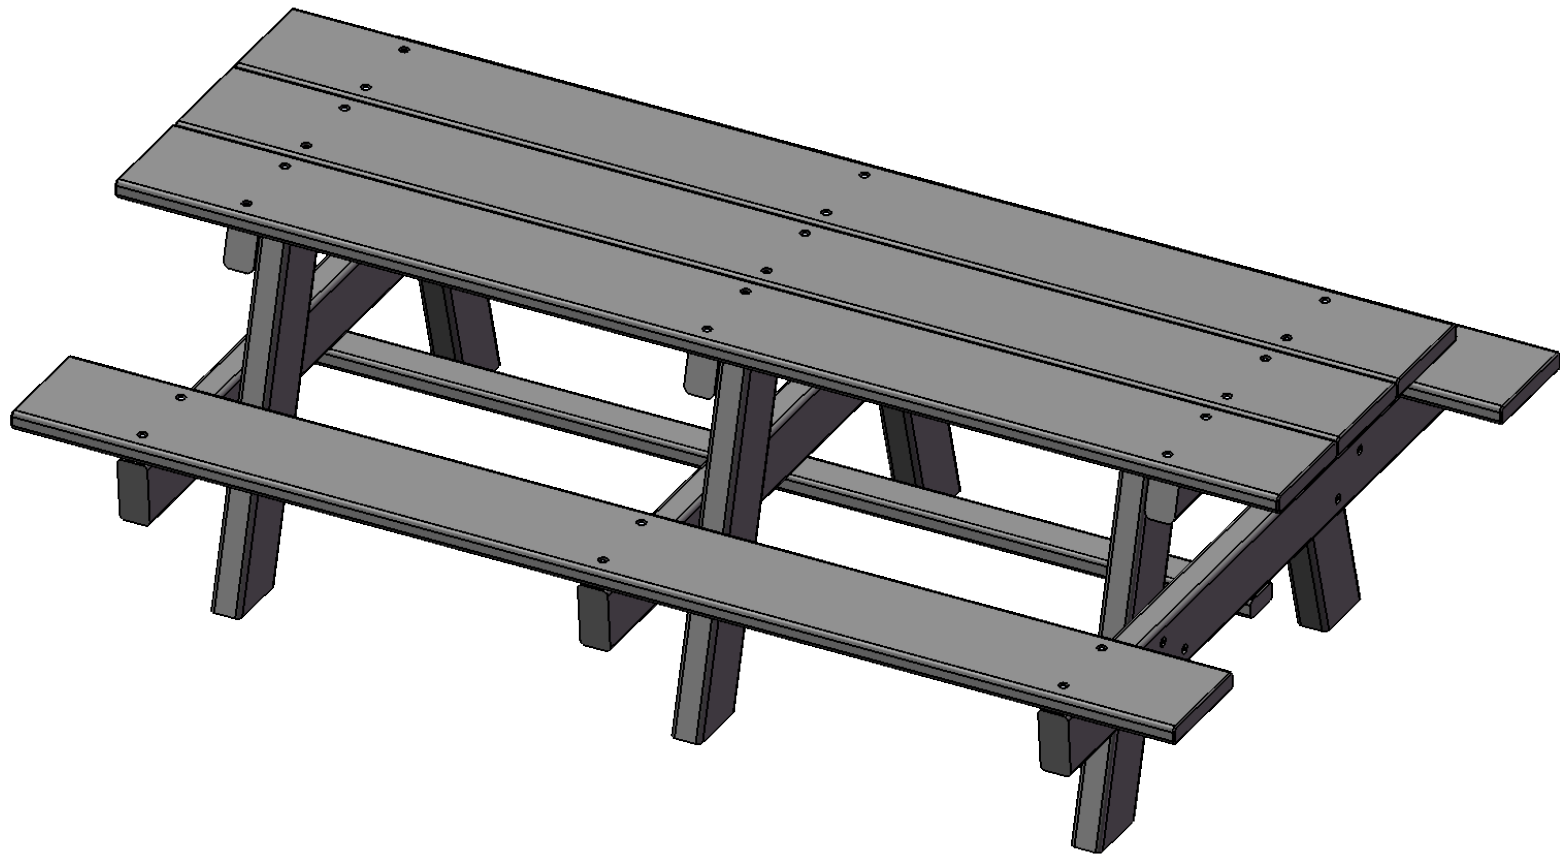

Model # PB APIC8__


SAFETY WARNINGS & EQUIPMENT INSPECTION

- Owners and installers please note these safety warnings and make use of this checklist on a regular basis.
- Follow installation instructions when erecting equipment.
- Ground surfaces around equipment should be restored as needed. Concrete footings should never be exposed. Surface depth should comply with ASTM and CPSC specifications.
- Check for and repair damage caused by wear or vandalism, a major factor in injury causing situations.
- All protruding bolts should be covered or cut off and finished smooth. Sharp edges on pipes should be capped or removed. Check for bent, broken, or severely worn pipe, and replace.
- All equipment should be free of rust and repainted whenever necessary to deter rusting.
- We provide our customers with layout sheets and installation instructions. Please keep on file the specifications sheet that contains the listing of every part used.
- Never add components not intended for use with this product.
- Regular maintenance is necessary in this and all park and recreational equipment to insure the safety of the user.
- Note: Proper maintenance of equipment requires regular tightening of all bolts, nuts, and setscrews.
- Note: Regular checking of all parts, castings, etc. should be made. If a part is broken or worn, it should be replaced immediately.
- Check to be sure all fittings are tight and that bars and pipes do not move.
- Frog Furnishings products are durable and designed to last a lifetime, like most things that spend the majority of time outdoors, sometimes they need a little cleaning. In most cases, all a Frog product requires is mild dish soap, a bucket of warm water and a clean cloth. Apply the soapy mixture to scrub away the dirt and then rinse with water. If you have some stubborn dirt down in the grooves and divots, mix 1 part bleach to 2 parts water, apply with your clean cloth, scrub with a soft bristle brush if needed and then rinse.

HARDWARE




1/4" x 3 1/2"
Hex Lag Bolt

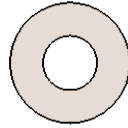

1/4" Flat Washer


TOOLS REQUIRED

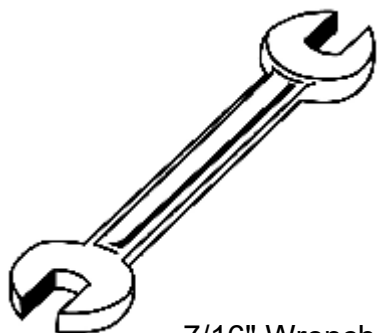


7/16" Wrench




7/16" Socket Wrench

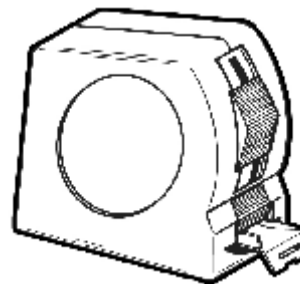

Tape Measure

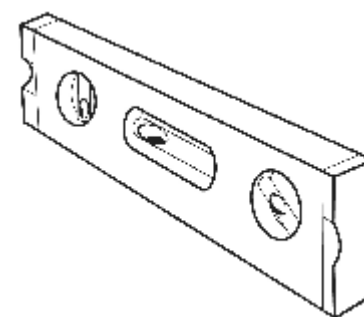

Level

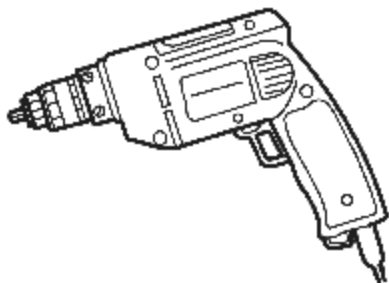

Drill



3/16" Drill Bit

PRODUCT SPECIFICATIONS

PB APIC8 8' A-FRAME PICNIC TABLE


Top & Seats: 2" x 10" recycled plastic planks.

Legs: A-Frame is made up of 3" x 6" & 3" x 4" recycled plastic. Base support is made up of 2" x 4" recycled plastic.

Hardware: Stainless Steel fasteners.


Dimensions: 8' portable picnic table walk-through design. Top is 27-15/16" wide x 96" long and is 30" high. Seats are 9-5/16" wide x 96" long and 19" high. Outside to outside dimension is 60-1/2" x 96".

COMPONENTS

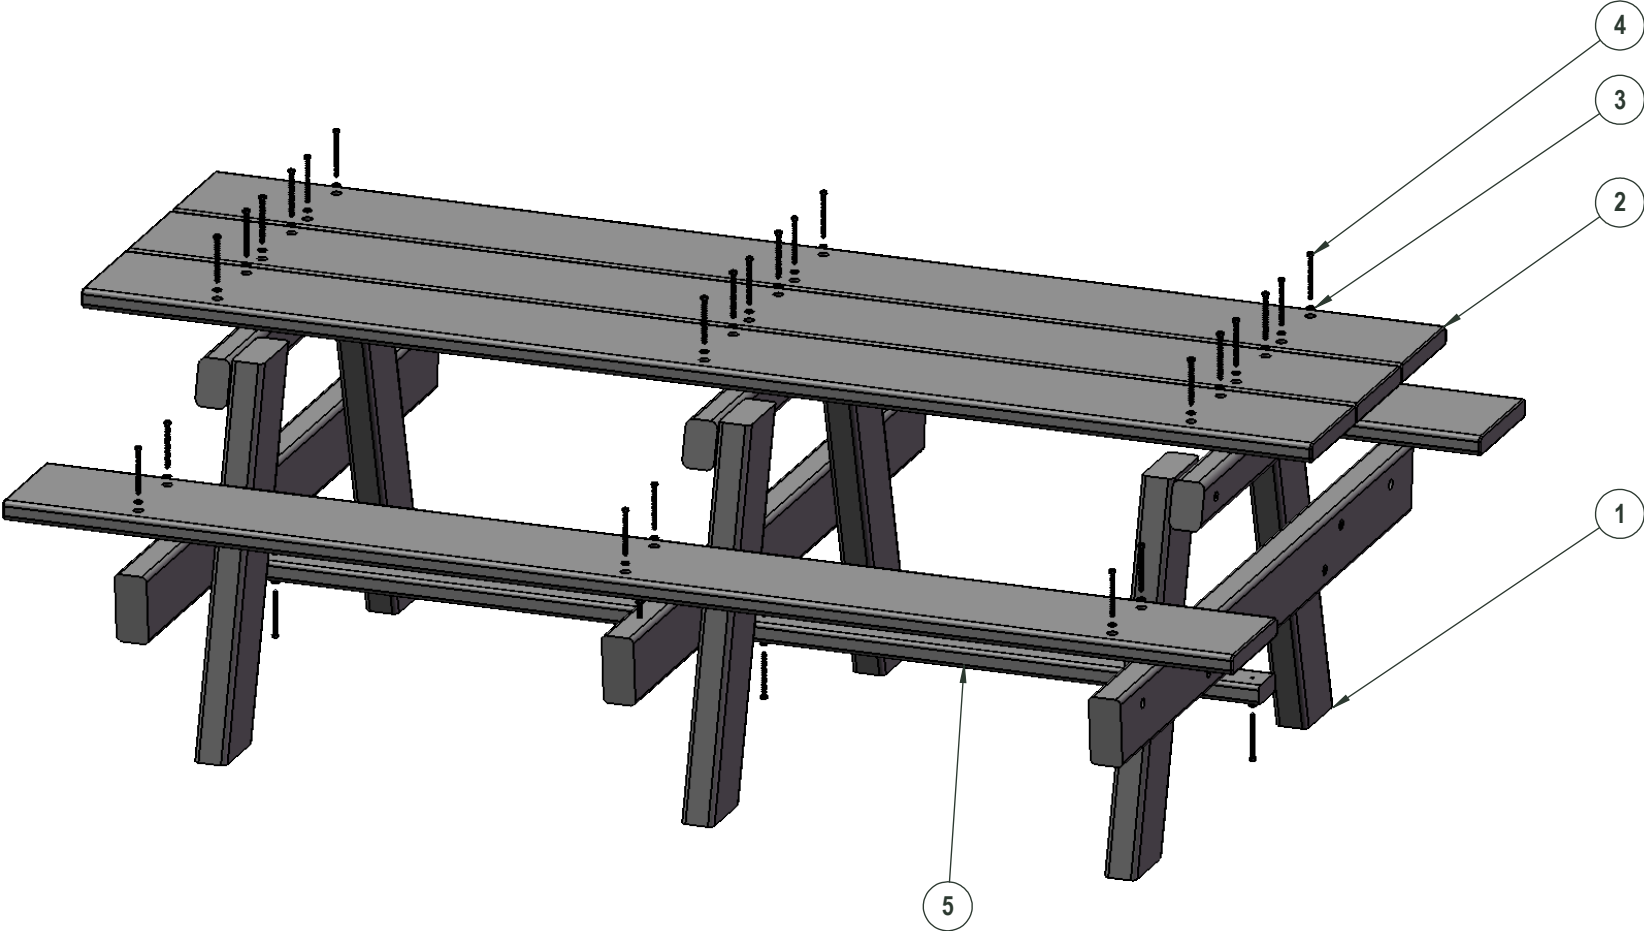



ITEM NO.	DESCRIPTION	Qty.
1	A frame base	3
2	8' top A frame	5
3	1/4" flat washer SS	33
4	1/4" x 3-1/2" lag bolt, SS	33
5	8' A frame base support	1

STEP 1

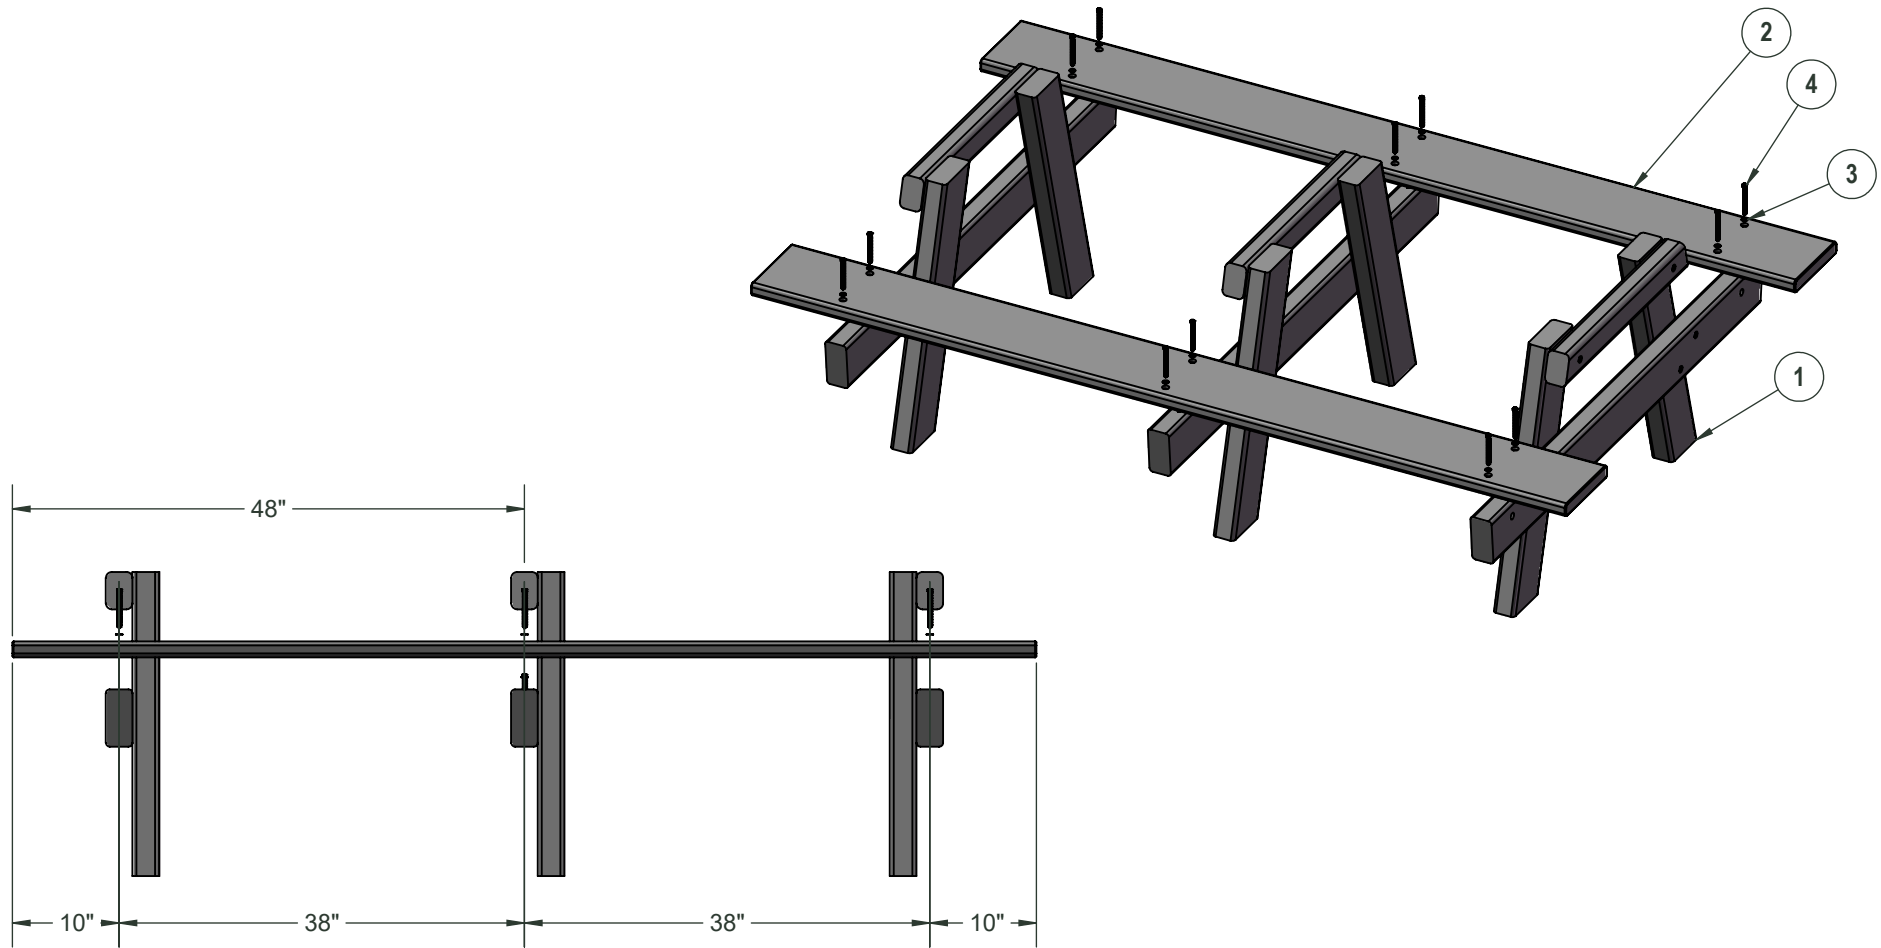


Stand A-frame bases upright and parallel to each other, the horizontal supports should face away from the center of the table. Place a slat on the top edge of the horizontal 3 x 6 of the A-Frame base supporting the seat. The pre-drilled holes should align with the center line of the 3 x 6 support. Ensure the bases are square and plumb. Use the pre-drilled holes in the seat slat as a guide, drill $\frac{3}{16}$ " starter holes in the 3 x 6 and attach using the $3 \frac{1}{2}$ " hex lag bolts and flat washers.

STEP 2

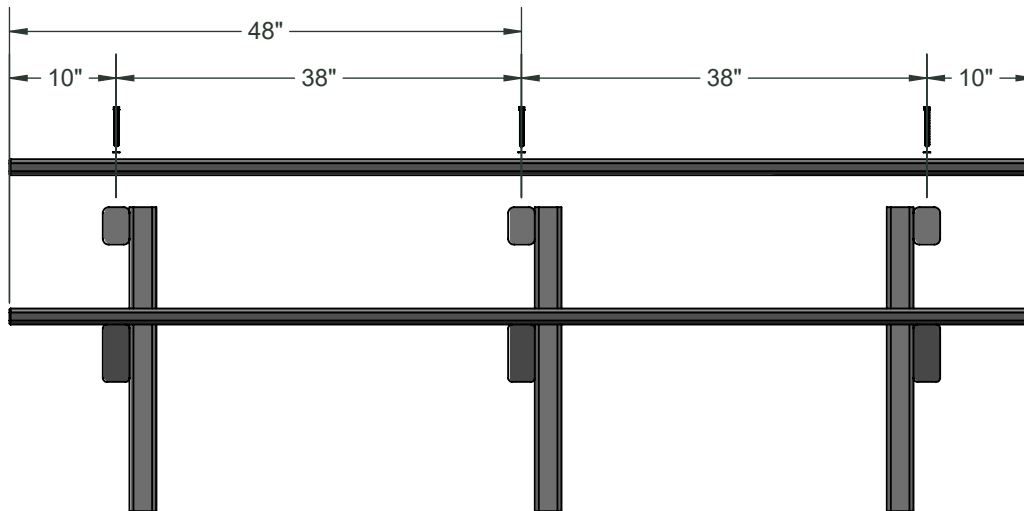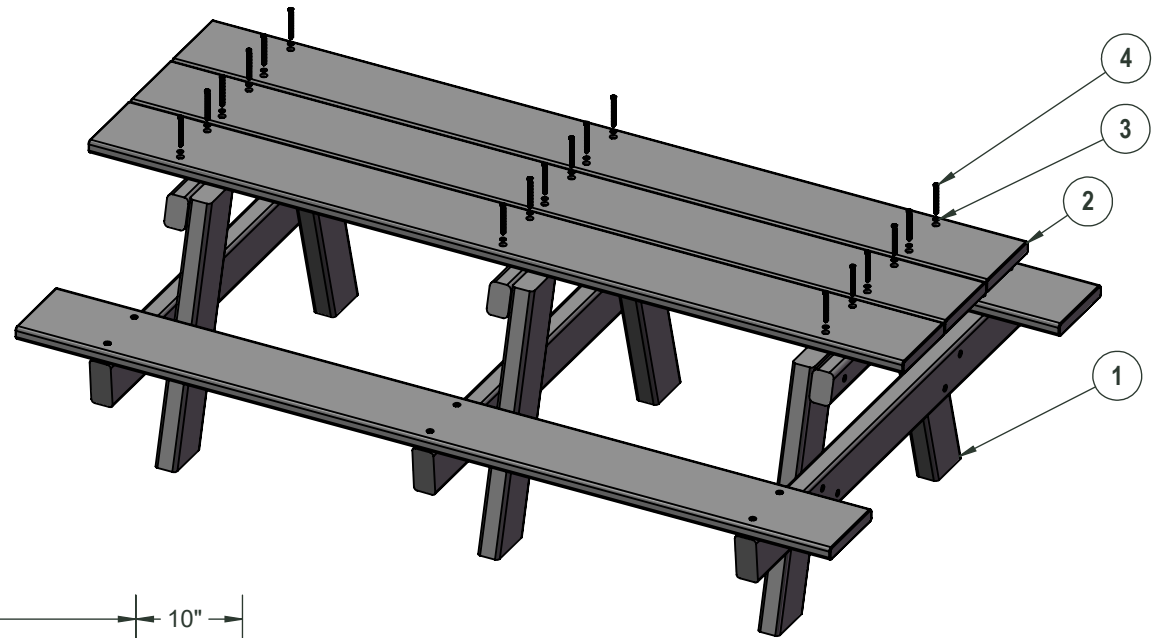

Place the table top slats spaced evenly on the A-Frames top supports, the pre-drilled holes should align on the center line of each 3 x 4 cross support. Drill 3/16" starter holes and attach using the 3 1/2" hex lag bolts and flat washers.

STEP 3

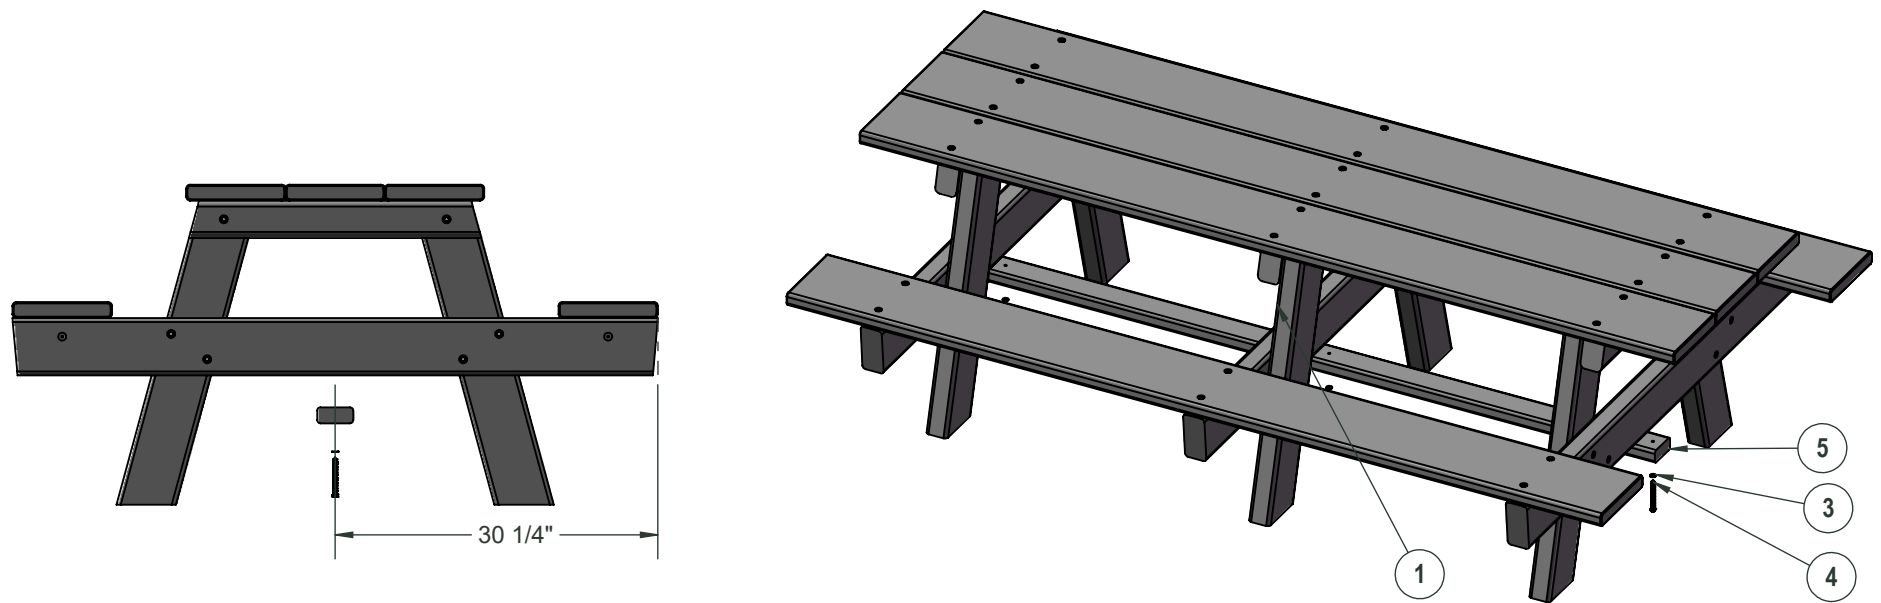

Make sure the table is square and tighten all screws. Drill 3/16" starter holes, attach the 2 x 4 base support to the bottom of the A-frames using 3 1/2" hex lag bolts and flat washers.

OVERALL DIMENSIONS

