


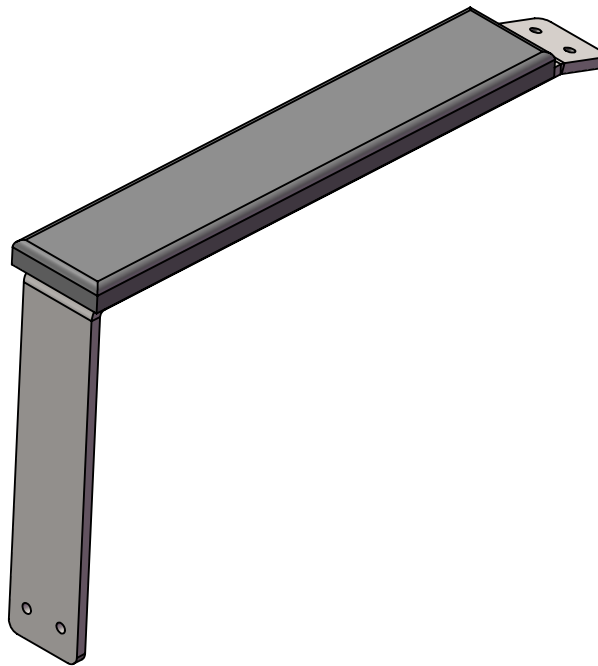


Model # PB 1176 Newport Armrest




SAFETY WARNINGS & EQUIPMENT INSPECTION

- Owners and installers please note these safety warnings and make use of this checklist on a regular basis.
- Follow installation instructions when erecting equipment.
- Ground surfaces around equipment should be restored as needed. Concrete footings should never be exposed. Surface depth should comply with ASTM and CPSC specifications.
- Check for and repair damage caused by wear or vandalism, a major factor in injury causing situations.
- All protruding bolts should be covered or cut off and finished smooth. Sharp edges on pipes should be capped or removed. Check for bent, broken, or severely worn pipe, and replace.
- All equipment should be free of rust and repainted whenever necessary to deter rusting.
- We provide our customers with layout sheets and installation instructions. Please keep on file the specifications sheet that contains the listing of every part used.
- Never add components not intended for use with this product.
- Regular maintenance is necessary in this and all park and recreational equipment to insure the safety of the user.
- Note: Proper maintenance of equipment requires regular tightening of all bolts, nuts, and setscrews.
- Note: Regular checking of all parts, castings, etc. should be made. If a part is broken or worn, it should be replaced immediately.
- Check to be sure all fittings are tight and that bars and pipes do not move.
- Frog Furnishings products are durable and designed to last a lifetime, like most things that spend the majority of time outdoors, sometimes they need a little cleaning. In most cases, all a Frog product requires is mild dish soap, a bucket of warm water and a clean cloth. Apply the soapy mixture to scrub away the dirt and then rinse with water. If you have some stubborn dirt down in the grooves and divots, mix 1 part bleach to 2 parts water, apply with your clean cloth, scrub with a soft bristle brush if needed and then rinse.

HARDWARE




#10 x 1.25" Philips
Panhead Screw



#10 x .75" Philips
Panhead Screw


TOOLS REQUIRED

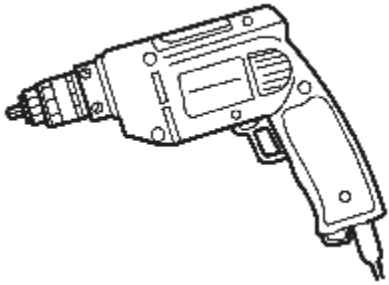


Drill



Philips Screwdriver

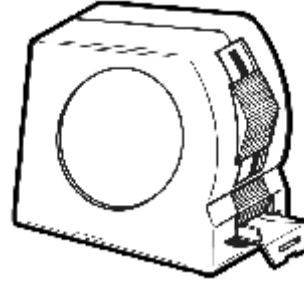

Tape Measure

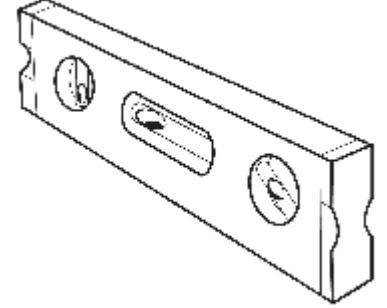

Level



1/8" Drill Bit

PRODUCT SPECIFICATIONS

PB 1176 NEWPORT ARMREST

Frame: Armrest is precision cut and formed from 1/4" thick steel plate.

Frame Coating: Electrostatic powder coated application oven cured.

Hardware: All fasteners are zinc coated.


Dimensions: Height from seat to top of armrest is 8-1/8". Length from front of armrest to backrest is 14-1/4". Width of armrest is 2-1/2".

COMPONENTS

NOTE: Armrests have to be installed before all of the middle planks.

Be careful not to overtighten screws, it may result in the hole stripping out.

Bench shown for illustration purposes only, it is not included.

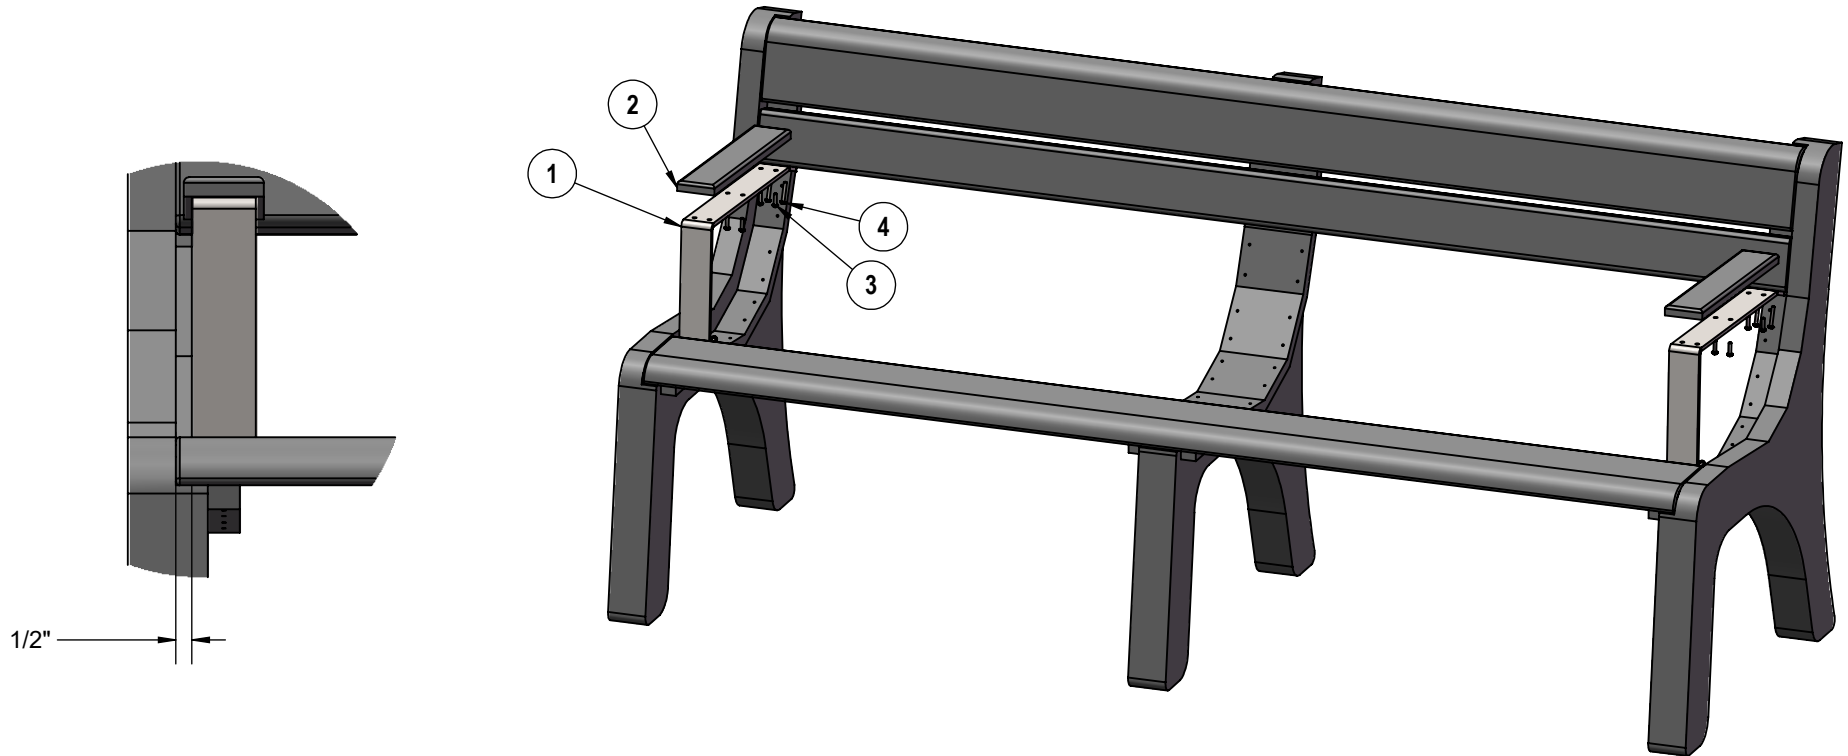

ITEM NO.	PartNo	DESCRIPTION	Qty.
1	OP 336	Newport Armrest Bracket	2
2	PL 1120	newport armrest plank	2
3	RMO 5377	#10 x 3/4" philip pan head SS	12
4	RMO 5372	#10 x 1-1/4" philip pan head SS	8

Install the Armrest Planks to the Armrest Brackets using the #10 x 3/4" philip pan head screws. Drill a 1/8" pilot hole in the planks on the bench to prevent the recycled plank from splitting, the armrests need to be a minimum 1/2" away from the inside edge of the leg. Install the Armrests to the planks using the #10 x 1-1/4" philip pan head screws.

OVERALL DIMENSIONS

