




Model # PB 4\_\_STP


## **SAFETY WARNINGS & EQUIPMENT INSPECTION**

- Owners and installers please note these safety warnings and make use of this checklist on a regular basis.
- Follow installation instructions when erecting equipment.
- Ground surfaces around equipment should be restored as needed. Concrete footings should never be exposed. Surface depth should comply with ASTM and CPSC specifications.
- Check for and repair damage caused by wear or vandalism, a major factor in injury causing situations.
- All protruding bolts should be covered or cut off and finished smooth. Sharp edges on pipes should be capped or removed. Check for bent, broken, or severely worn pipe, and replace.
- All equipment should be free of rust and repainted whenever necessary to deter rusting.
- We provide our customers with layout sheets and installation instructions. Please keep on file the specifications sheet that contains the listing of every part used.
- Never add components not intended for use with this product.
- Regular maintenance is necessary in this and all park and recreational equipment to insure the safety of the user.
- Note: Proper maintenance of equipment requires regular tightening of all bolts, nuts, and setscrews.
- Note: Regular checking of all parts, castings, etc. should be made. If a part is broken or worn, it should be replaced immediately.
- Check to be sure all fittings are tight and that bars and pipes do not move.
- Frog Furnishings products are durable and designed to last a lifetime, like most things that spend the majority of time outdoors, sometimes they need a little cleaning. In most cases, all a Frog product requires is mild dish soap, a bucket of warm water and a clean cloth. Apply the soapy mixture to scrub away the dirt and then rinse with water. If you have some stubborn dirt down in the grooves and divots, mix 1 part bleach to 2 parts water, apply with your clean cloth, scrub with a soft bristle brush if needed and then rinse.


# HARDWARE

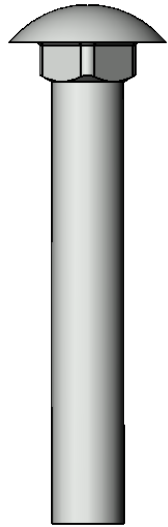

3/8" 2-1/2"  
Carriage Bolt






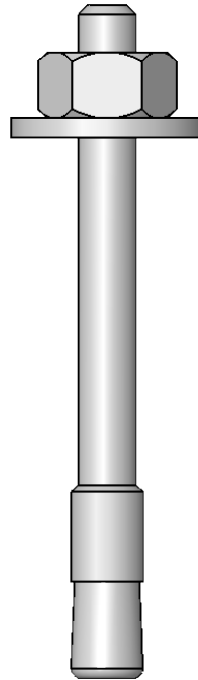


3/8" 3-1/2"  
Wedge Anchor Bolt

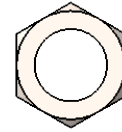

3/8" Lock Nut

## TOOLS REQUIRED

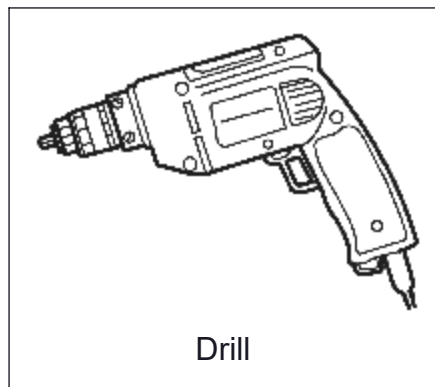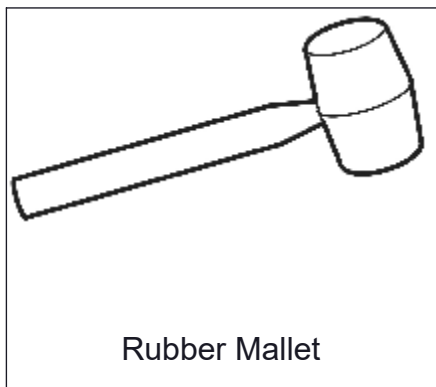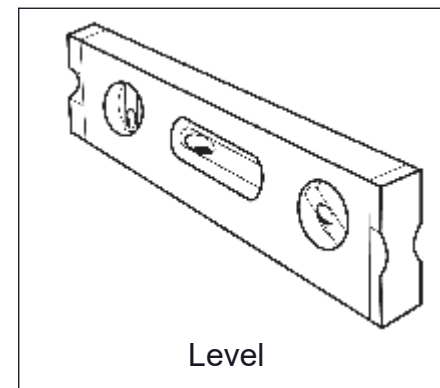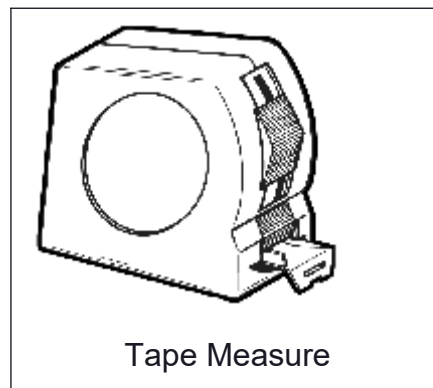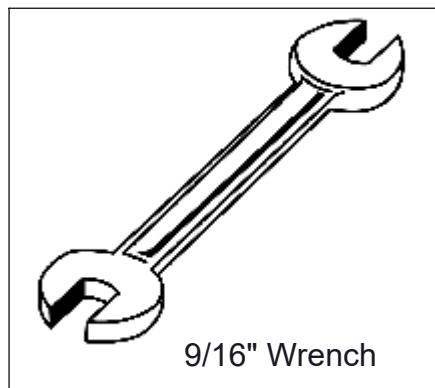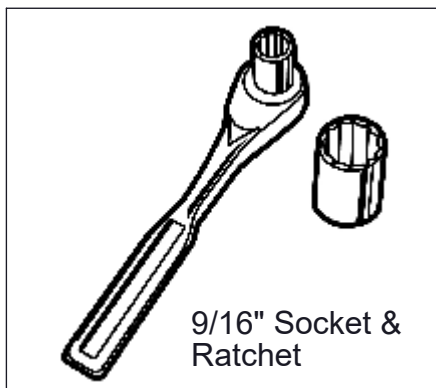

# PRODUCT SPECIFICATIONS

## **PB 4\_\_ST 4' ST.PETE SURFACE MOUNT BENCH**


Planks: 2" x 4" Recycled Plastic.

Legs: Attachment Plate is 3/8" thick. Tube is 11 gauge x 2.5 in diameter. Surface Mount Plates are 3" Wide x 4.5" Long x 1/2" Thick, all aluminum alloy.

Hardware: Stainless Steel.


Dimensions: Outside to outside dimension is 26-1/4" x 48".

# COMPONENTS

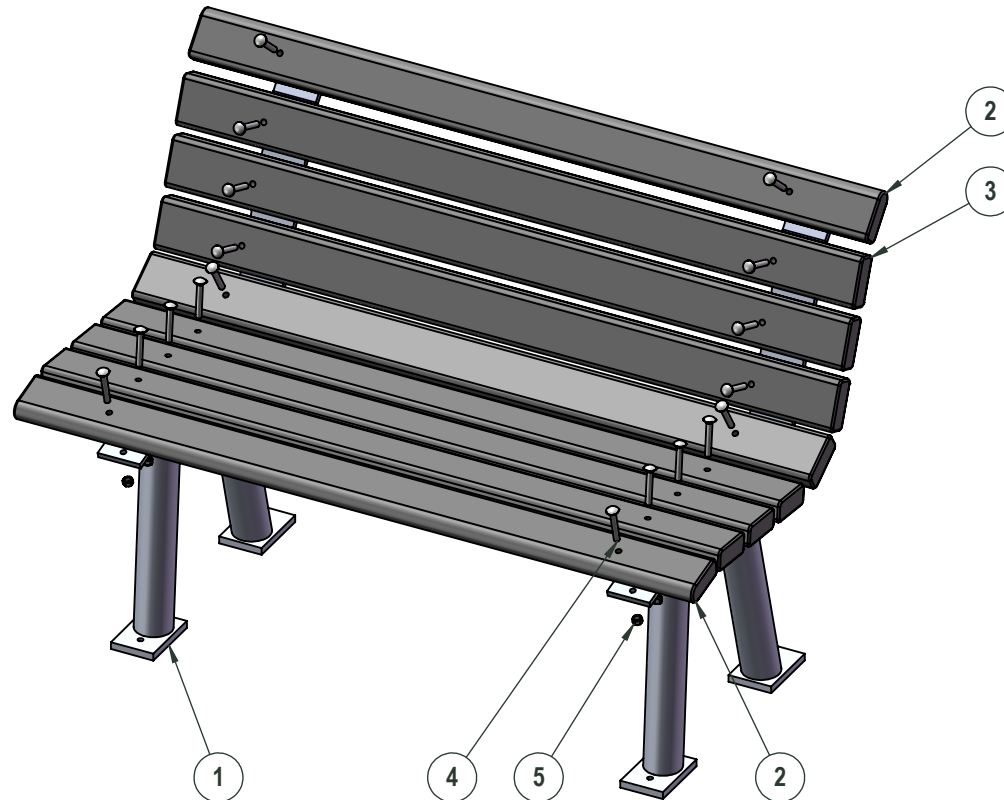


| ITEM NO. | DESCRIPTION                                   | Qty. |
|----------|-----------------------------------------------|------|
| 1        | St. Pete bench leg                            | 2    |
| 2        | 4' 2x4 bullnose bench plank (2 holes)         | 2    |
| 3        | 4' 2x4 bench plank                            | 7    |
| 4        | 3/8" x 2-1/2" Carriage Bolt (SS)              | 18   |
| 5        | 3/8" Nylon Locknut (SS)                       | 18   |
| 6        | 3/8" x 3-1/2" wedge anchor bolt, SS, set of 4 | 1    |

## STEP 1

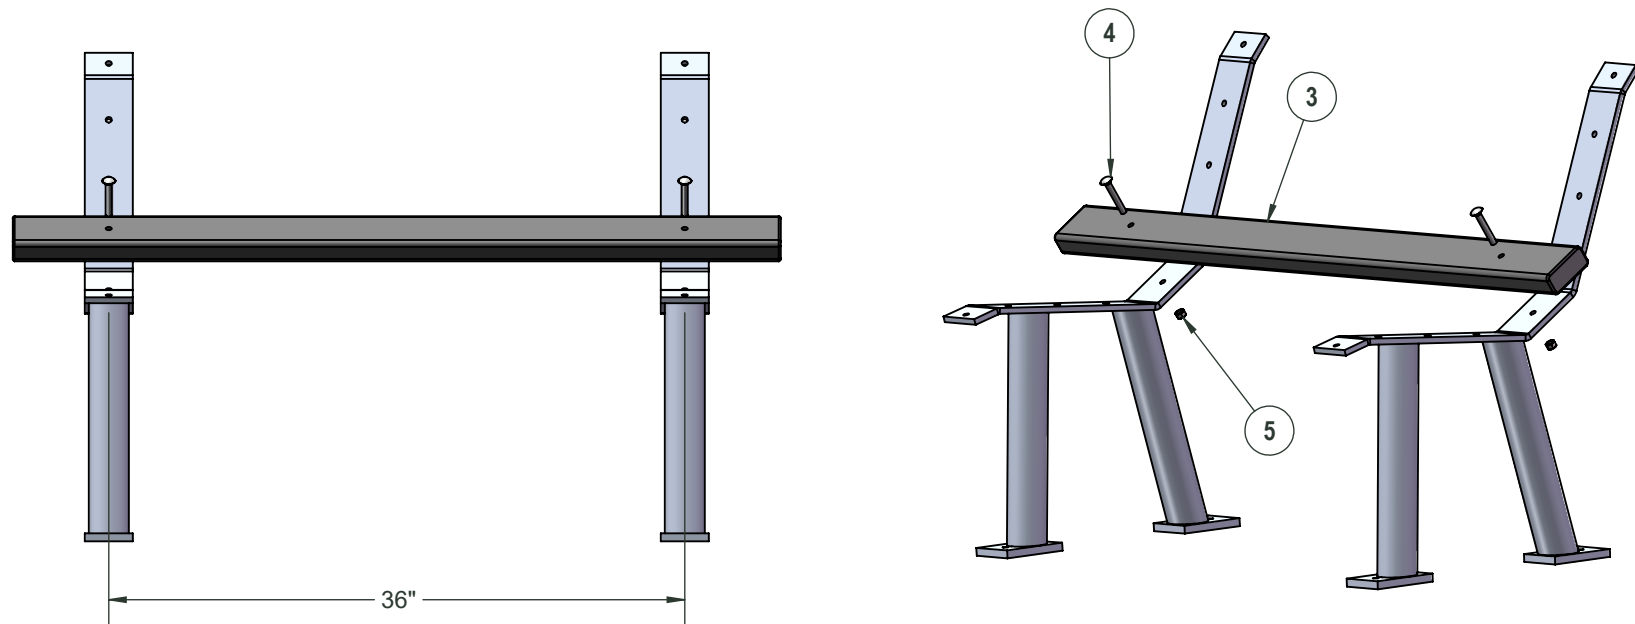


Seat the carriage bolts into the recycled plank, lightly tapping with a rubber mallet. Insert the first plank on the center of the legs. Fasten the slat to the legs, do not overtighten.

## STEP 2

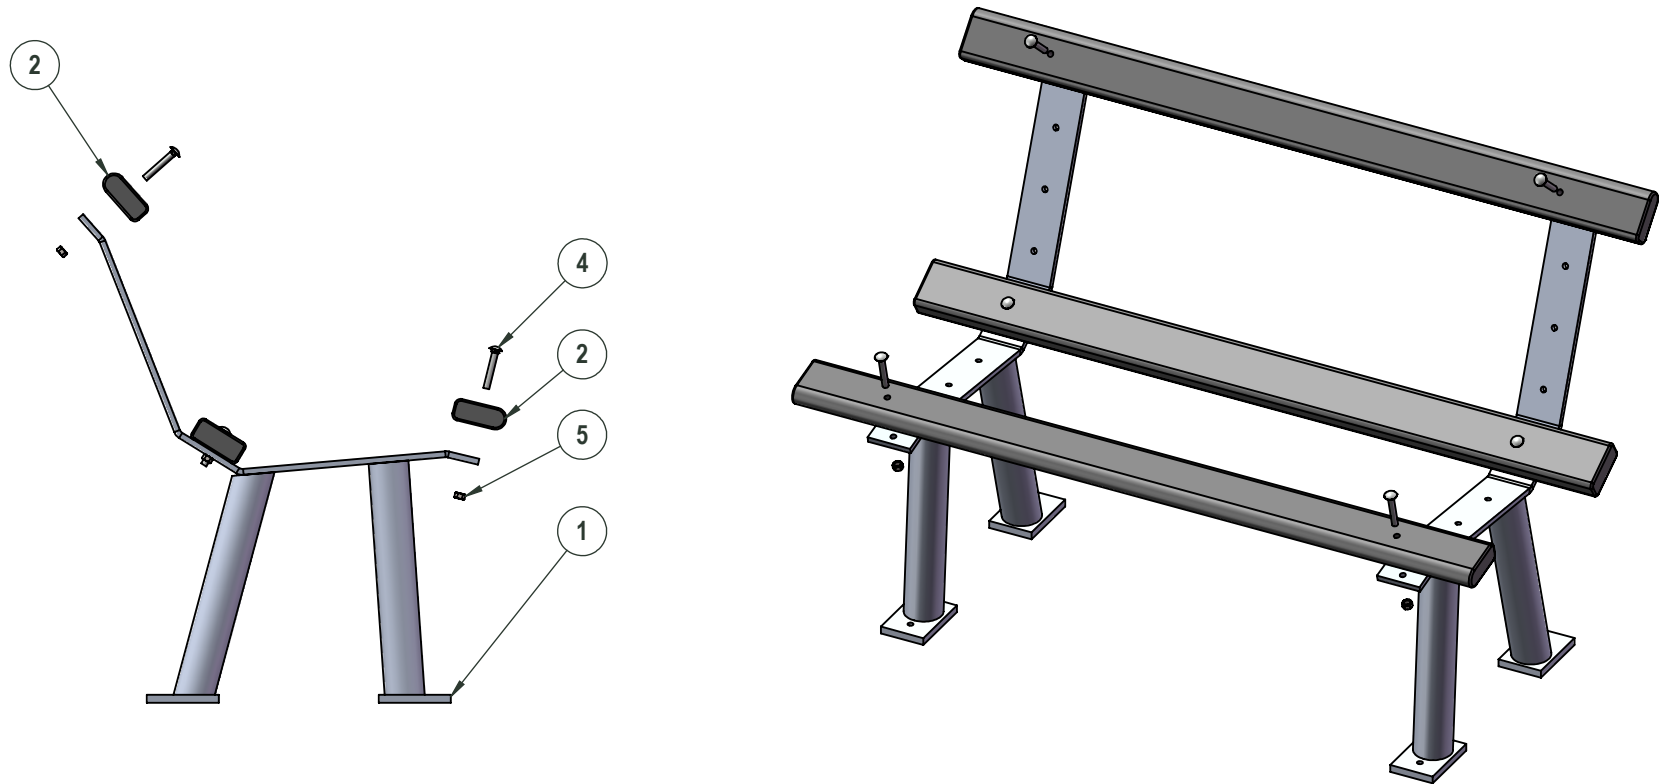

Seat the carriage bolts into the recycled planks, lightly tapping with a rubber mallet. Insert the bullnose slats on the top and bottom of the legs, fasten slats to the legs, do not overtighten.

## STEP 3

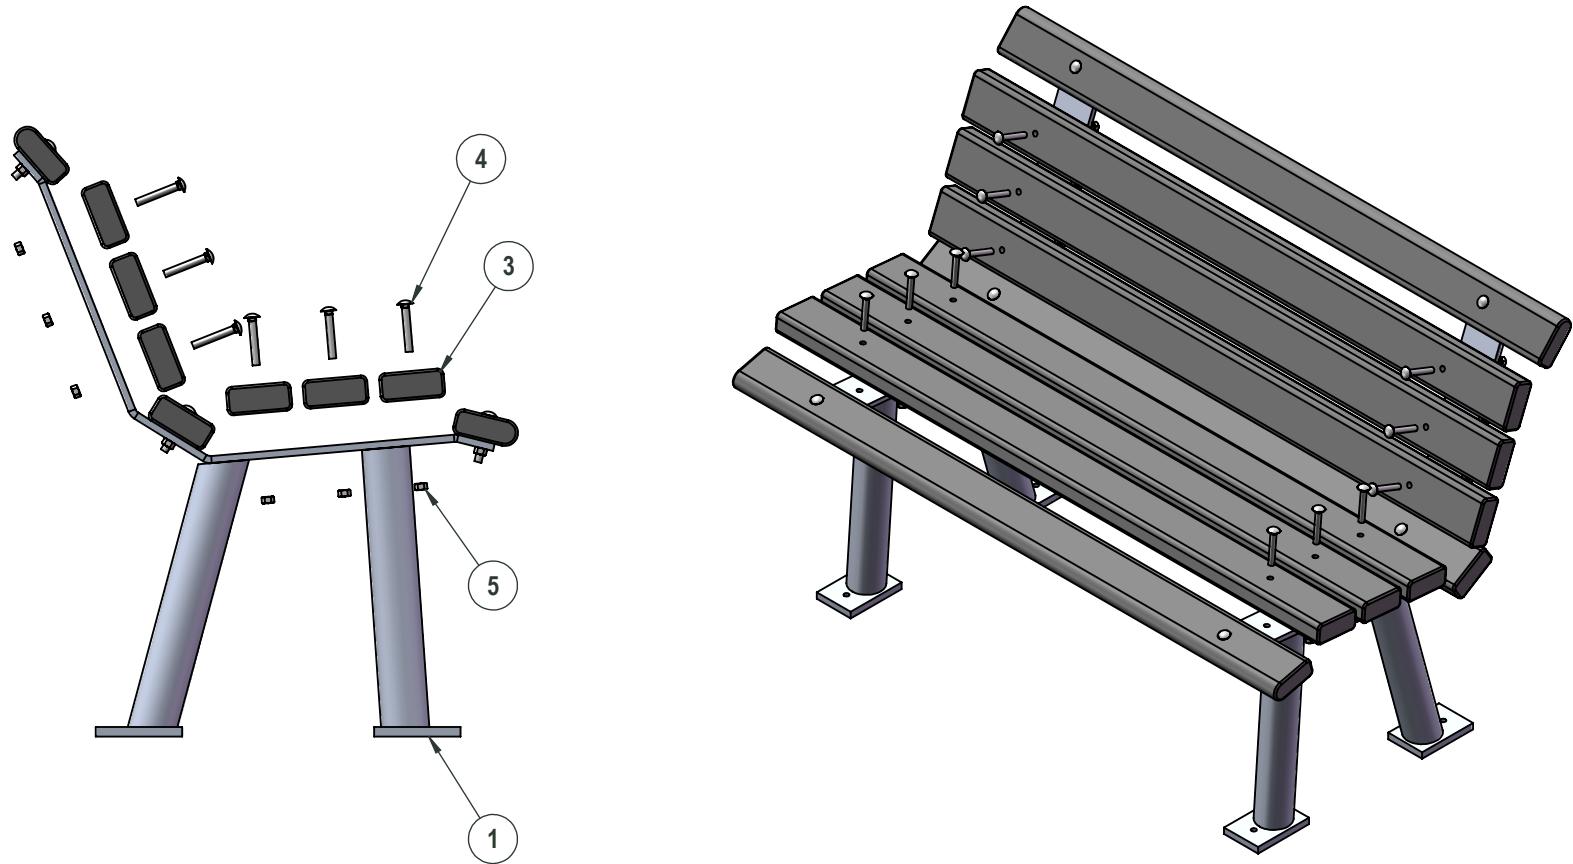

Seat the carriage bolts into the recycled planks, lightly tapping with a rubber mallet. Insert the remaining planks as shown, fasten slats to the legs, do not overtighten.

Use the drill and 3/8 drill bit to drill a hole in the concrete to install the wedge anchor bolts.

OVERALL DIMENSIONS

