


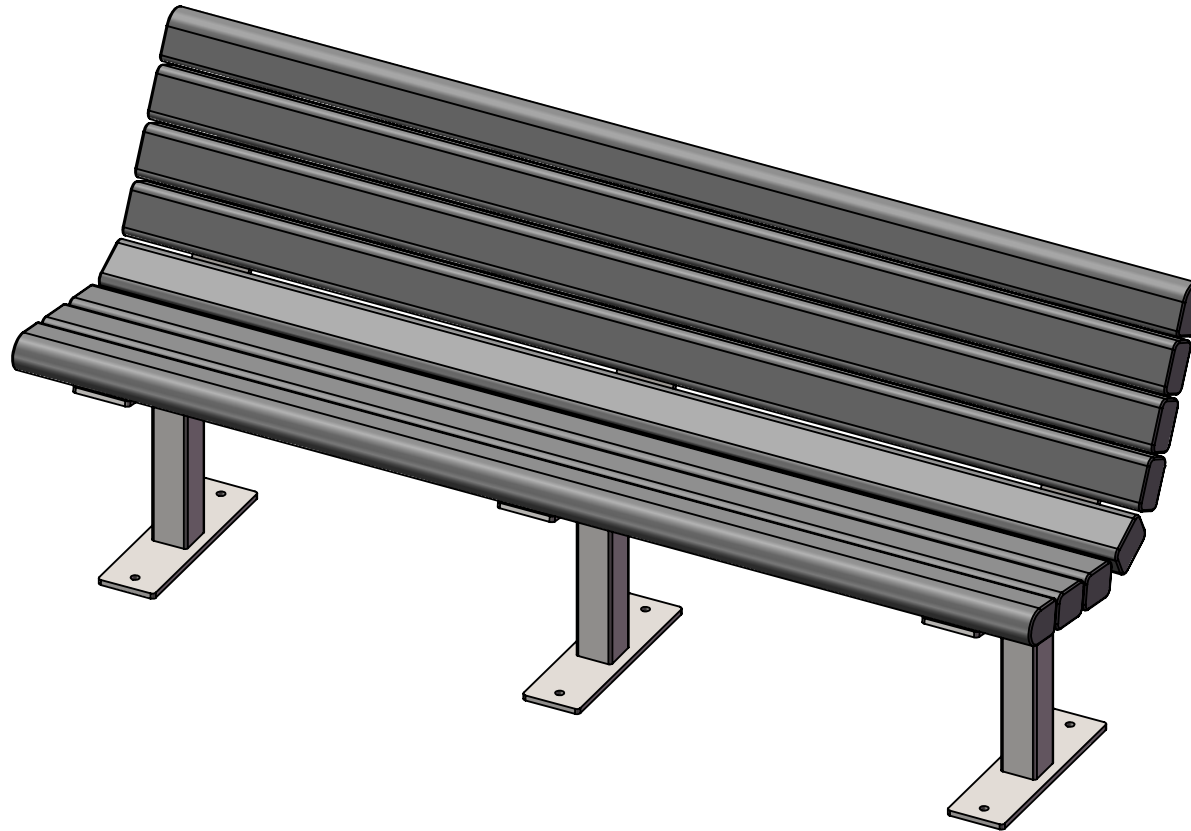

Model # PB 6__BFJAM


SAFETY WARNINGS & EQUIPMENT INSPECTION

- Owners and installers please note these safety warnings and make use of this checklist on a regular basis.
- Follow installation instructions when erecting equipment.
- Ground surfaces around equipment should be restored as needed. Concrete footings should never be exposed. Surface depth should comply with ASTM and CPSC specifications.
- Check for and repair damage caused by wear or vandalism, a major factor in injury causing situations.
- All protruding bolts should be covered or cut off and finished smooth. Sharp edges on pipes should be capped or removed. Check for bent, broken, or severely worn pipe, and replace.
- All equipment should be free of rust and repainted whenever necessary to deter rusting.
- We provide our customers with layout sheets and installation instructions. Please keep on file the specifications sheet that contains the listing of every part used.
- Never add components not intended for use with this product.
- Regular maintenance is necessary in this and all park and recreational equipment to insure the safety of the user.
- Note: Proper maintenance of equipment requires regular tightening of all bolts, nuts, and setscrews.
- Note: Regular checking of all parts, castings, etc. should be made. If a part is broken or worn, it should be replaced immediately.
- Check to be sure all fittings are tight and that bars and pipes do not move.
- Frog Furnishings products are durable and designed to last a lifetime, like most things that spend the majority of time outdoors, sometimes they need a little cleaning. In most cases, all a Frog product requires is mild dish soap, a bucket of warm water and a clean cloth. Apply the soapy mixture to scrub away the dirt and then rinse with water. If you have some stubborn dirt down in the grooves and divots, mix 1 part bleach to 2 parts water, apply with your clean cloth, scrub with a soft bristle brush if needed and then rinse.


HARDWARE



1/4" 2-1/2" Lag Bolt

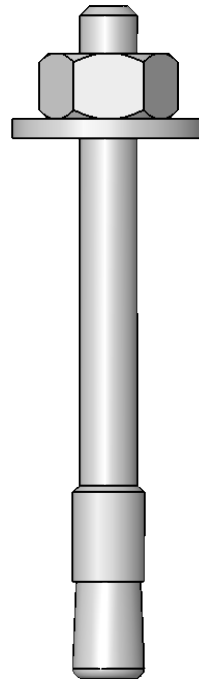


3/8" 3-1/2"
Wedge Anchor Bolt

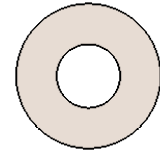


21/64" ID X 3/4" OD Washer


TOOLS REQUIRED

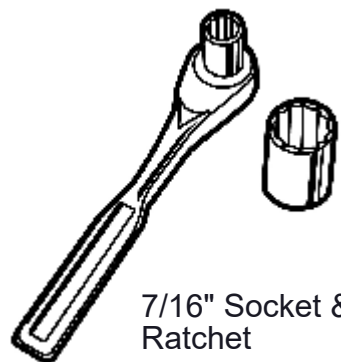


7/16" Socket &
Ratchet

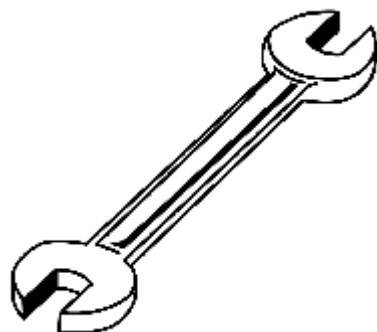


7/16" Wrench

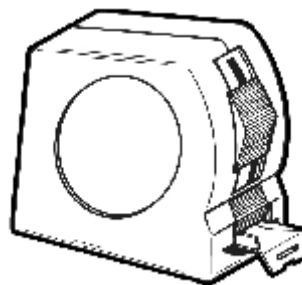


Tape Measure

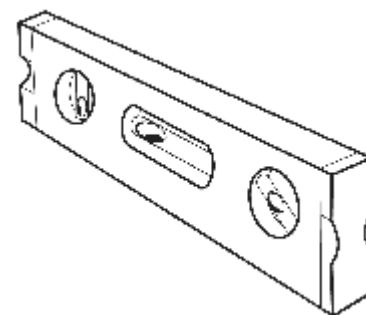

Level

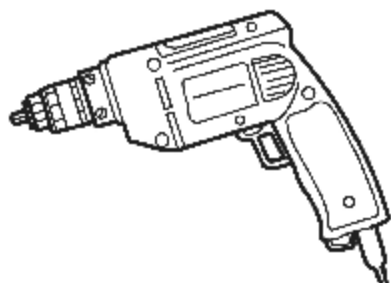

Drill

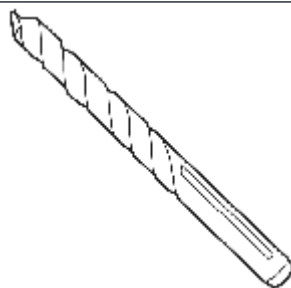

3/8 Drill Bit

PRODUCT SPECIFICATIONS

PB 6__BFJAM 6' JAMESON SURFACE MOUNT BENCH


Planks: 3" x 4" Recycled Plastic.

Legs: Attachment Plate is 3/8" thick. 2-1/2" x 11ga structural steel tube. Surface Mount Plates are 4" Wide x 14" Long x 3/8" Thick.

Hardware: Stainless Steel Hardware with Nylon Washer.


Dimensions: Outside to outside dimension is 23-1/16" x 72".

COMPONENTS

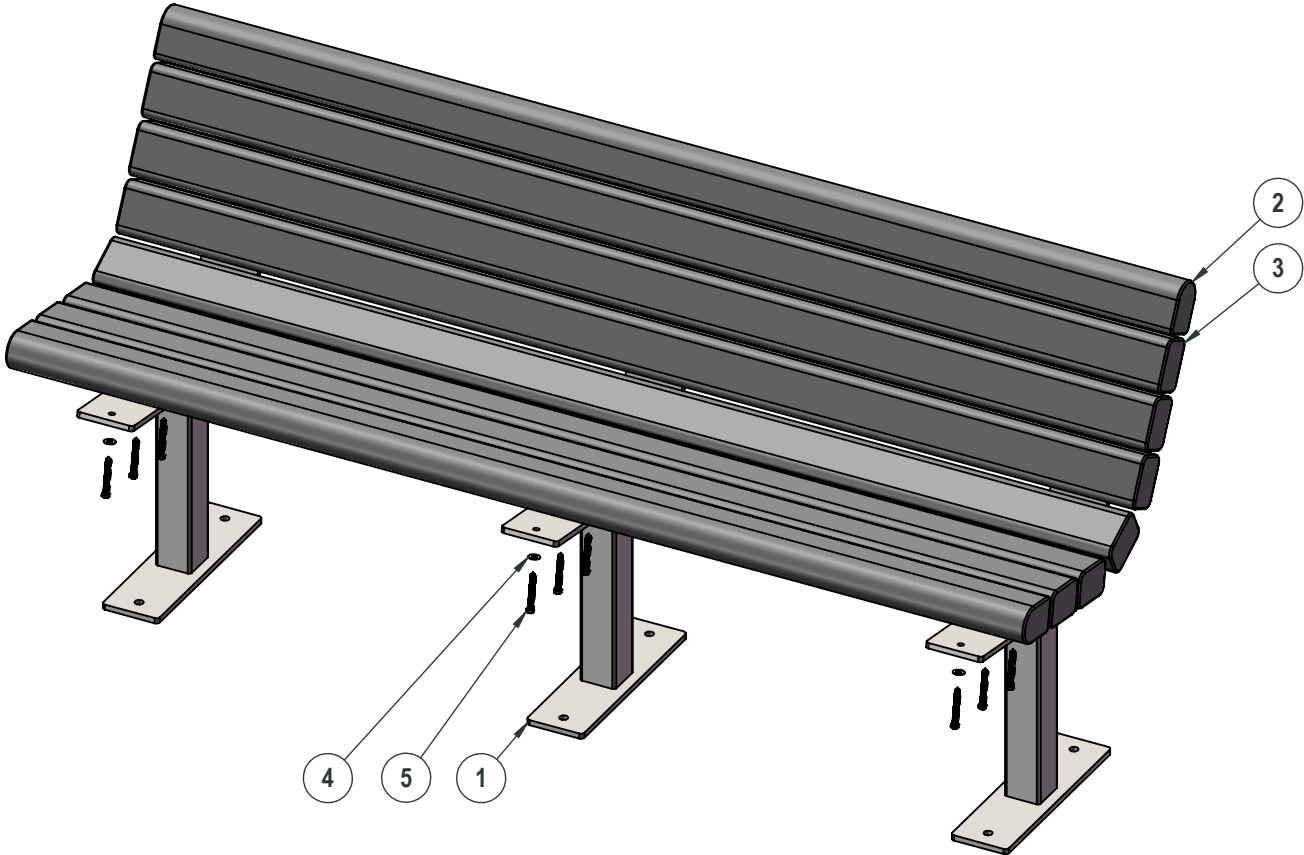


ITEM NO.	DESCRIPTION	Qty.
1	contour bench leg SM	3
2	6' 3x4 bullnose bench plank	2
3	6' 3x4 bench plank	6
4	21/64" ID x 3/4" OD nylon washer	24
5	1/4" x 2-1/2" lag bolt, SS	24
6	3/8" x 3-1/2" wedge anchor bolt, SS, set of 4	2

STEP 1

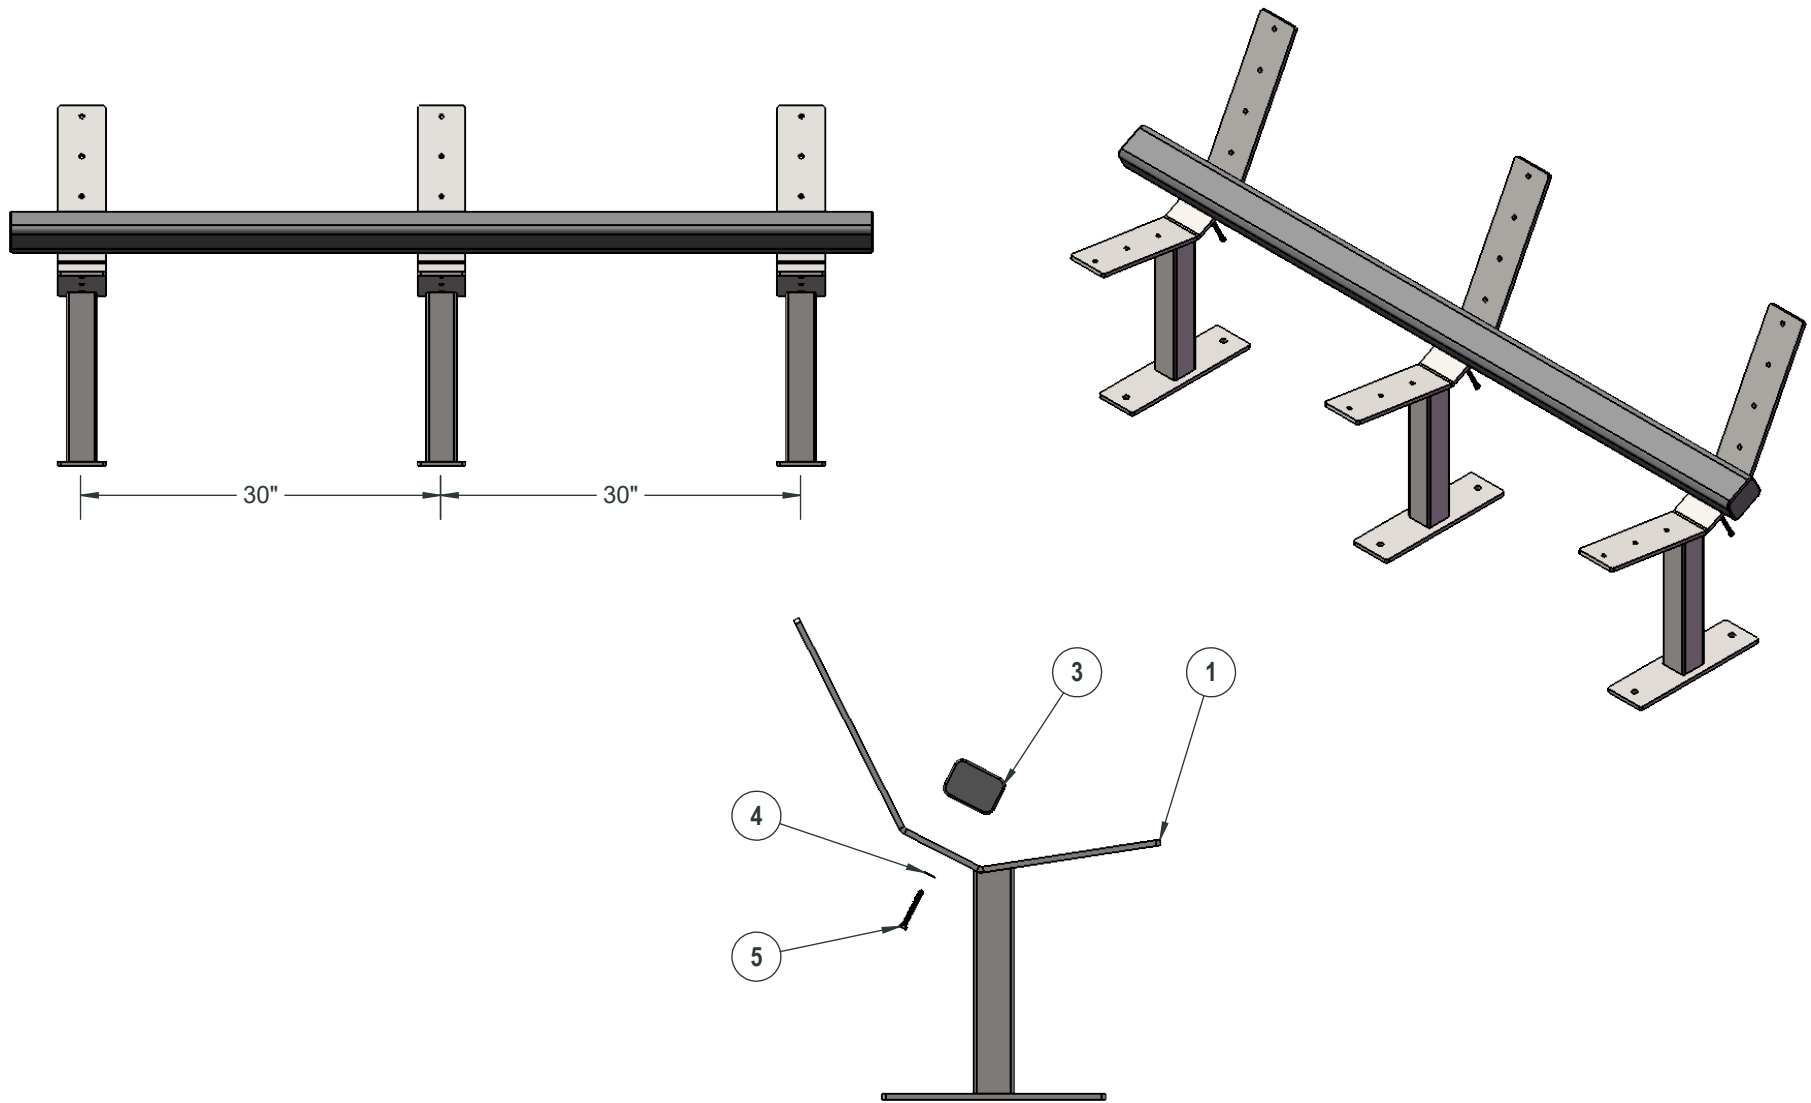


Fasten the slat to the center of the legs using specified hardware.

STEP 2

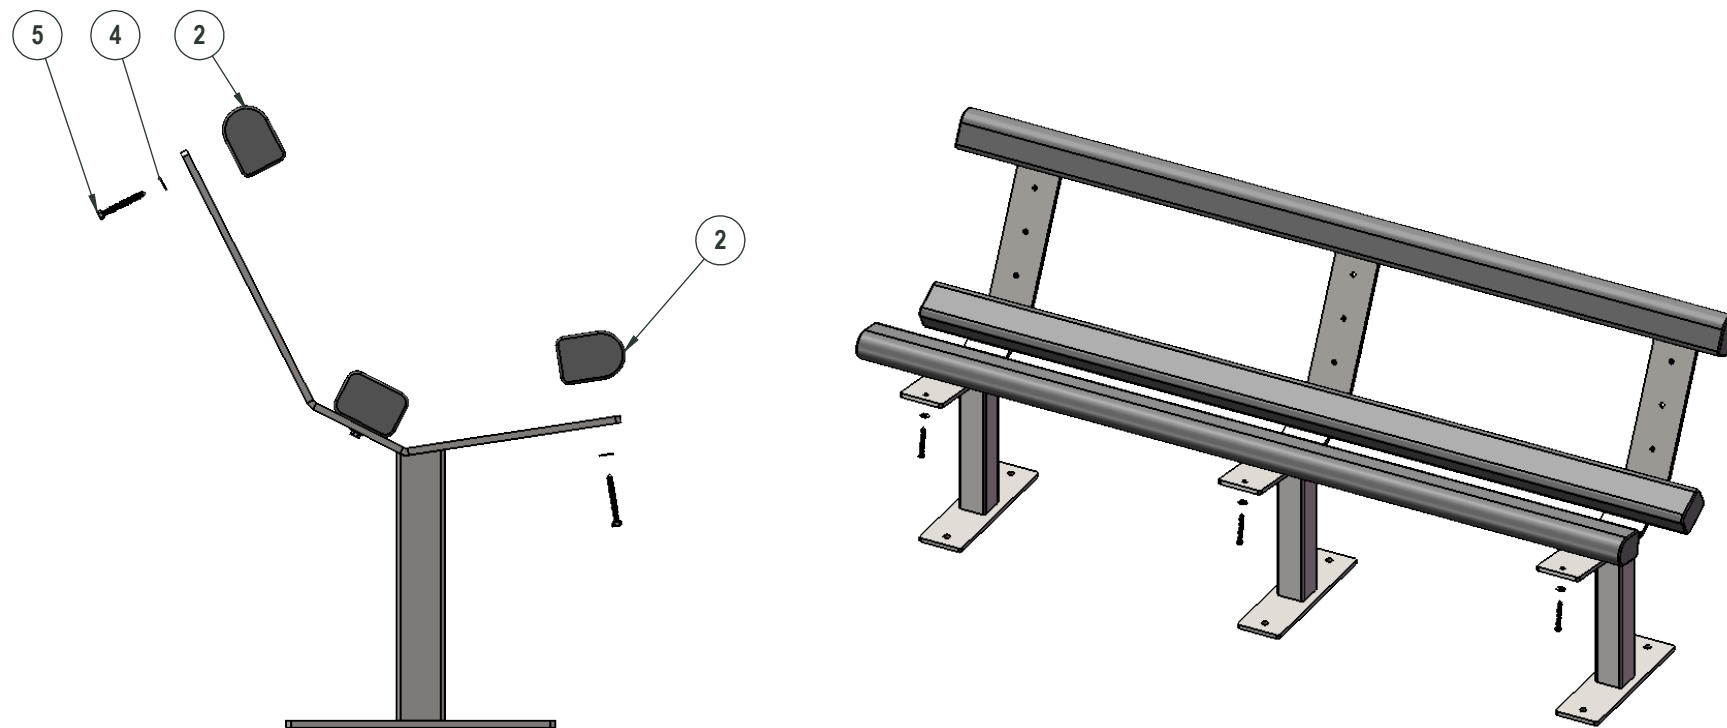

Fasten the bullnose slats to the top and bottom of the legs using specified hardware.

STEP 3

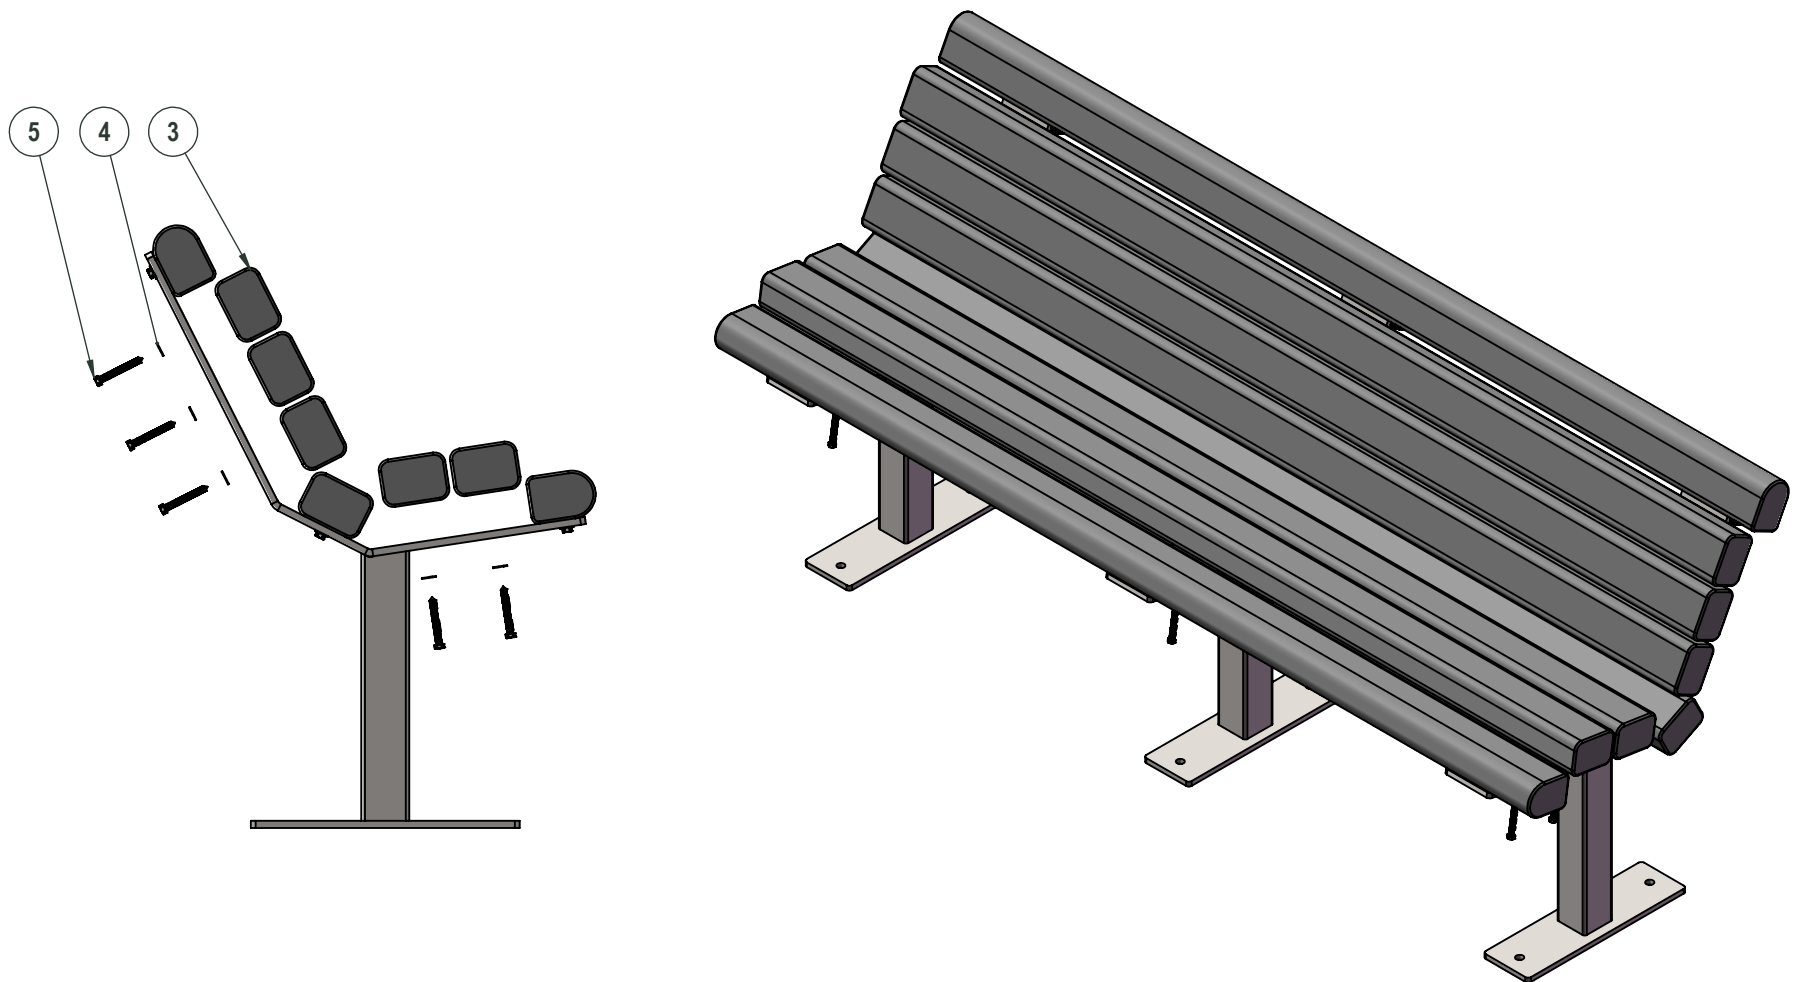

Fasten the remaining slats to the legs using specified hardware.

Use the drill and 3/8 drill bit to drill a hole in the concrete to install the wedge anchor bolts.

OVERALL DIMENSIONS

