


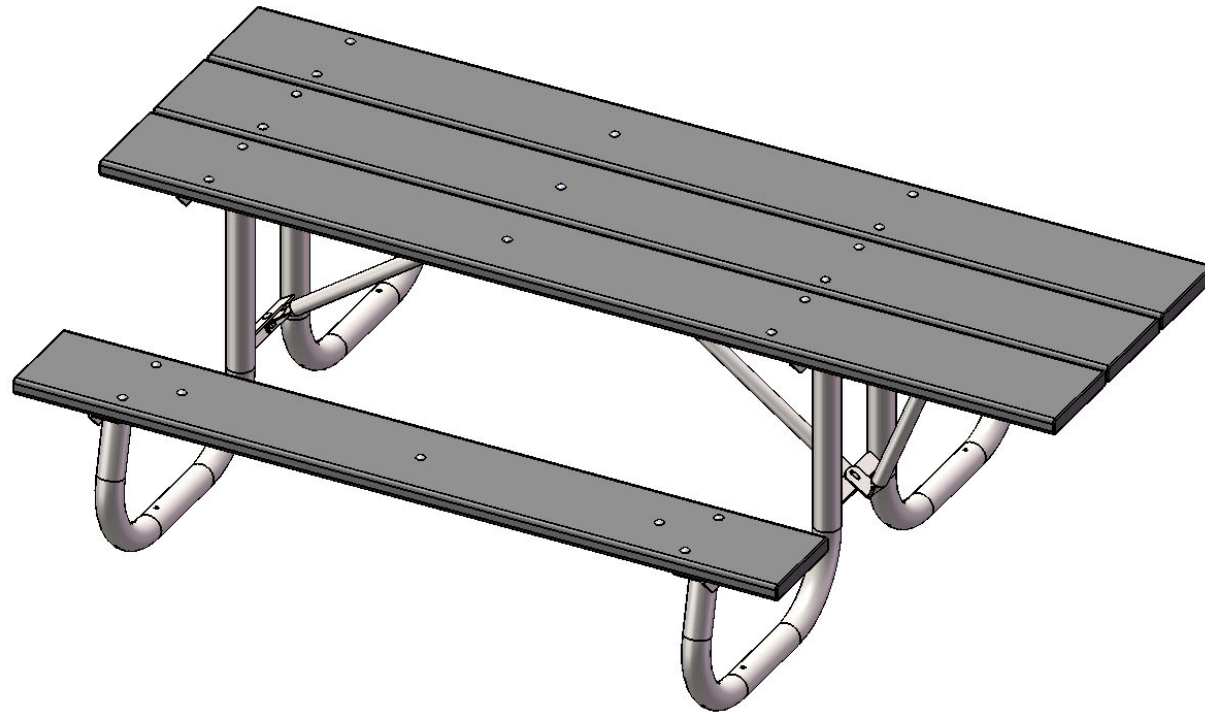

Model # PB 6___GCPICADA




Scan me for an
instructional
assembly video!




SAFETY WARNINGS & EQUIPMENT INSPECTION

- Owners and installers please note these safety warnings and make use of this checklist on a regular basis.
- Follow installation instructions when erecting equipment.
- Ground surfaces around equipment should be restored as needed. Concrete footings should never be exposed. Surface depth should comply with ASTM and CPSC specifications.
- Check for and repair damage caused by wear or vandalism, a major factor in injury causing situations.
- All protruding bolts should be covered or cut off and finished smooth. Sharp edges on pipes should be capped or removed. Check for bent, broken, or severely worn pipe, and replace.
- All equipment should be free of rust and repainted whenever necessary to deter rusting.
- We provide our customers with layout sheets and installation instructions. Please keep on file the specifications sheet that contains the listing of every part used.
- Never add components not intended for use with this product.
- Regular maintenance is necessary in this and all park and recreational equipment to insure the safety of the user.
- Note: Proper maintenance of equipment requires regular tightening of all bolts, nuts, and setscrews.
- Note: Regular checking of all parts, castings, etc. should be made. If a part is broken or worn, it should be replaced immediately.
- Check to be sure all fittings are tight and that bars and pipes do not move.
- Frog Furnishings products are durable and designed to last a lifetime, like most things that spend the majority of time outdoors, sometimes they need a little cleaning. In most cases, all a Frog product requires is mild dish soap, a bucket of warm water and a clean cloth. Apply the soapy mixture to scrub away the dirt and then rinse with water. If you have some stubborn dirt down in the grooves and divots, mix 1 part bleach to 2 parts water, apply with your clean cloth, scrub with a soft bristle brush if needed and then rinse.


HARDWARE

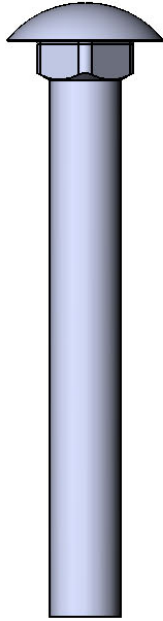

3/8" x 3" Carriage Bolt

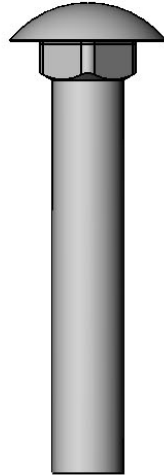


3/8" x 2-1/4" Carriage Bolt

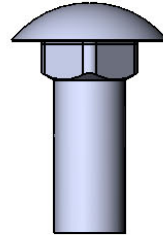


3/8" x 1" Carriage Bolt



5/16" - 1-1/2" Lag Bolt

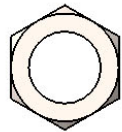


3/8" Hex Nut

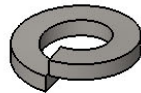

3/8" Lock Washer


TOOLS REQUIRED

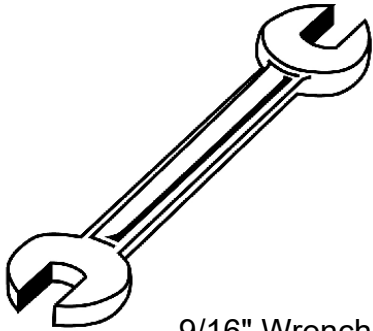


9/16" Wrench




9/16" Socket Wrench

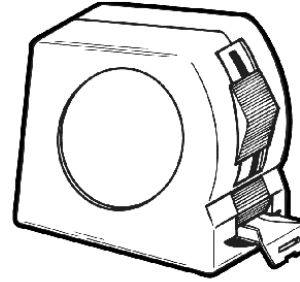


Tape Measure

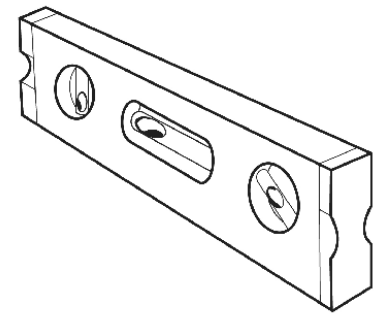


Level

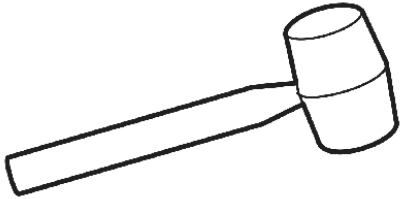

Rubber Mallet

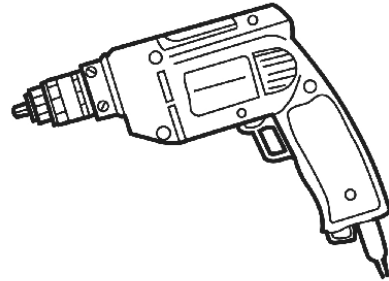

Drill

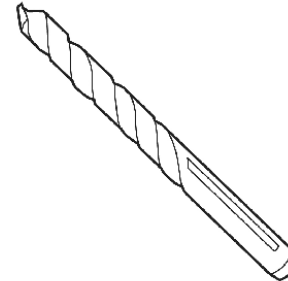

1/4" Drill Bit

PRODUCT SPECIFICATIONS

PB 6___GCPICADA 6' Galvanized ADA Picnic Table

Top & Seats: 2" x 10" recycled plastic planks.


Frame: 2 -3/8" O.D. x 12 gauge pre-galvanized structural steel tubing. Brace attachment points 1-1/2" x 1-1/2" x 3/16" steel angle. Seat and top mounting points are 3" x 2" x 3/16" angle. All tabletop and seat mounting brackets shall be precision punched. Legs are bent over a mandrel through the bend radius producing a wrinkle free bend. All electrically MIG welded. Cross braces 1 5/16" O.D. x 14 gauge pregalvanized structural steel tubing.

Frame Coating: Electrostatic powder coated application oven cured, or hot dipped galvanized after fabrication.

Hardware: Stainless Steel plated fasteners.


Dimensions: 6' Galvanized ADA Picnic Table design. Top is 28-9/16" wide x 90" long and is 30-3/4" high. Seats are 9-5/16" wide x 72" long and 17-3/4" high. Outside to outside dimension is 59-7/16" x 90".

COMPONENTS

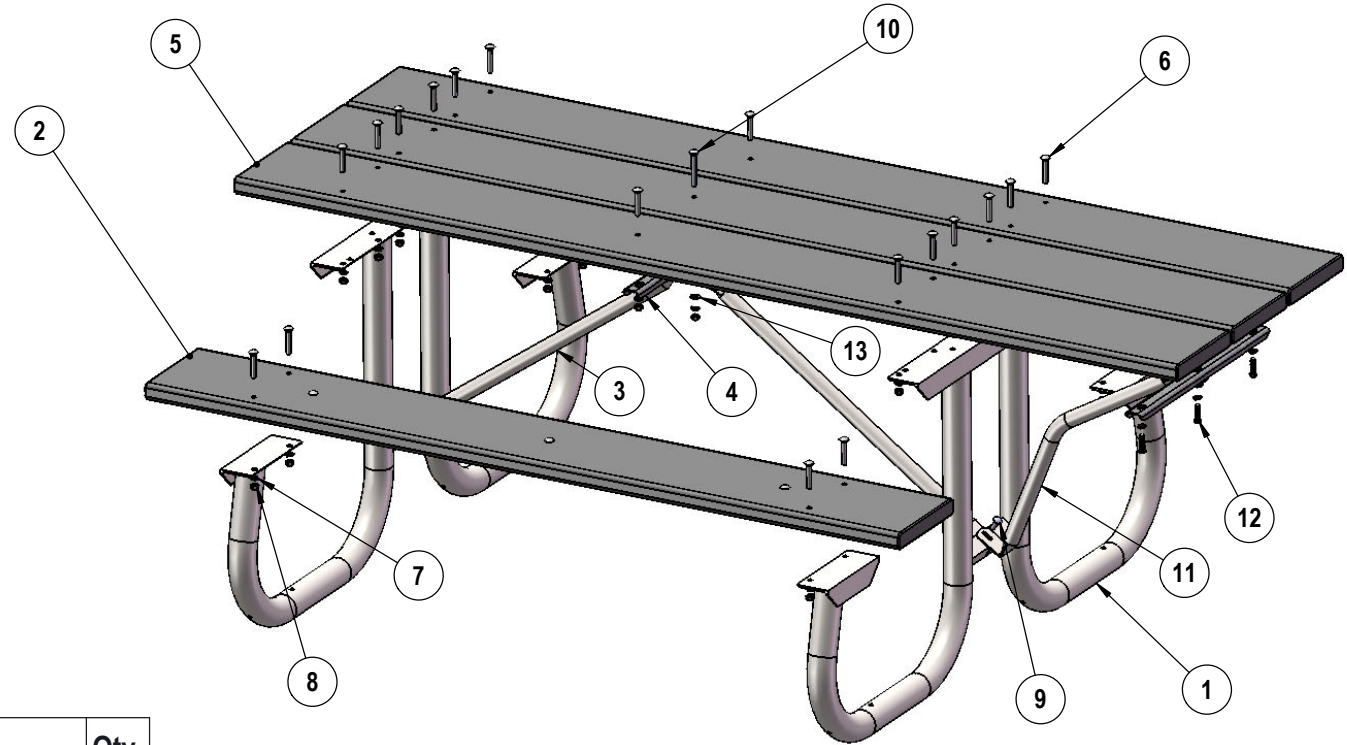

ITEM NO.	DESCRIPTION	Qty.
1	Frog 238 leg	2
2	6' 2x10 seat with support angle	2
3	Frog 238 leg brace	2
4	center c channel 3 slot (new) (1-1/2" sq x 11ga rectangular tube)	3
5	ADA 2x10 top plank	3
6	3/8" x 2-1/4" Carriage Bolt (SS)	24
7	3/8" lock washer SS	31
8	3/8" Hex Nut (SS)	28
9	3/8" x 1" Carriage Bolt (SS)	2
10	3/8" x 3" Carriage Bolt (SS)	2
11	Frog 238 leg HS brace	1
12	5/16" x 1-1/2" lag bolt, SS	3
13	3/8" flat washer SS	4

STEP 1

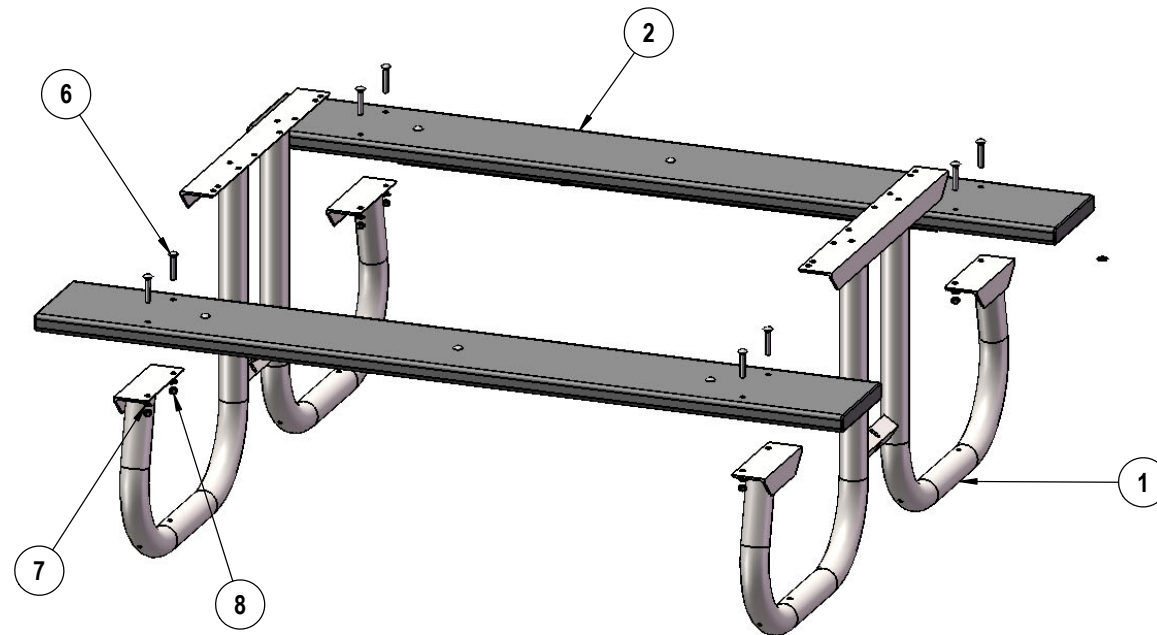


Lay the seat slats on the mounting brackets of the legs, insert the 2 1/4" carriage bolts by lightly tapping with a rubber mallet and seat the square head of the carriage bolt into the recycled plastic. Attach the lock washers and hex nuts.

NOTE: Keep hardware loose until table is fully assembled.

NOTE: Seating the square head of the carriage bolts into the recycled plastic helps prevent the bolt from spinning during assembly.

STEP 2


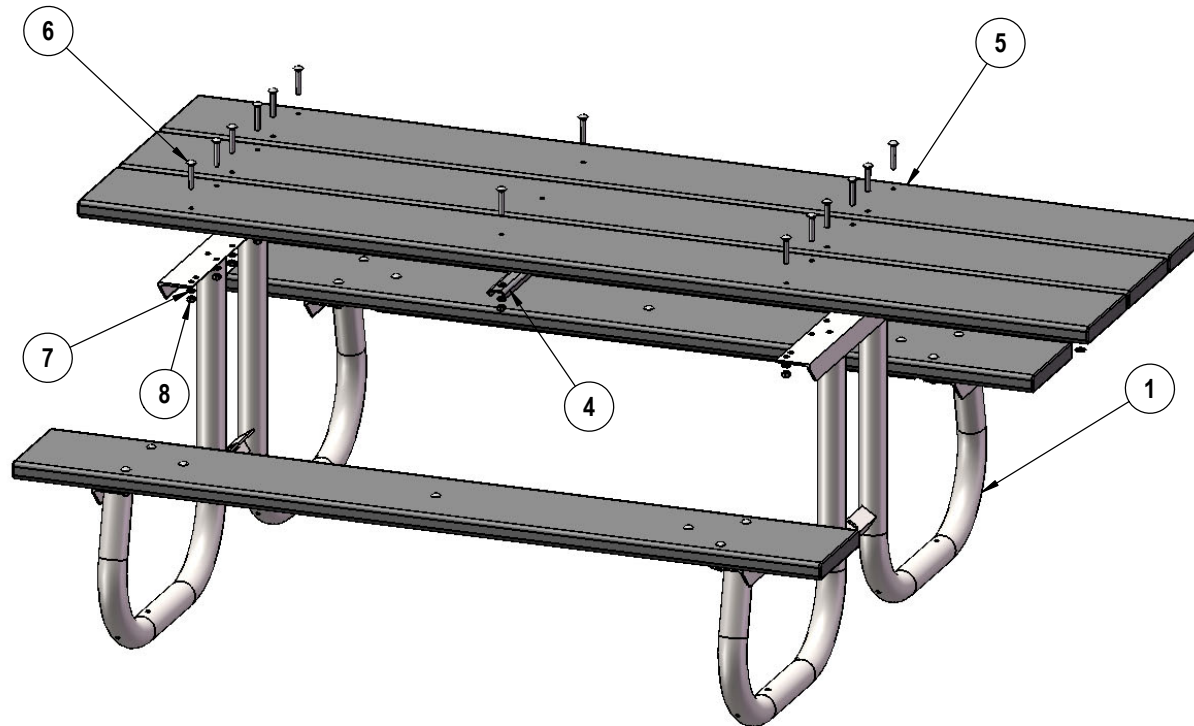


Lay the table slats on the mounting brackets of the legs, insert the 2 1/4" carriage bolts by lightly tapping with a rubber mallet and seat the square head of the carriage bolt into the recycled plastic. Attach the lock washers and hex nuts. Add the C Channel and insert 2 1/4" bolts, attach the lock washers and hex nuts.

NOTE: Keep hardware loose until table is fully assembled.

NOTE: Seating the square head of the carriage bolts into the recycled plastic helps prevent the bolt from spinning during assembly.


STEP 3

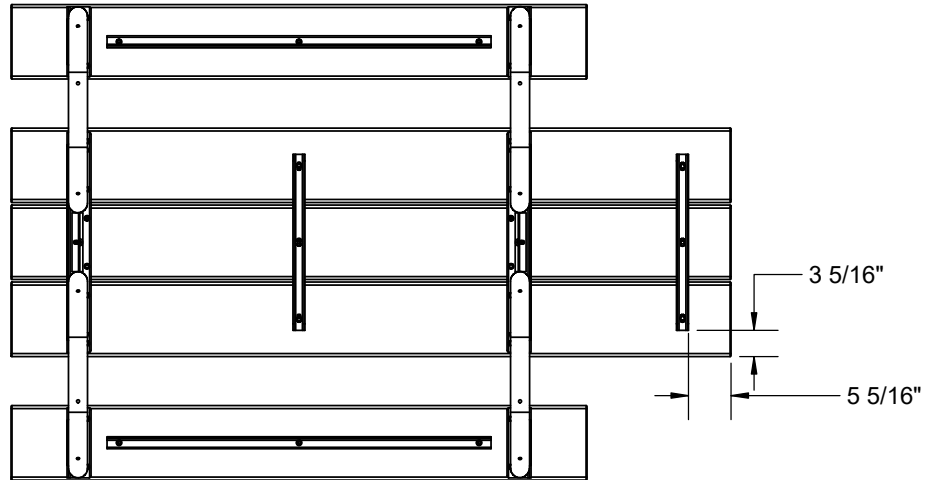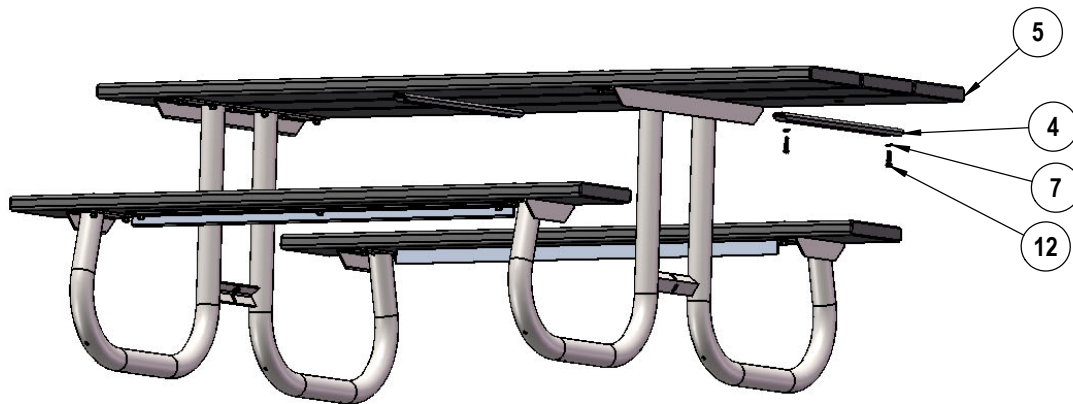

Use the given dimensions to mark lag bolt locations and drill a $\frac{1}{4}"$ pilot hole 1" deep, then insert washers and lags bolts.

NOTE: Keep hardware loose until table is fully assembled.

STEP 4

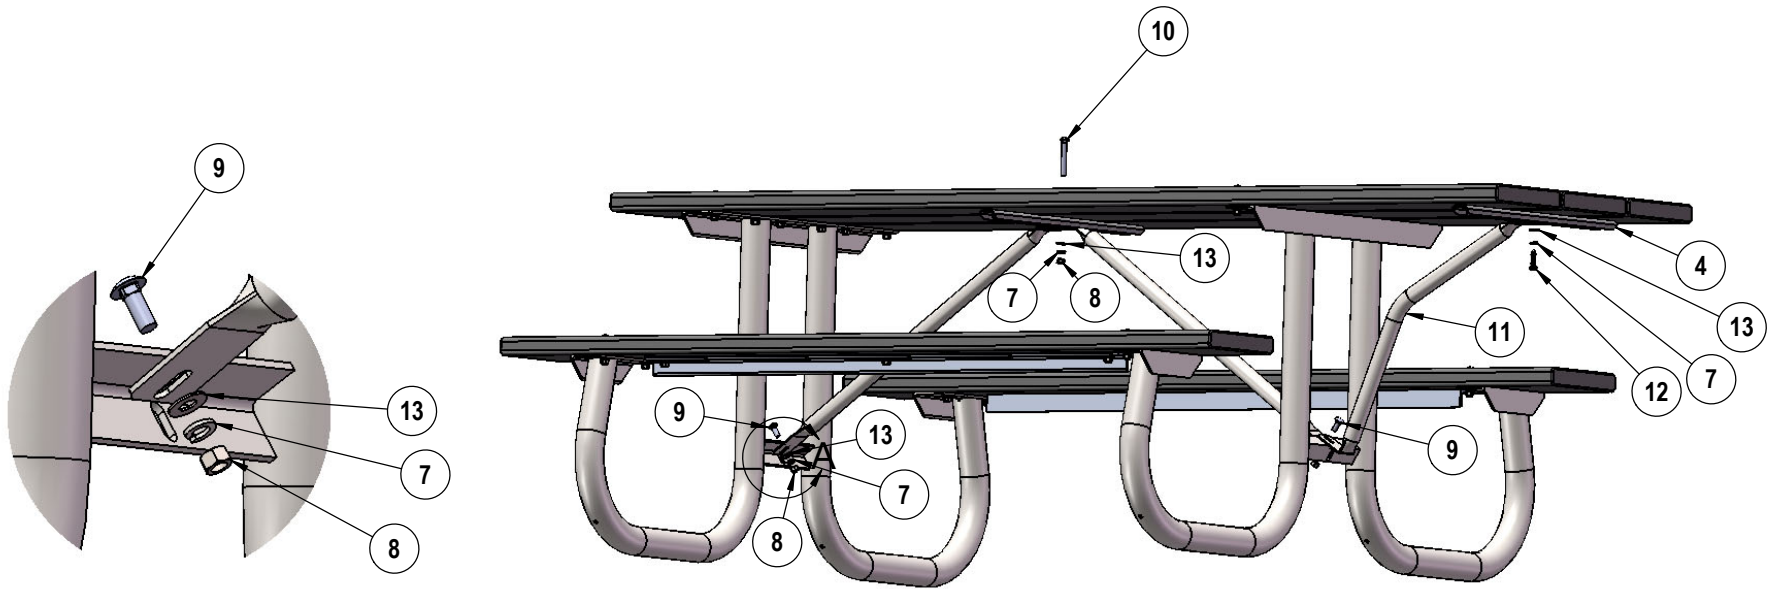

DETAIL A
SCALE 1 : 4

Insert the 3" carriage bolt through the table slat, C channel and braces (between the legs), attach the flat washer, lock washer and hex nut. Insert the 1" carriage bolts through the lower table support brackets and braces, attach the flat washers, lock washers and hex nuts. Insert a lock washer and lag nut through the C channel on the end of the table.

NOTE: Tighten all hardware.

OVERALL DIMENSIONS

