


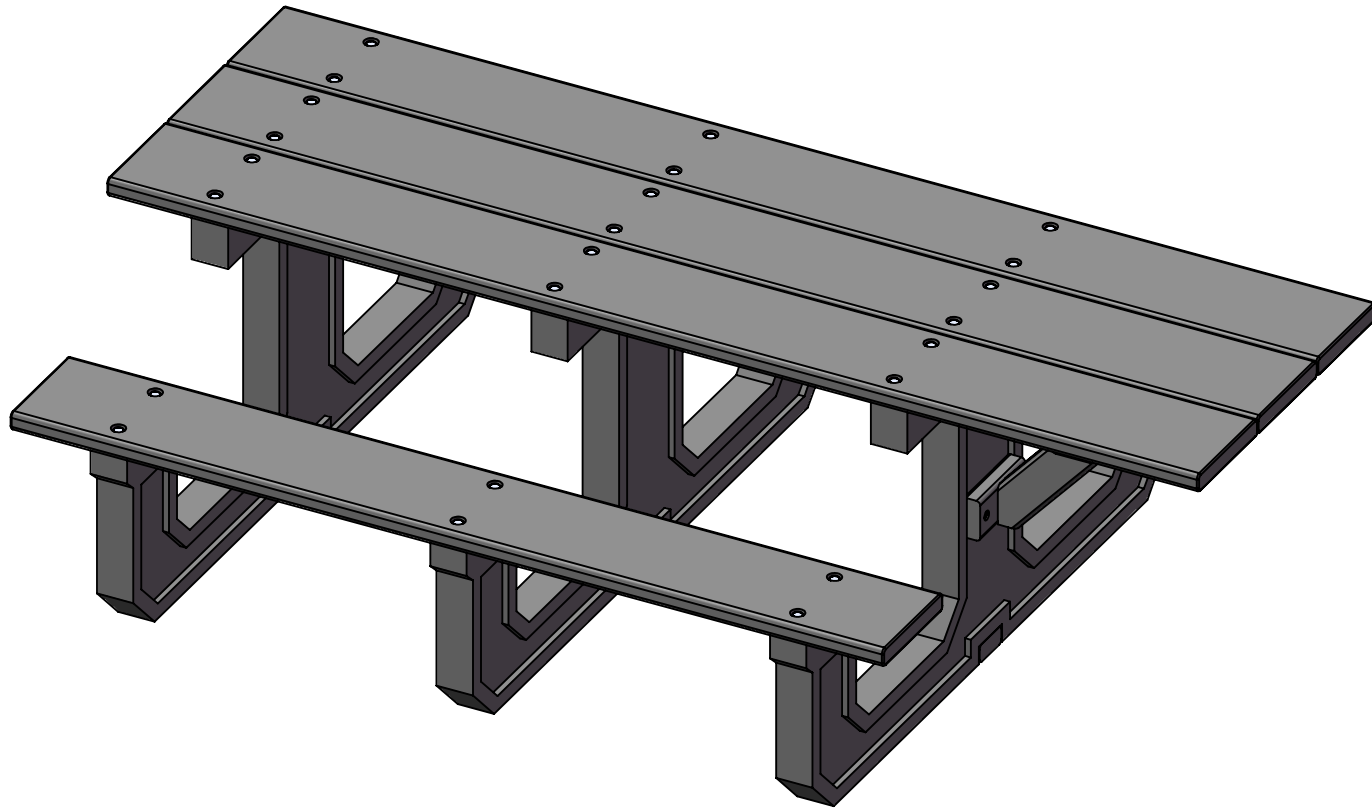


Model # PB 6\_\_PARKPADA

## **SAFETY WARNINGS & EQUIPMENT INSPECTION**

- Owners and installers please note these safety warnings and make use of this checklist on a regular basis.
- Follow installation instructions when erecting equipment.
- Ground surfaces around equipment should be restored as needed. Concrete footings should never be exposed. Surface depth should comply with ASTM and CPSC specifications.
- Check for and repair damage caused by wear or vandalism, a major factor in injury causing situations.
- All protruding bolts should be covered or cut off and finished smooth. Sharp edges on pipes should be capped or removed. Check for bent, broken, or severely worn pipe, and replace.
- All equipment should be free of rust and repainted whenever necessary to deter rusting.
- We provide our customers with layout sheets and installation instructions. Please keep on file the specifications sheet that contains the listing of every part used.
- Never add components not intended for use with this product.
- Regular maintenance is necessary in this and all park and recreational equipment to insure the safety of the user.
- Note: Proper maintenance of equipment requires regular tightening of all bolts, nuts, and setscrews.
- Note: Regular checking of all parts, castings, etc. should be made. If a part is broken or worn, it should be replaced immediately.
- Check to be sure all fittings are tight and that bars and pipes do not move.
- Frog Furnishings products are durable and designed to last a lifetime, like most things that spend the majority of time outdoors, sometimes they need a little cleaning. In most cases, all a Frog product requires is mild dish soap, a bucket of warm water and a clean cloth. Apply the soapy mixture to scrub away the dirt and then rinse with water. If you have some stubborn dirt down in the grooves and divots, mix 1 part bleach to 2 parts water, apply with your clean cloth, scrub with a soft bristle brush if needed and then rinse.

# HARDWARE

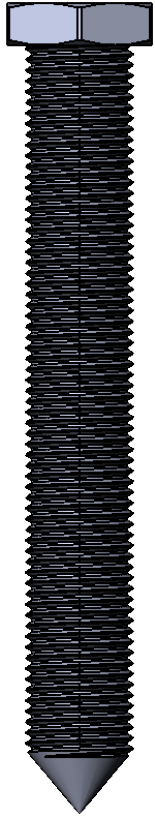


1/2" x 4"  
Hex Lag Bolt



1/4" x 3 1/2"  
Hex Lag Bolt




1/4" x 2"  
Hex Lag Bolt

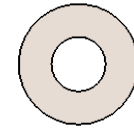


1/4" Flat Washer


## TOOLS REQUIRED

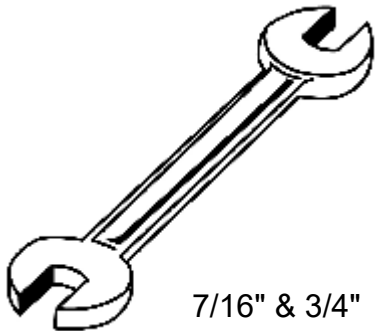


7/16" & 3/4"  
Wrench

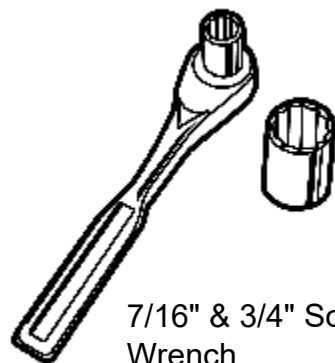


7/16" & 3/4" Socket  
Wrench

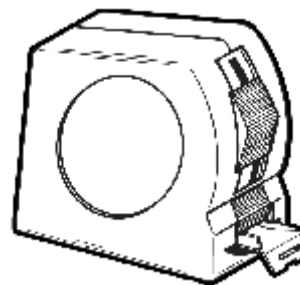

Tape Measure

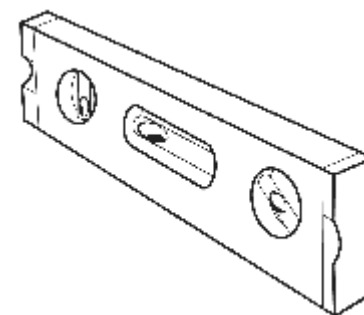

Level

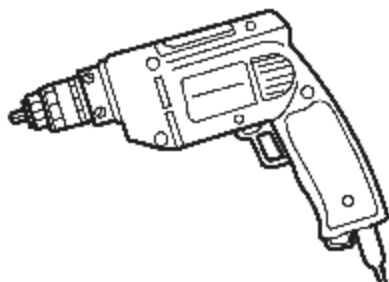

Drill



3/16" & 3/8" Drill Bit

# PRODUCT SPECIFICATIONS

## **PB 6\_\_PARKPADA 6' ADA PARK PLACE TABLE**


Top & Seats: 2" x 10" recycled plastic planks.

Legs: 3" Thick Molded Plastic Leg. Base support slat & ADA support bracket is made up of 2" x 4" recycled plastic.

Hardware: Stainless Steel fasteners.


Dimensions: 6' portable picnic table walk-through design. Top is 27-15/16" wide x 90" long and is 29 3/8" high. Seats are 9-5/16" wide x 72" long and 17 1/2" high. Outside to outside dimension is 58-1/8" x 90".

# COMPONENTS

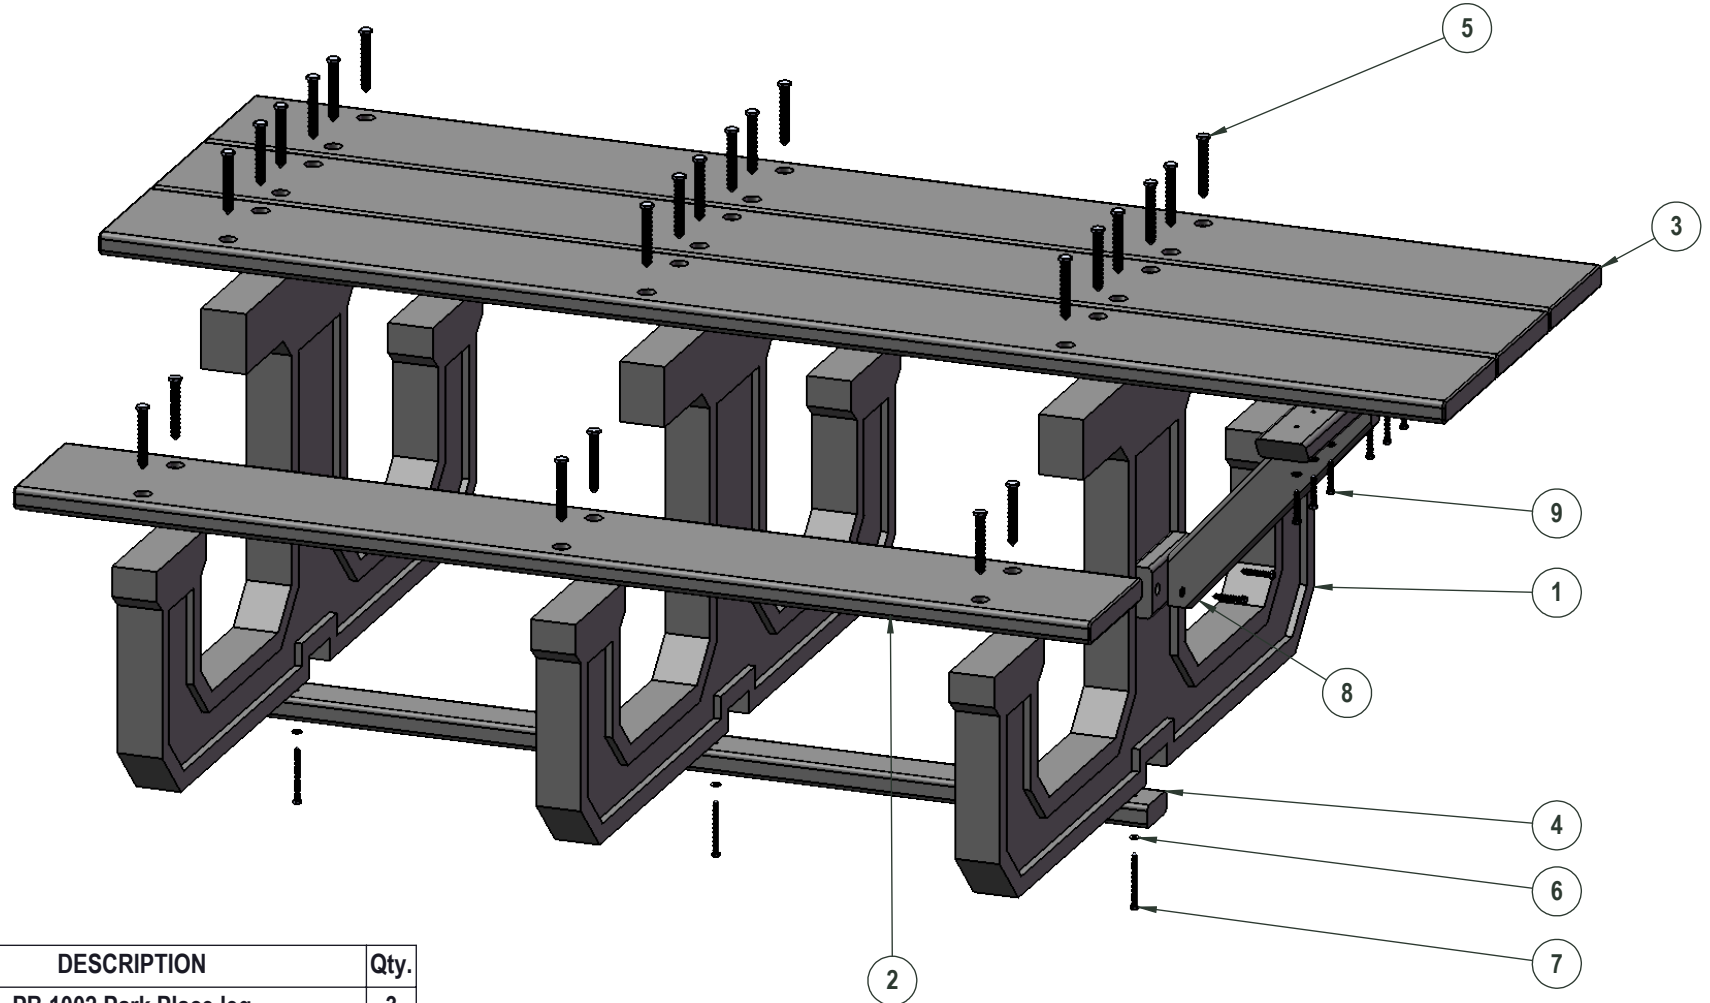



| ITEM NO. | DESCRIPTION                                 | Qty. |
|----------|---------------------------------------------|------|
| 1        | PB 1002 Park Place leg                      | 3    |
| 2        | 6' top park place                           | 2    |
| 3        | ADA top park place                          | 3    |
| 4        | 2x4x59" long park place bottom support slat | 1    |
| 5        | 1/2" x 4" lag bolt, SS                      | 30   |
| 6        | 1/4" flat washer SS                         | 11   |
| 7        | 1/4" x 3-1/2" lag bolt, SS                  | 3    |
| 8        | 6' A frame ADA support bracket              | 1    |
| 9        | 1/4" x 2" lag bolt, SS                      | 8    |

## STEP 1

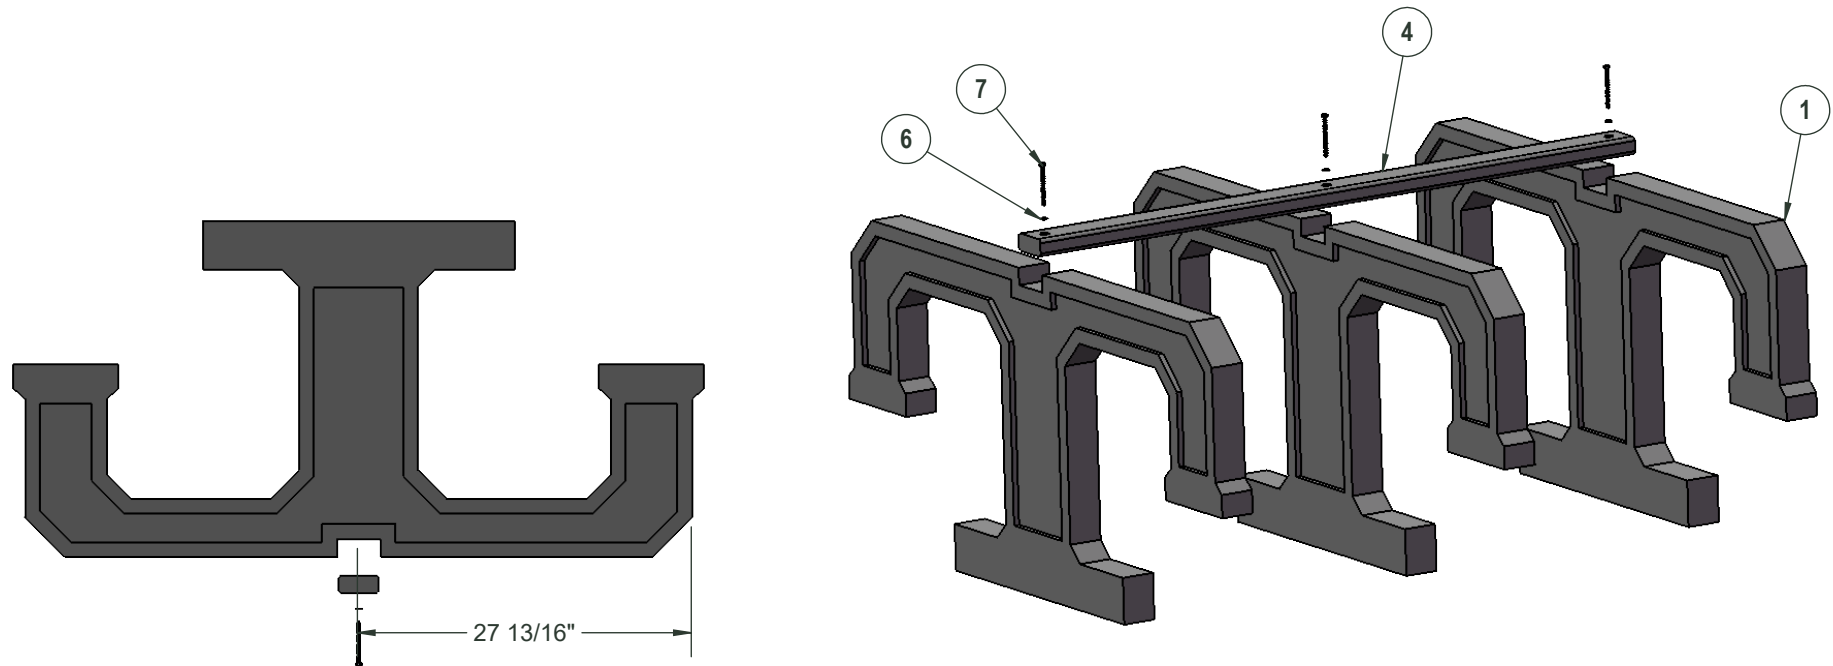



Set the three (3) bases upside down evenly spaced on a flat surface. The center base will be 28" on center from the two outer bases. Place the base support slat in the channel, ensure bases are properly aligned, square, and plumb. Drill a 3/16" starter hole and attach the base support board with 3 1/2" hex lag bolts and flat washers. .

## STEP 2

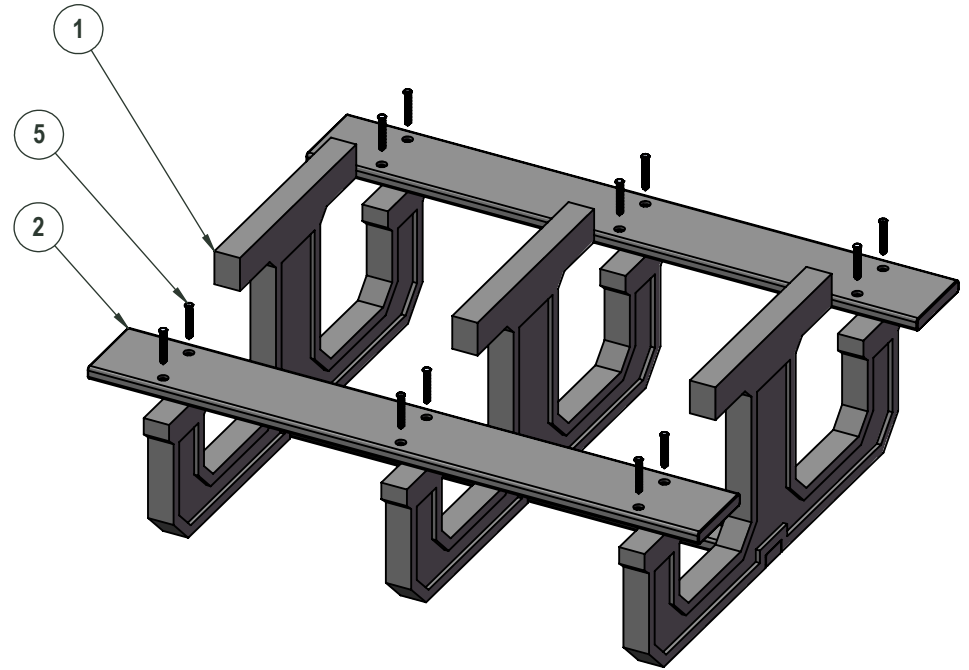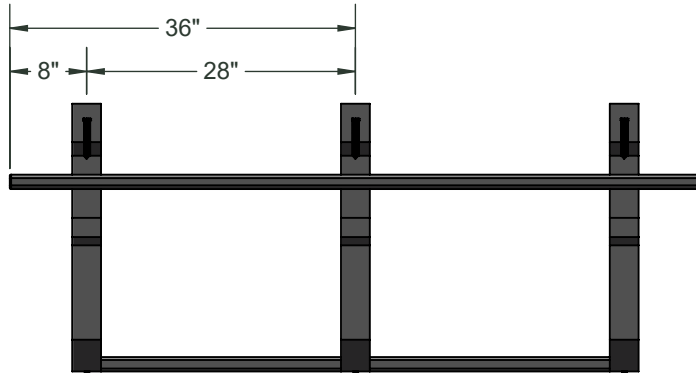


Ensure the bases remain square and plumb, place one seat slat across the bases on each side, the pre-drilled holes should align with the center of the base attachment surface. Drill a 3/8" starter hole in the base using the pre-drilled holes in the seat slats as a guide. Attach with the 4" hex lag bolts.

## STEP 3

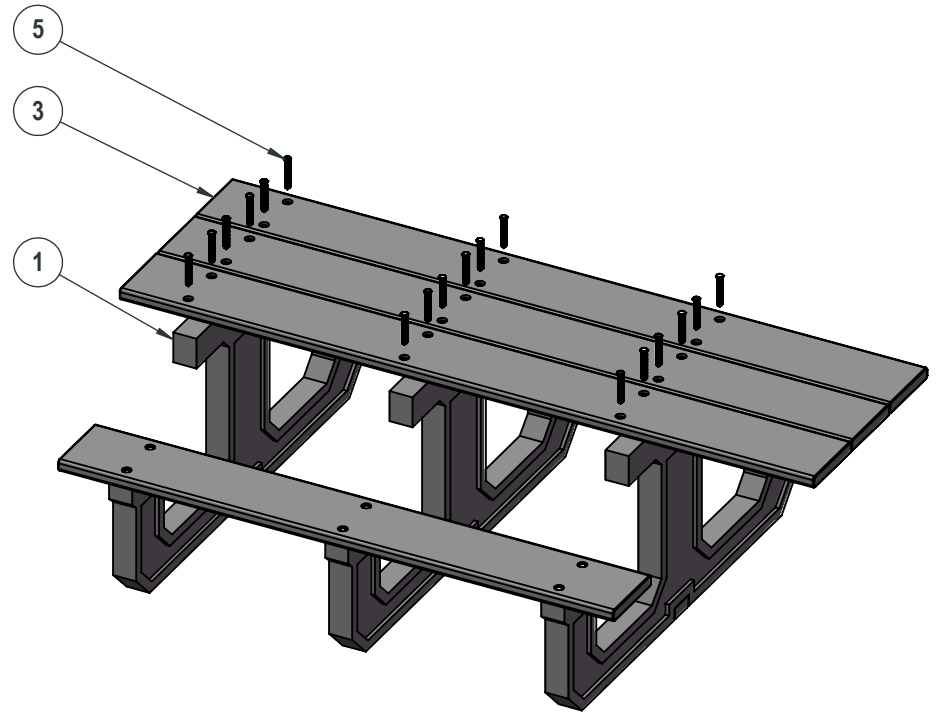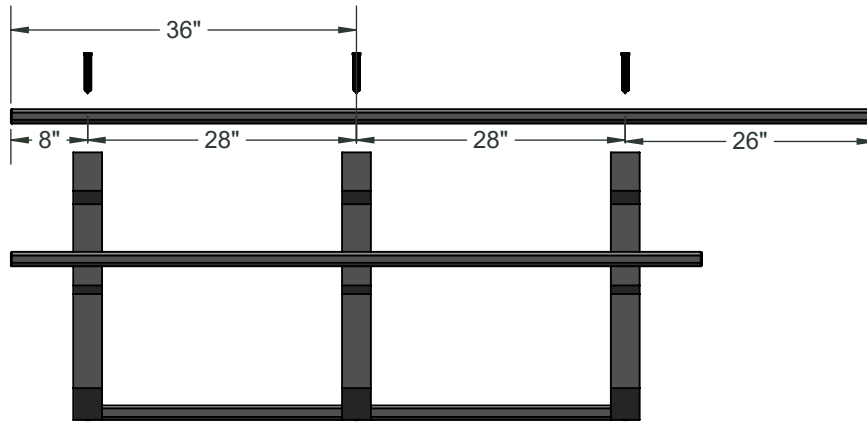

Place the table slats on top of the bases aligning the pre-drilled holes with the attachment surface of each base. Ensure they are square and centered. Drill a 3/8" starter hole in the base using the pre-drilled holes in the top slats as a guide. Attach with the 4" hex lag bolts.

## STEP 4

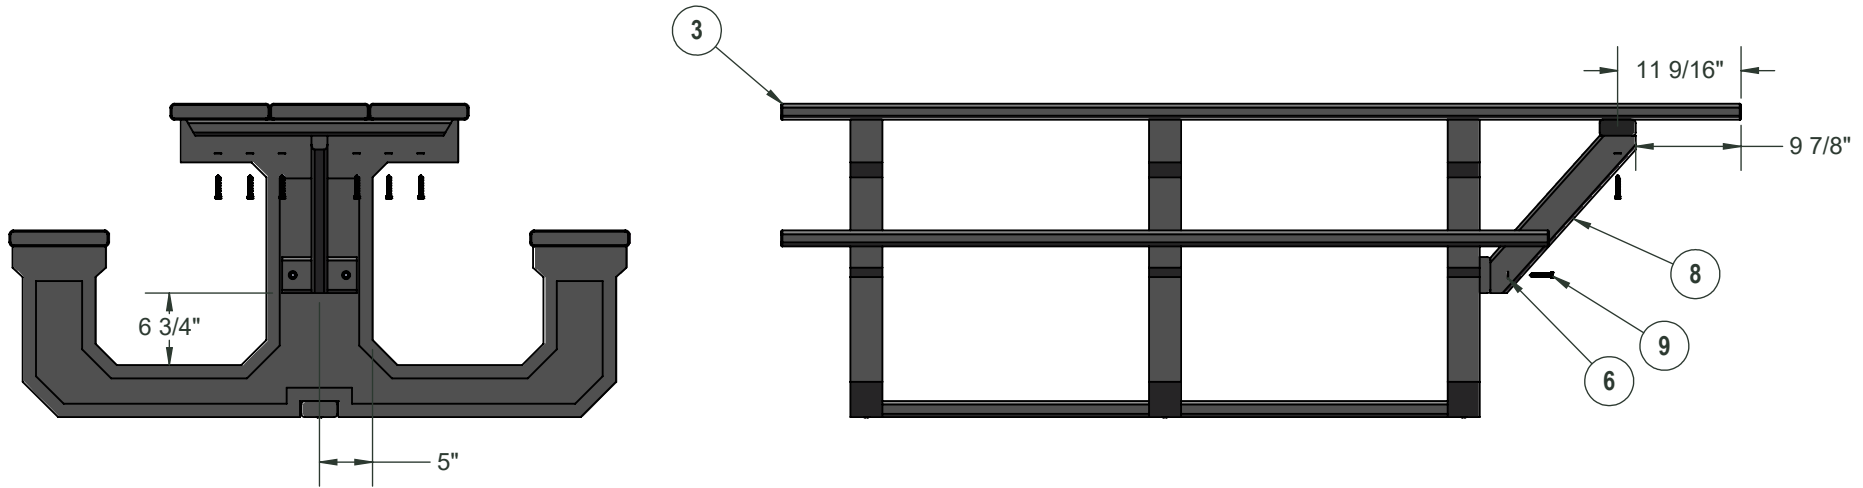

Position the ADA Support Bracket on the long side of the table top 9 7/8" from the edge. Attach to the top slats using 1 /4" x 2" Hex Lag Bolts and Flat Washers.

When attaching the bottom of the bracket to the base, push up slightly so the table top is level, attach using the 1 /4" x 2" Hex Lag Bolts and Flat Washers.

# OVERALL DIMENSIONS

