


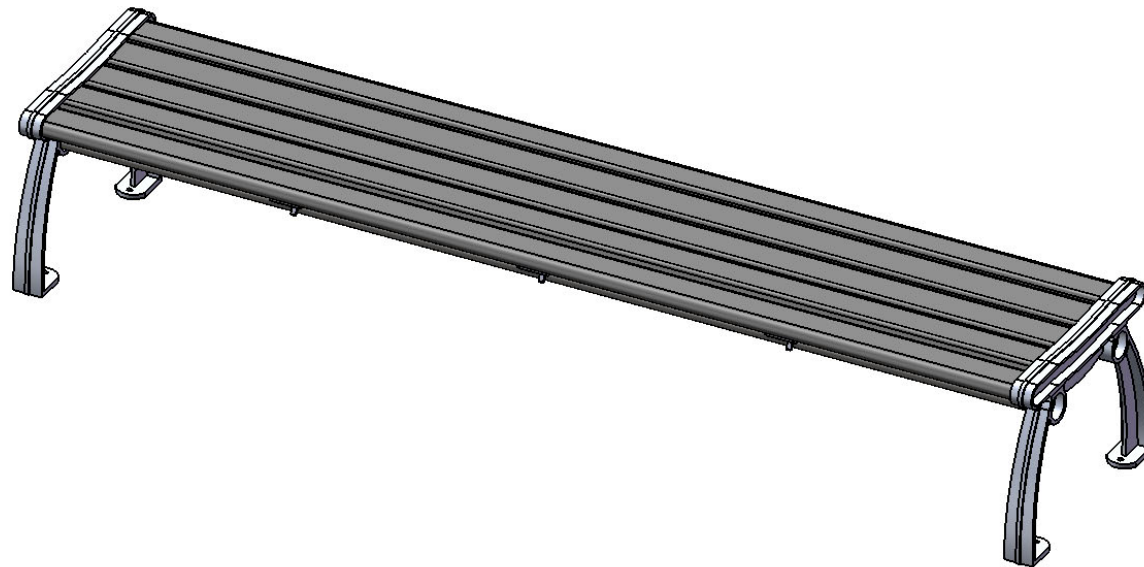


Model # PB 8___HERBACK




SAFETY WARNINGS & EQUIPMENT INSPECTION

- Owners and installers please note these safety warnings and make use of this checklist on a regular basis.
- Follow installation instructions when erecting equipment.
- Ground surfaces around equipment should be restored as needed. Concrete footings should never be exposed. Surface depth should comply with ASTM and CPSC specifications.
- Check for and repair damage caused by wear or vandalism, a major factor in injury causing situations.
- All protruding bolts should be covered or cut off and finished smooth. Sharp edges on pipes should be capped or removed. Check for bent, broken, or severely worn pipe, and replace.
- All equipment should be free of rust and repainted whenever necessary to deter rusting.
- We provide our customers with layout sheets and installation instructions. Please keep on file the specifications sheet that contains the listing of every part used.
- Never add components not intended for use with this product.
- Regular maintenance is necessary in this and all park and recreational equipment to insure the safety of the user.
- Note: Proper maintenance of equipment requires regular tightening of all bolts, nuts, and setscrews.
- Note: Regular checking of all parts, castings, etc. should be made. If a part is broken or worn, it should be replaced immediately.
- Check to be sure all fittings are tight and that bars and pipes do not move.
- Frog Furnishings products are durable and designed to last a lifetime, like most things that spend the majority of time outdoors, sometimes they need a little cleaning. In most cases, all a Frog product requires is mild dish soap, a bucket of warm water and a clean cloth. Apply the soapy mixture to scrub away the dirt and then rinse with water. If you have some stubborn dirt down in the grooves and divots, mix 1 part bleach to 2 parts water, apply with your clean cloth, scrub with a soft bristle brush if needed and then rinse.


HARDWARE




#10 x 1-1/4"
Philip Pan Head

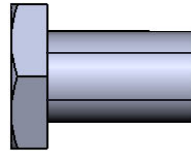

M12x1.75 x 20mm
Machine Bolt

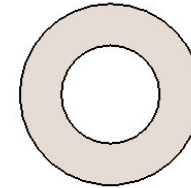


M12 flat washer



#10 x 1-1/2"
Philip Pan Head


TOOLS REQUIRED

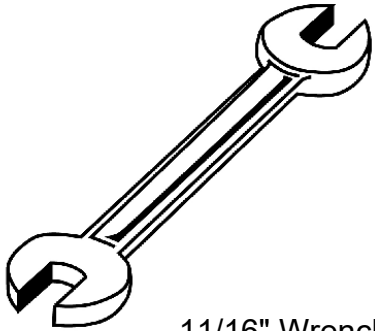


11/16" Wrench




11/16" Socket Wrench

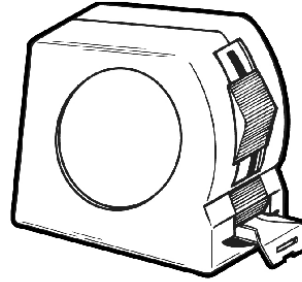

Tape Measure

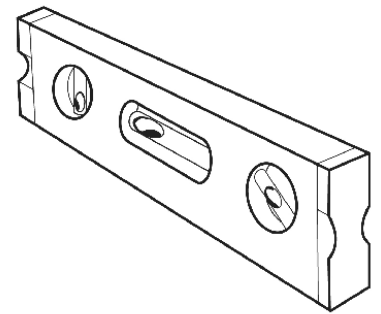

Level

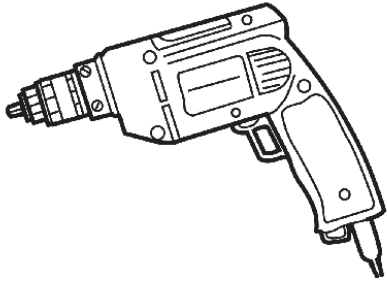

Power Drill

PRODUCT SPECIFICATIONS

PB 8__HERBAC 8' HERITAGE BACKLESS BENCH


Planks: 2" x 4" recycled plastic planks.

Legs: Cast Aluminum

Hardware: Stainless Steel plated fasteners.


Dimensions: Outside to outside dimension is 16-15/16"" x 96".

COMPONENTS

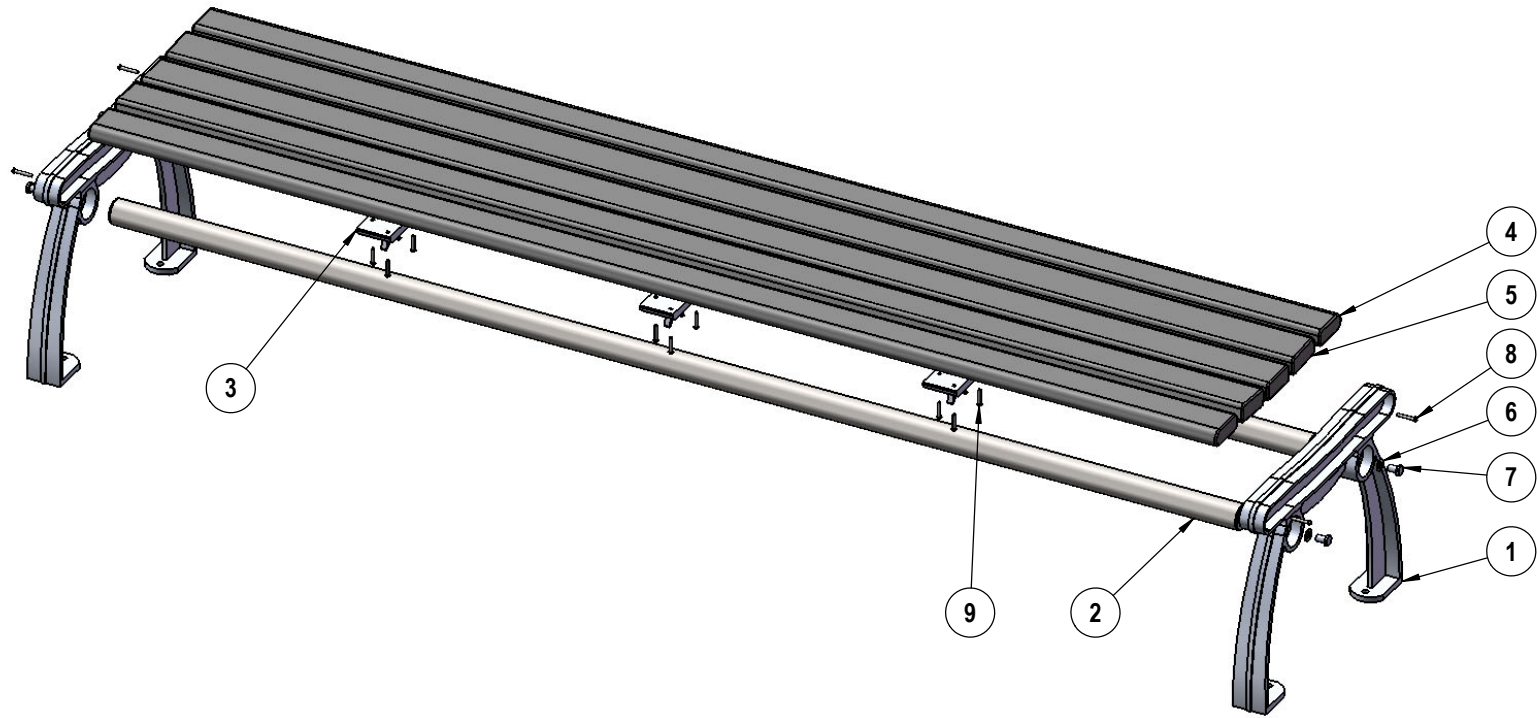



ITEM NO.	DESCRIPTION	Qty.
1	Heritage without back leg	2
2	Heritage 8' cross support pipe	2
3	Heritage w/out back support	3
4	93" 2x4 bullnose bench plank	2
5	93" 2x4 bench plank	3
6	M12 flat washer SS	4
7	M12x1.75 x 20mm Machine Bolt (SS)	4
8	#10 x 1-1/2" philip pan head SS	4
9	#10 x 1-1/4" philip pan head SS	30

STEP 1

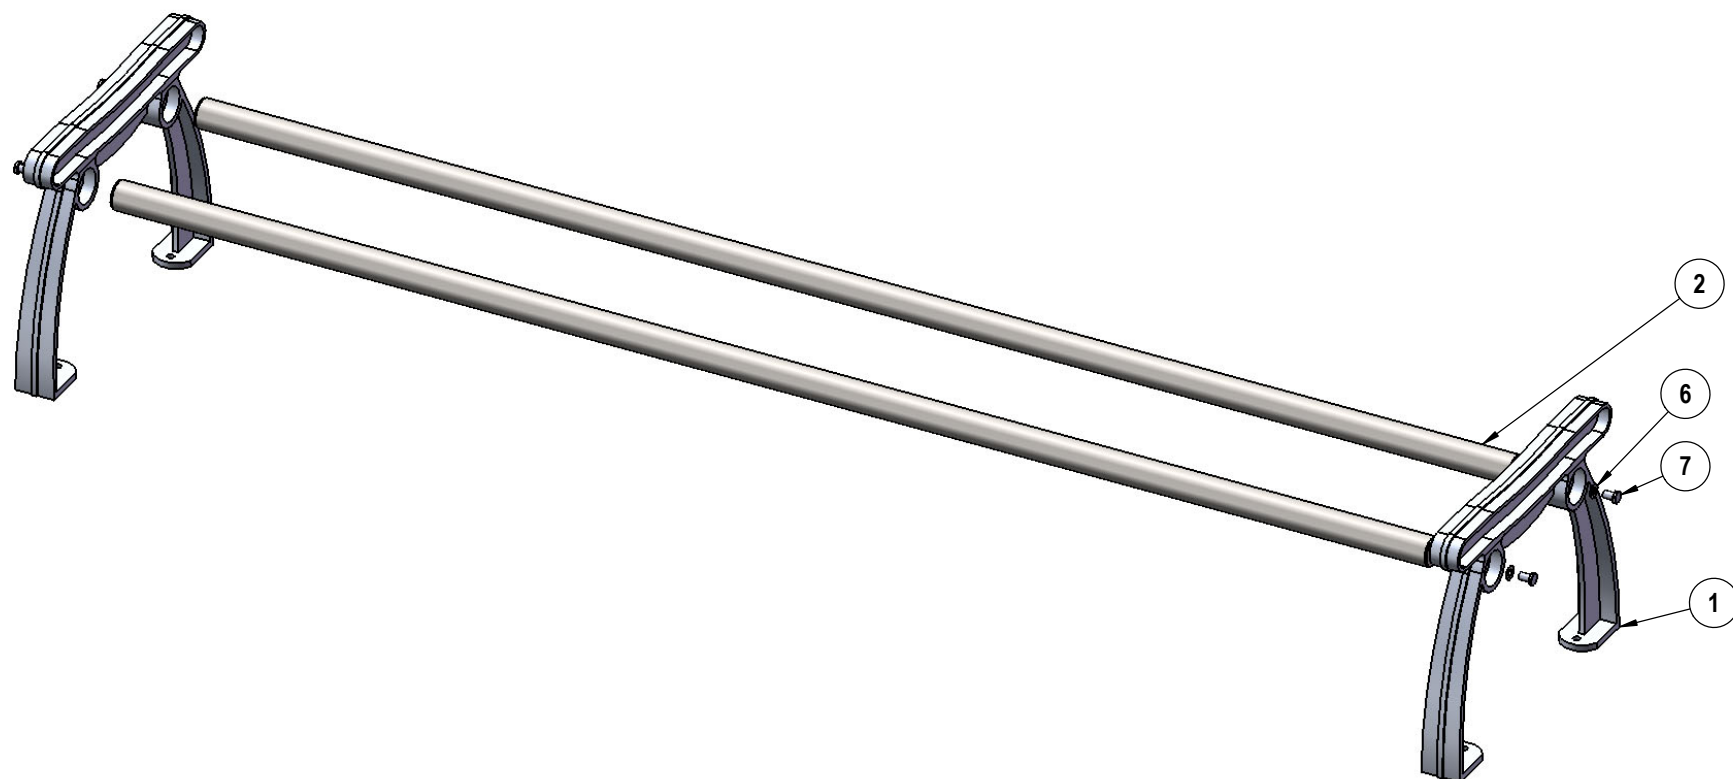

Loosely attach support rods to bench ends using hex head bolts



STEP 2

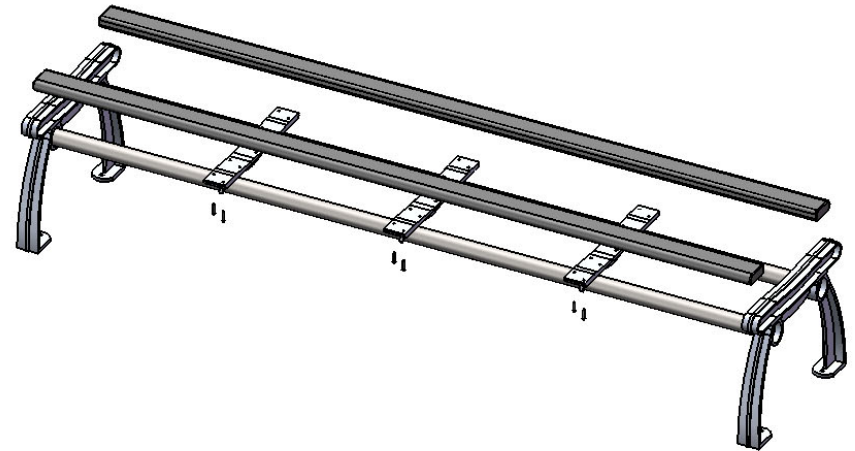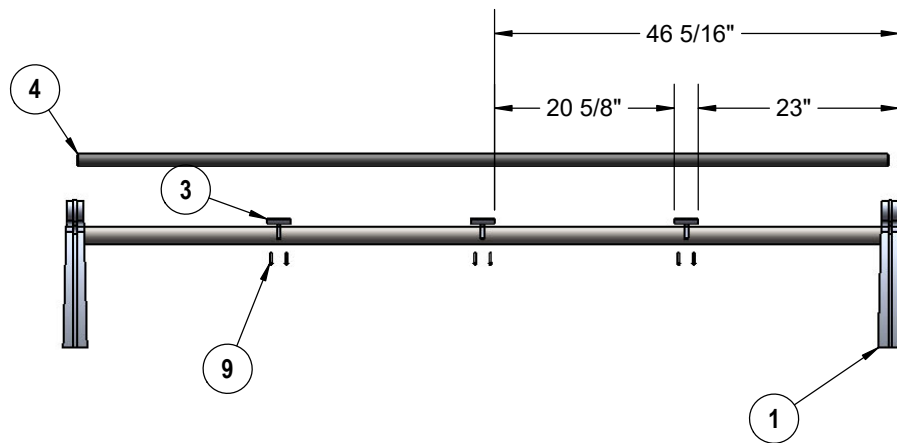

Place the braces onto the support rods with the given dimensions, install the Bullnose planks with the rounded edge facing out in the slots of each bench end, tighten with the specified hardware.

DO NOT overtighten pan head screws as this can damage the plastic bases.

STEP 3

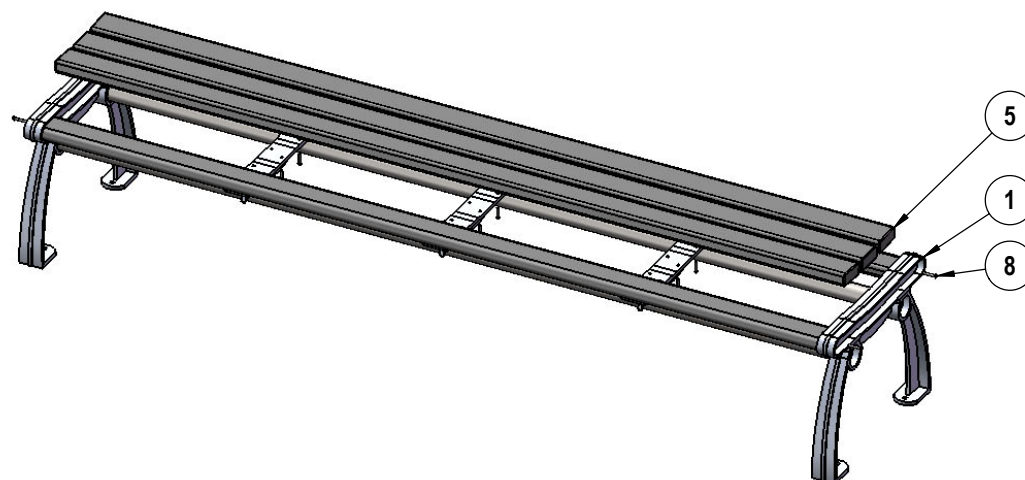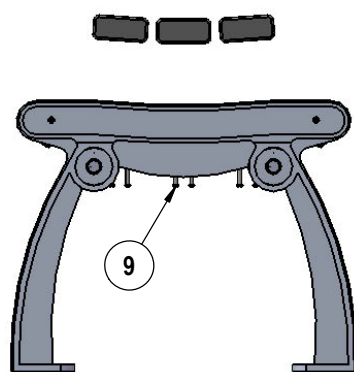

Attach the remaining bench slats evenly and tighten with the specified hardware. Tighten each Bullnose slat on each bench end with a pan head screw (item #8). Tighten up the machine bolts to the bench ends.

DO NOT overtighten pan head screws as this can damage the plastic bases.

OVERALL DIMENSIONS

