


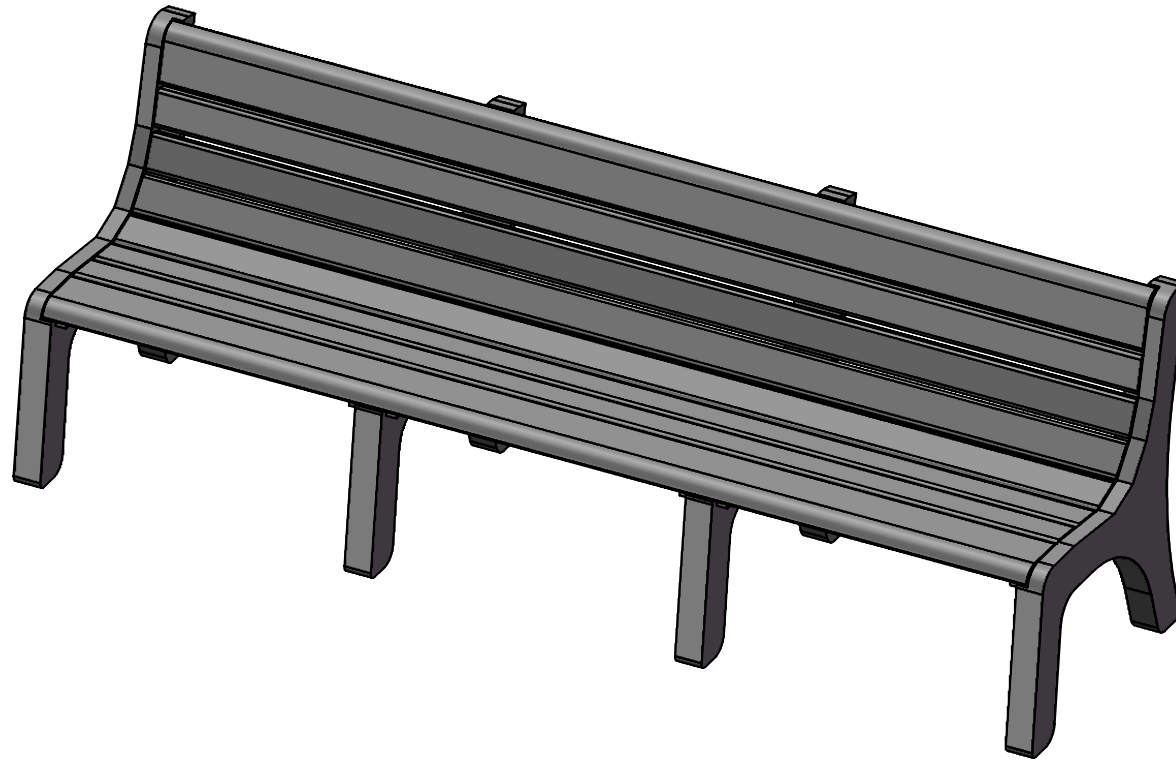


Model # PB 8___NEW



SAFETY WARNINGS & EQUIPMENT INSPECTION


- Owners and installers please note these safety warnings and make use of this checklist on a regular basis.
- Follow installation instructions when erecting equipment.
- Ground surfaces around equipment should be restored as needed. Concrete footings should never be exposed. Surface depth should comply with ASTM and CPSC specifications.
- Check for and repair damage caused by wear or vandalism, a major factor in injury causing situations.
- All protruding bolts should be covered or cut off and finished smooth. Sharp edges on pipes should be capped or removed. Check for bent, broken, or severely worn pipe, and replace.
- All equipment should be free of rust and repainted whenever necessary to deter rusting.
- We provide our customers with layout sheets and installation instructions. Please keep on file the specifications sheet that contains the listing of every part used.
- Never add components not intended for use with this product.
- Regular maintenance is necessary in this and all park and recreational equipment to insure the safety of the user.
- Note: Proper maintenance of equipment requires regular tightening of all bolts, nuts, and setscrews.
- Note: Regular checking of all parts, castings, etc. should be made. If a part is broken or worn, it should be replaced immediately.
- Check to be sure all fittings are tight and that bars and pipes do not move.
- Frog Furnishings products are durable and designed to last a lifetime, like most things that spend the majority of time outdoors, sometimes they need a little cleaning. In most cases, all a Frog product requires is mild dish soap, a bucket of warm water and a clean cloth. Apply the soapy mixture to scrub away the dirt and then rinse with water. If you have some stubborn dirt down in the grooves and divots, mix 1 part bleach to 2 parts water, apply with your clean cloth, scrub with a soft bristle brush if needed and then rinse.

HARDWARE




#8 x 2" Long T-20
Torx Flat Head Screw


TOOLS REQUIRED

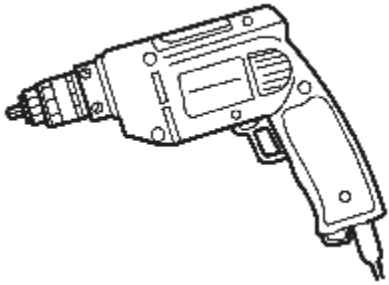


Drill

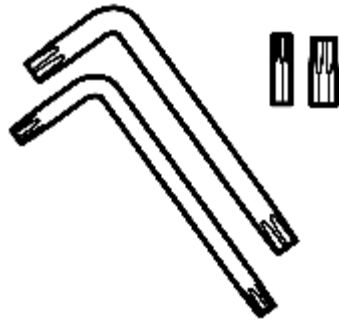

T-20 Torx Head Bit

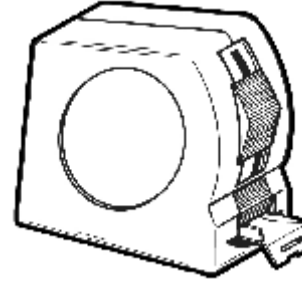

Tape Measure

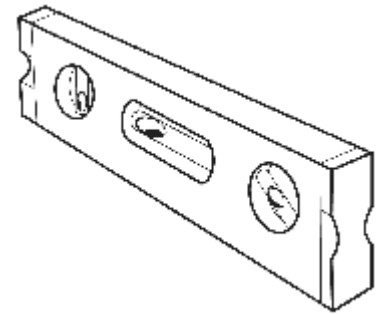

Level

PRODUCT SPECIFICATIONS

PB 8 NEW 8' NEWPORT BENCH

Planks: 2" x 4" Planks & 2" x 6" Beveled Planks are made of Recycled Plastic.

Legs: 2 1/2" Thick Molded Plastic Leg


Hardware: Zinc Plated Steel.

Dimensions: Outside to outside dimension is 27-5/8" x 96".

If an armrest was purchased, it will need installed between steps 3 & 4.


If an armrest was purchased & and the bench is already assembled, the middle planks will need to be temporarily removed to install the armrest

COMPONENTS

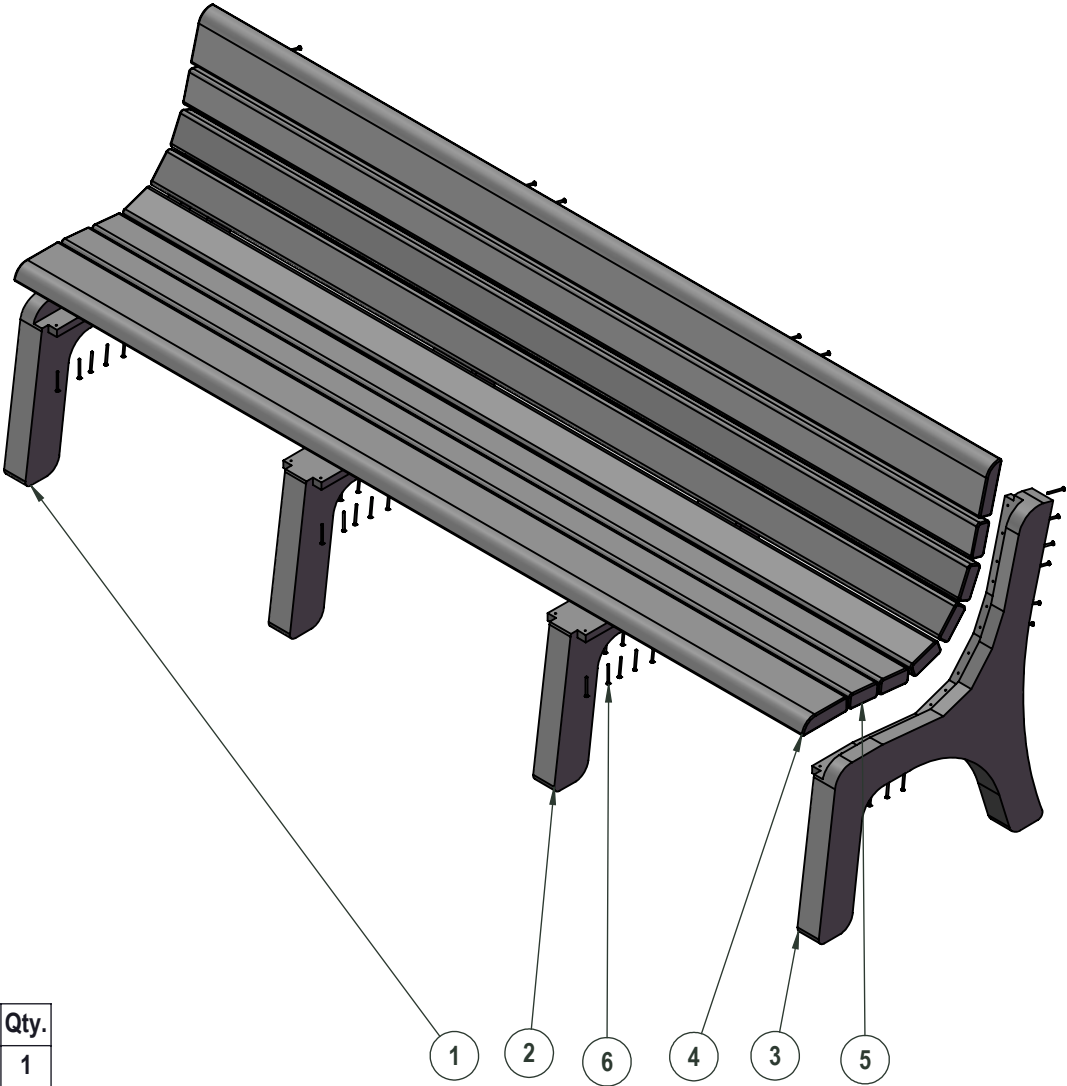


ITEM NO.	DESCRIPTION	Qty.
1	Newport bench leg LH	1
2	Newport bench leg middle	2
3	Newport bench leg RH	1
4	93" 2x6 beveled bench plank	2
5	93" 2x4 bench plank	6
6	#8 x 2" long T-20 torx flat head screw	96
7	3/8" thick spacer	2

STEP 1

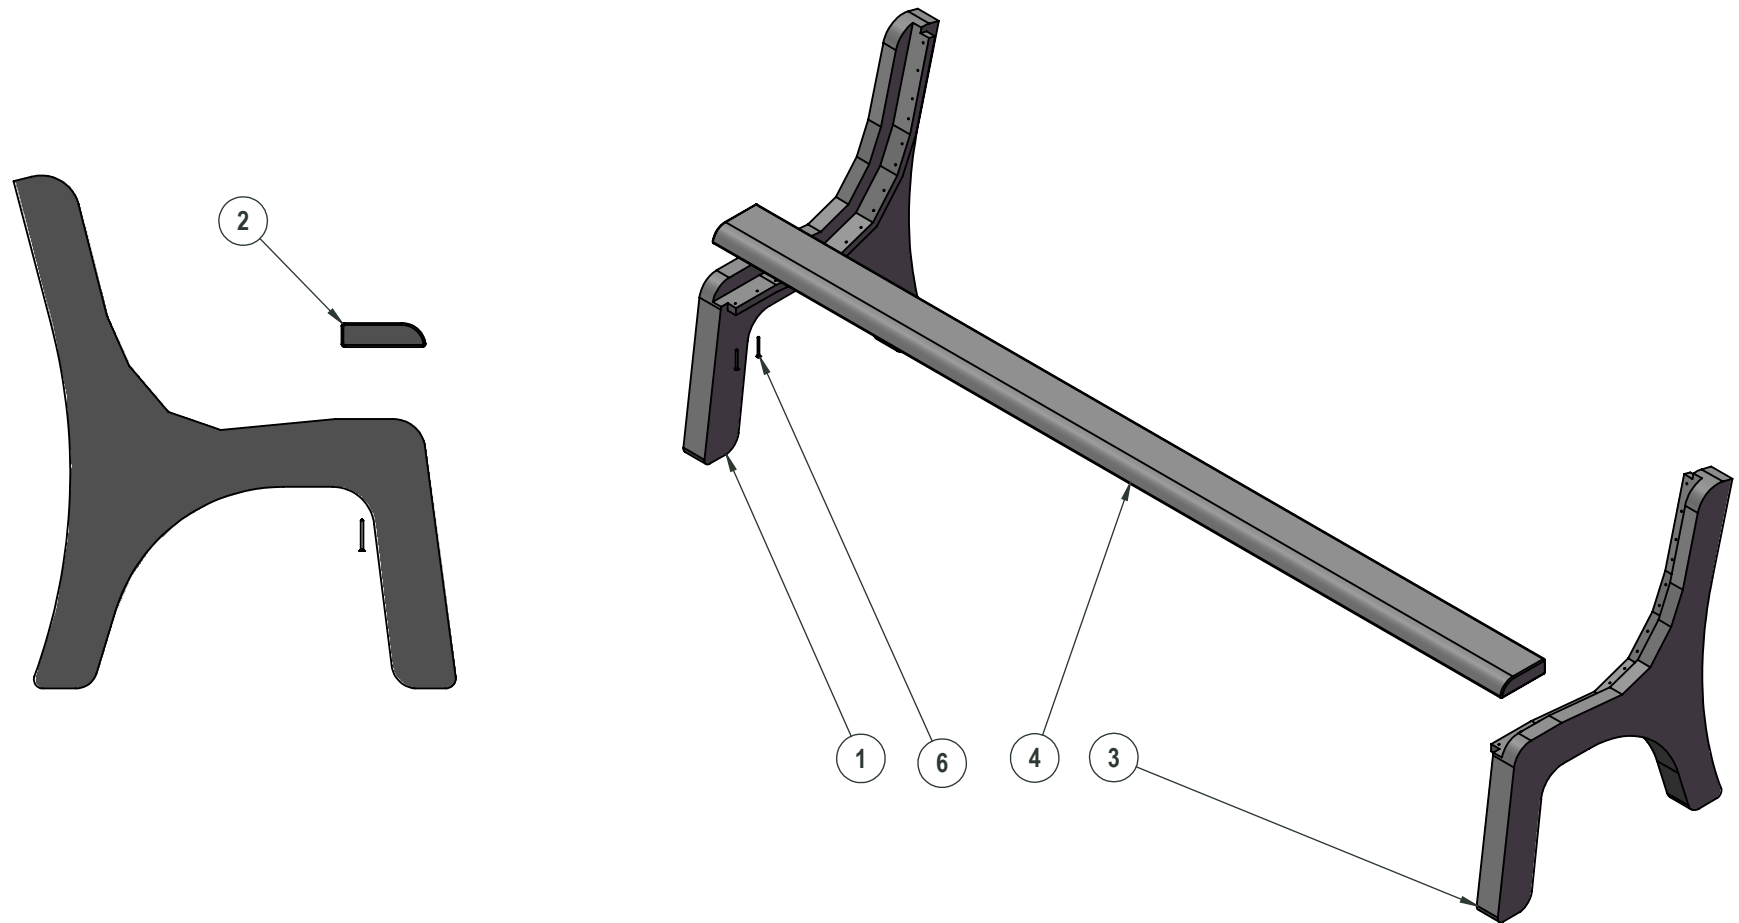


Stand a RH and LH support upright and perpendicular to each other. Place the front round edge slat on the mounting surface with the pre-drilled holes. From the underneath side, attach the slat to each support at the pre-drilled holes using the torx head screws. Do not over tighten or screws may protrude through the opposite side of the slat.

STEP 2

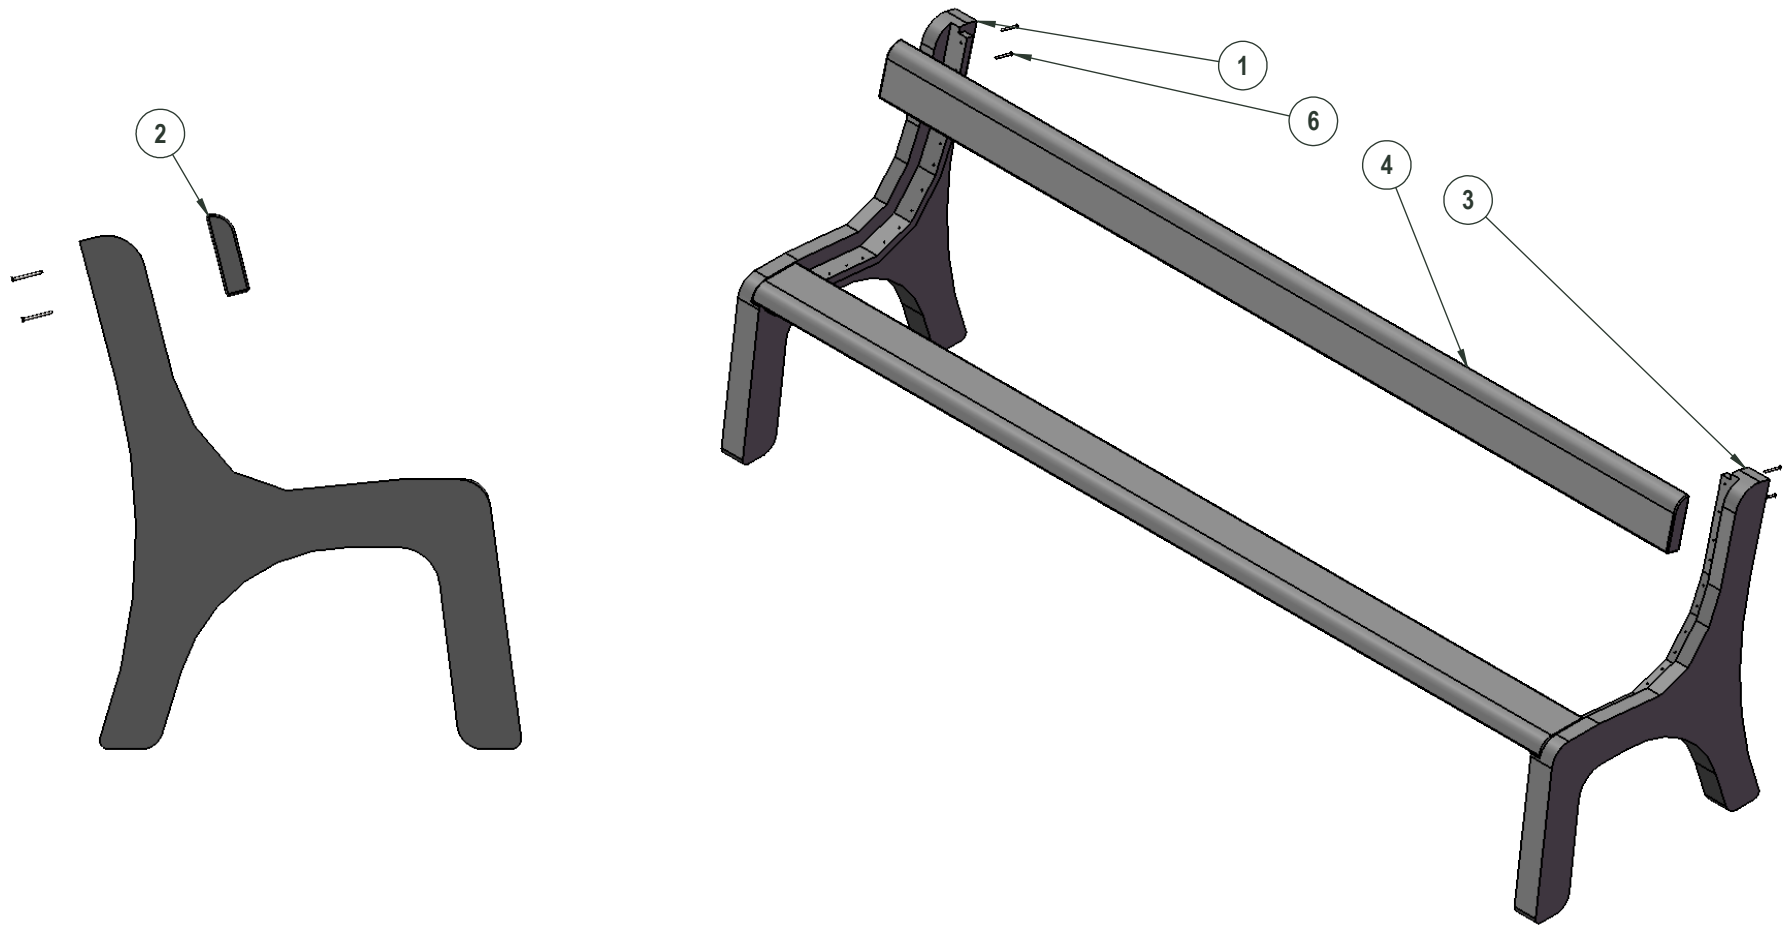


Place the top round edge slat on the mounting surface with the pre-drilled holes. From the underneath side, attach the slat to each support at the pre-drilled holes using the torx head screws. Do not over tighten or screws may protrude through the opposite side of the slat.

STEP 3

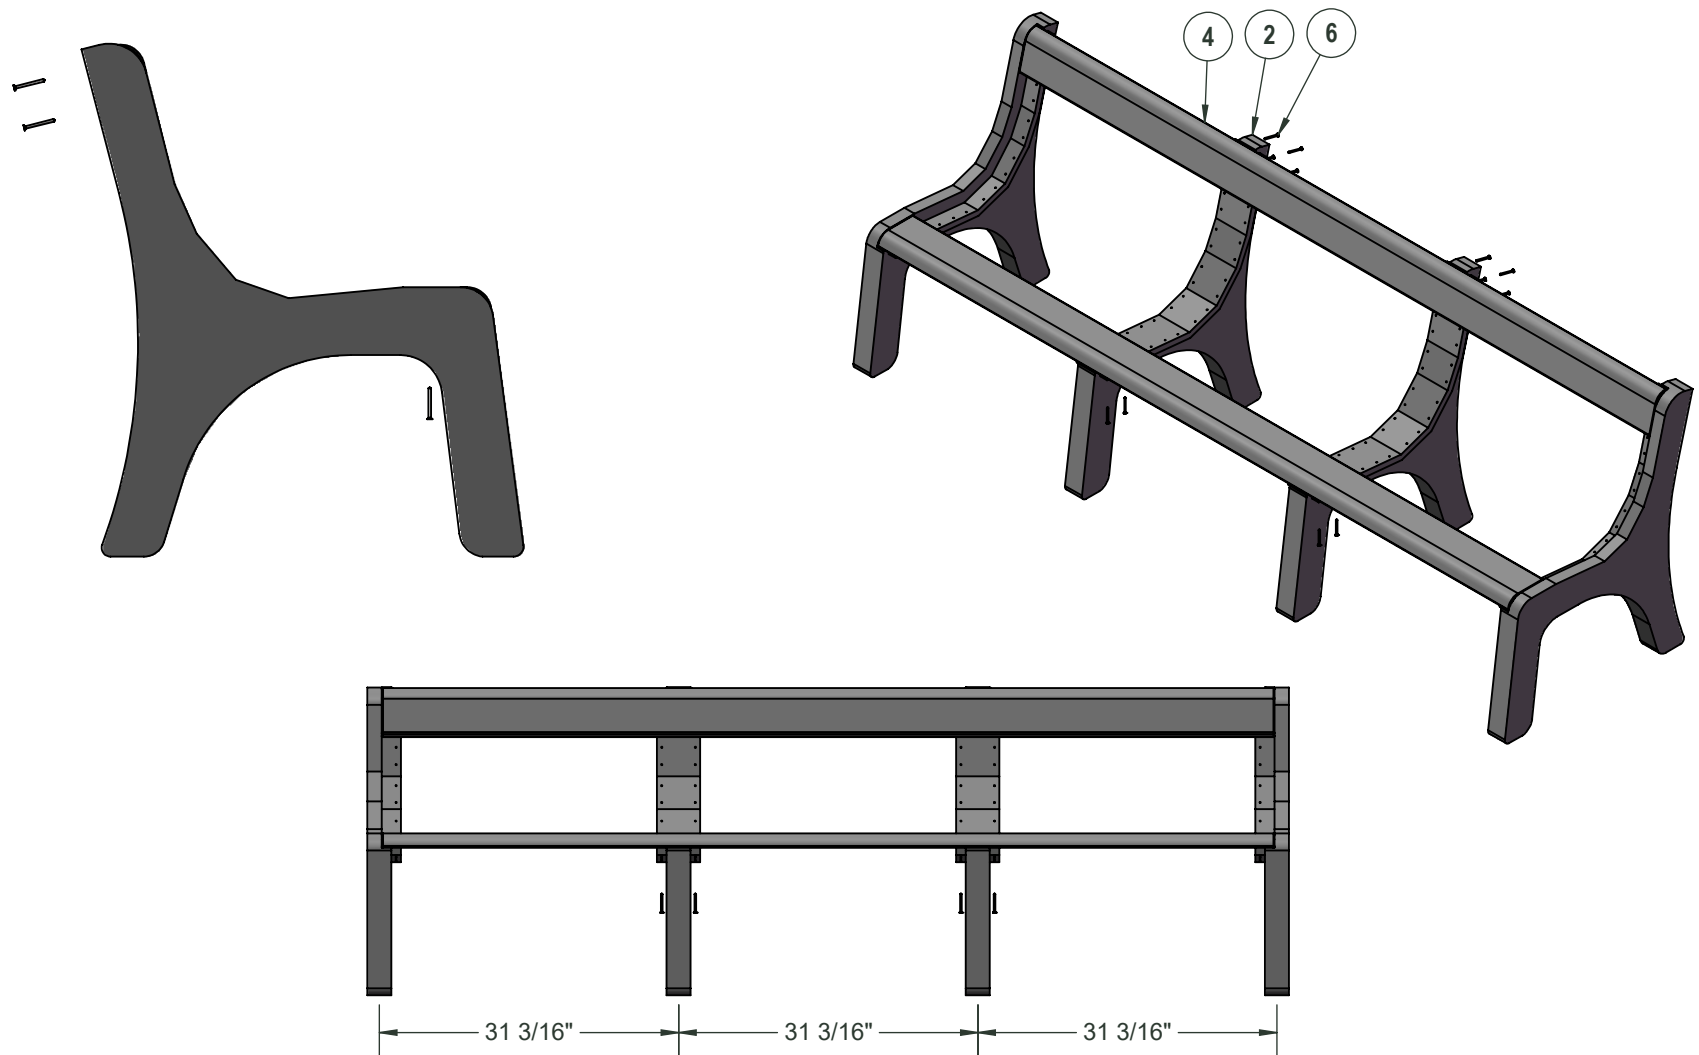

Place the middle support legs evenly spaced at the top and front installed slats. From the underneath side, attach the slats to the middle support legs at the pre-drilled holes using the torx head screws. Do not over tighten or screws may protrude through the opposite side of the slats.

STEP 4

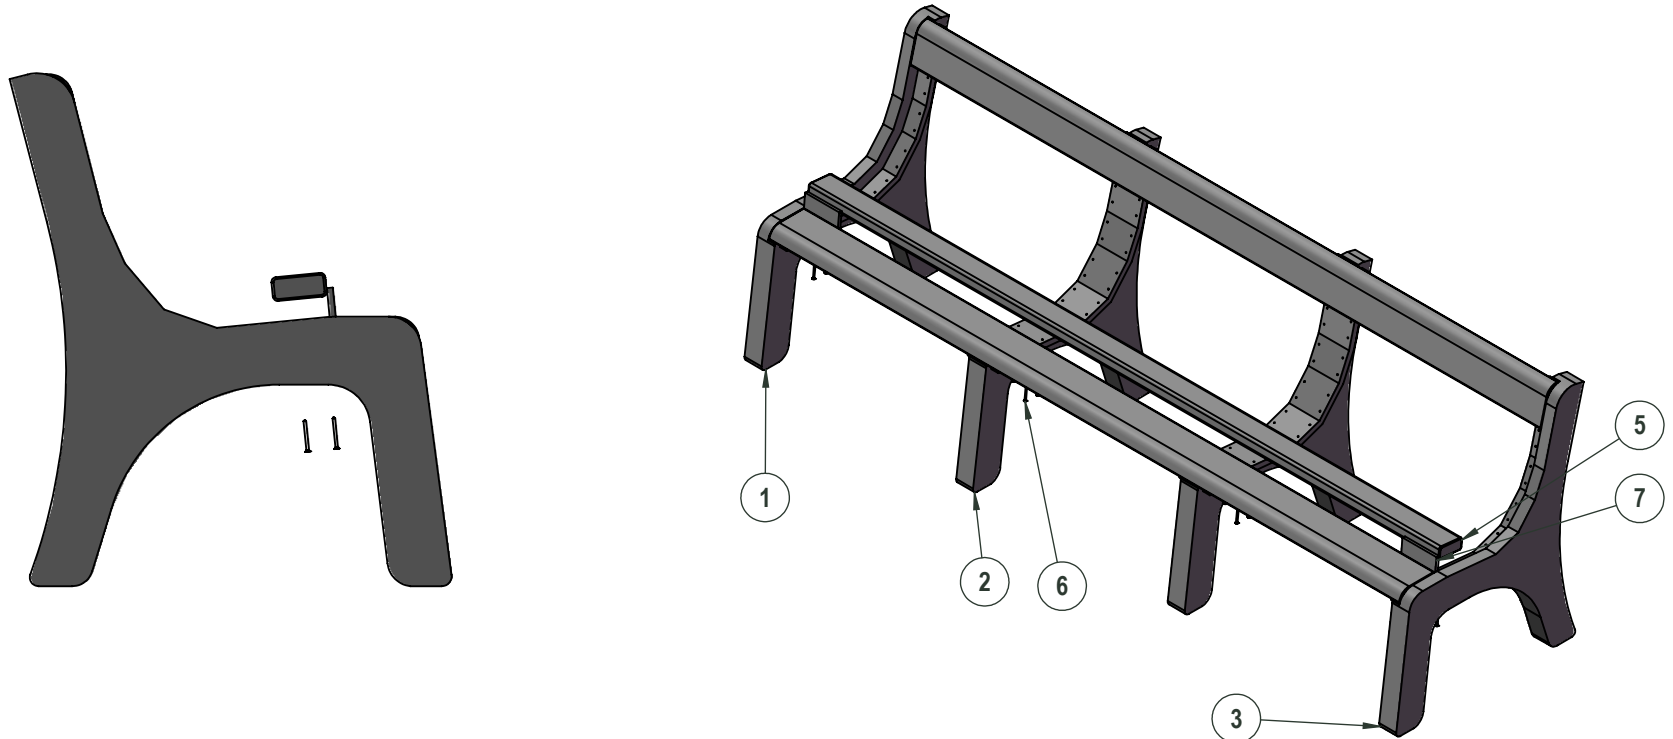

Two 3/8" spacers have been included to assist in correctly spacing the seat slats. Beginning at the front, position a spacer on the backside face of the installed rounded slat at the RH and LH supports. Place a bench slat against each spacer resting on the mounting surface of all three supports. From the underneath side, attach the slat to each support at the pre-drilled holes using the torx head screws. Do not over tighten or screws may protrude through the opposite side of the slat. Repeat the same process for remaining slats.

OVERALL DIMENSIONS

