


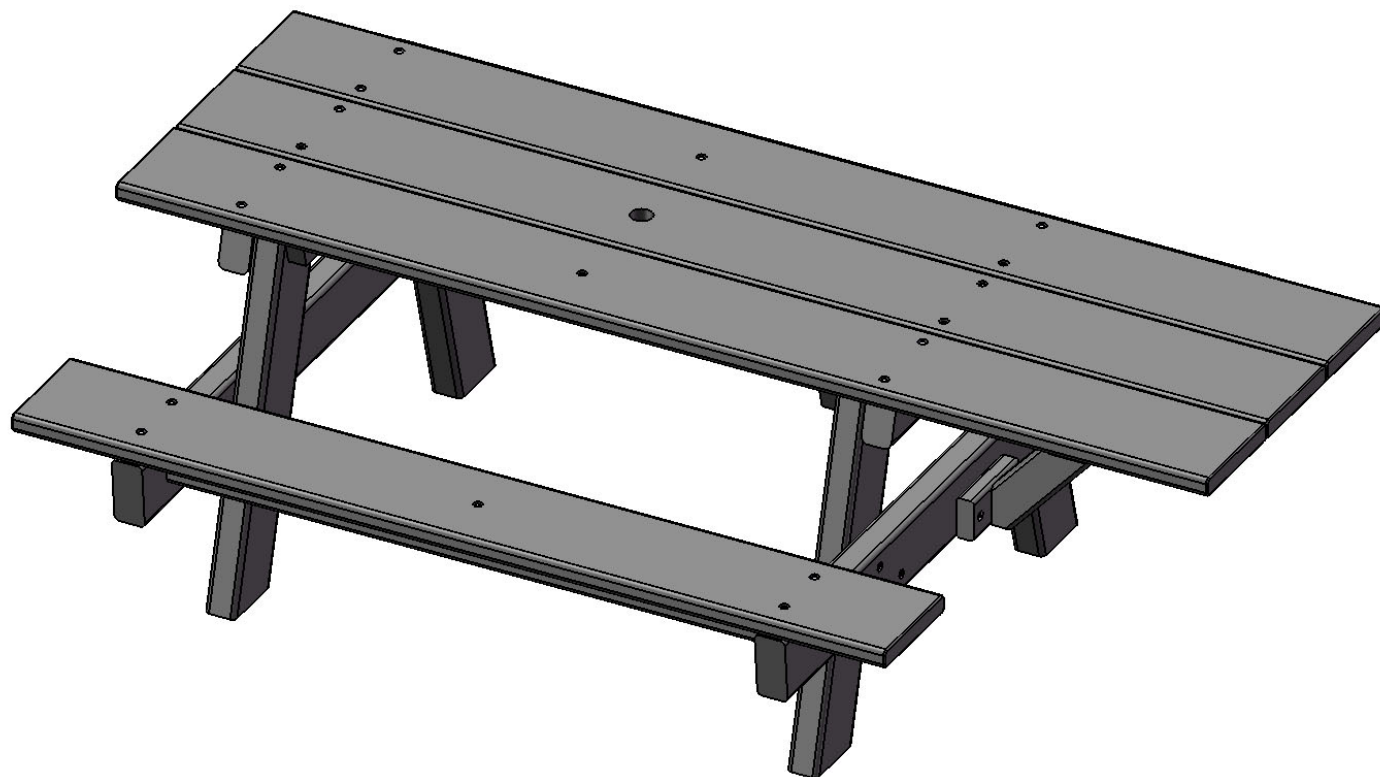

Model # PB APIC6\_\_ADA



Scan me for an  
instructional  
**assembly video!**



### **SAFETY WARNINGS & EQUIPMENT INSPECTION**

- Owners and installers please note these safety warnings and make use of this checklist on a regular basis.
- Follow installation instructions when erecting equipment.
- Ground surfaces around equipment should be restored as needed. Concrete footings should never be exposed. Surface depth should comply with ASTM and CPSC specifications.
- Check for and repair damage caused by wear or vandalism, a major factor in injury causing situations.
- All protruding bolts should be covered or cut off and finished smooth. Sharp edges on pipes should be capped or removed. Check for bent, broken, or severely worn pipe, and replace.
- All equipment should be free of rust and repainted whenever necessary to deter rusting.
- We provide our customers with layout sheets and installation instructions. Please keep on file the specifications sheet that contains the listing of every part used.
- Never add components not intended for use with this product.
- Regular maintenance is necessary in this and all park and recreational equipment to insure the safety of the user.
- Note: Proper maintenance of equipment requires regular tightening of all bolts, nuts, and setscrews.
- Note: Regular checking of all parts, castings, etc. should be made. If a part is broken or worn, it should be replaced immediately.
- Check to be sure all fittings are tight and that bars and pipes do not move.
- Frog Furnishings products are durable and designed to last a lifetime, like most things that spend the majority of time outdoors, sometimes they need a little cleaning. In most cases, all a Frog product requires is mild dish soap, a bucket of warm water and a clean cloth. Apply the soapy mixture to scrub away the dirt and then rinse with water. If you have some stubborn dirt down in the grooves and divots, mix 1 part bleach to 2 parts water, apply with your clean cloth, scrub with a soft bristle brush if needed and then rinse.


## HARDWARE



1/4" x 3 1/2"  
Hex Lag Bolt




1/4" x 2 1/2"  
Hex Lag Bolt

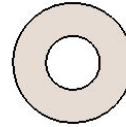

1/4" Flat Washer


## TOOLS REQUIRED

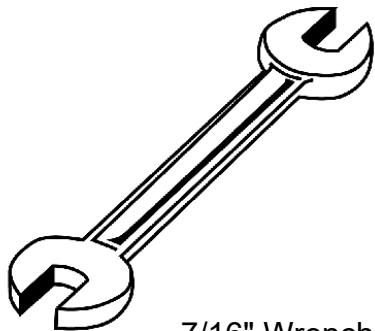


7/16" Wrench




7/16" Socket Wrench

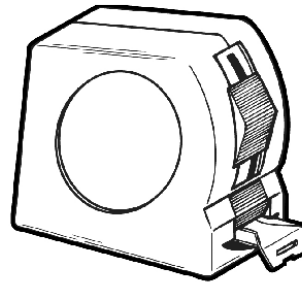


Tape Measure

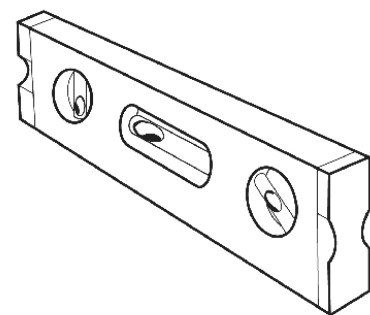

Level

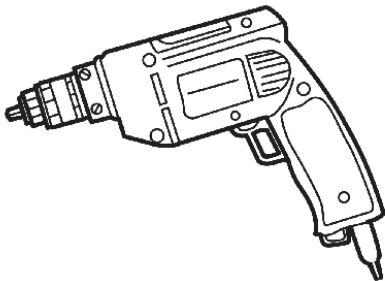

Drill

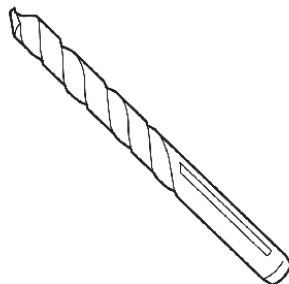

3/16" Drill Bit

# PRODUCT SPECIFICATIONS

## **PB APIC6\_\_ADA 6' ADA A-FRAME PICNIC TABLE**

Top & Seats: 2" x 10" recycled plastic planks.


Legs: A-Frame is made up of 3" x 6" & 3" x 4" recycled plastic. ADA support bracket is made up of 2" x 4" recycled plastic.

H-Frame: 2" x 3" & 2" x 4" recycled plastic.

Hardware: Stainless Steel fasteners.


Dimensions: 6' ADA portable picnic table walk-through design. Top is 27-15/16" wide x 96" long and is 30" high. Seats are 9-5/16" wide x 72" long and 19" high. Outside to outside dimension is 60-1/2" x 96".

# COMPONENTS

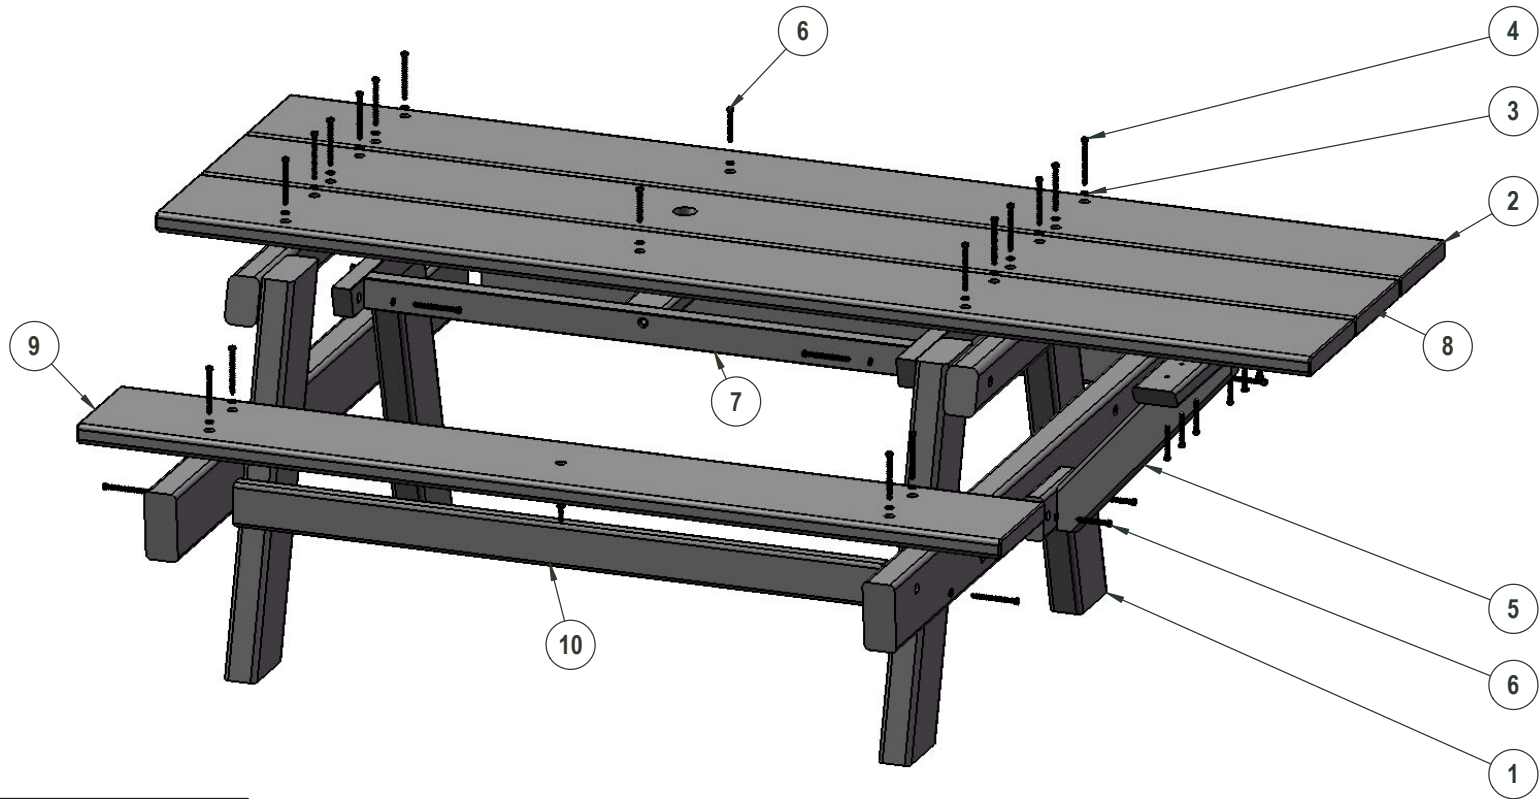


| ITEM NO. | DESCRIPTION                        | Qty. |
|----------|------------------------------------|------|
| 1        | A frame base                       | 2    |
| 2        | ADA top A frame                    | 2    |
| 3        | 1/4" flat washer SS                | 40   |
| 4        | 1/4" x 3-1/2" lag bolt, SS         | 30   |
| 5        | 6' A frame ADA support bracket     | 1    |
| 6        | 1/4" x 2-1/2" lag bolt, SS         | 10   |
| 7        | H frame support                    | 1    |
| 8        | ADA top with umbrella hole A frame | 1    |
| 9        | 6' top A frame                     | 2    |
| 10       | A frame 6' seat support            | 2    |

# COMPONENTS FOR OPTIONAL TABLE WITHOUT AN UMBRELLA HOLE

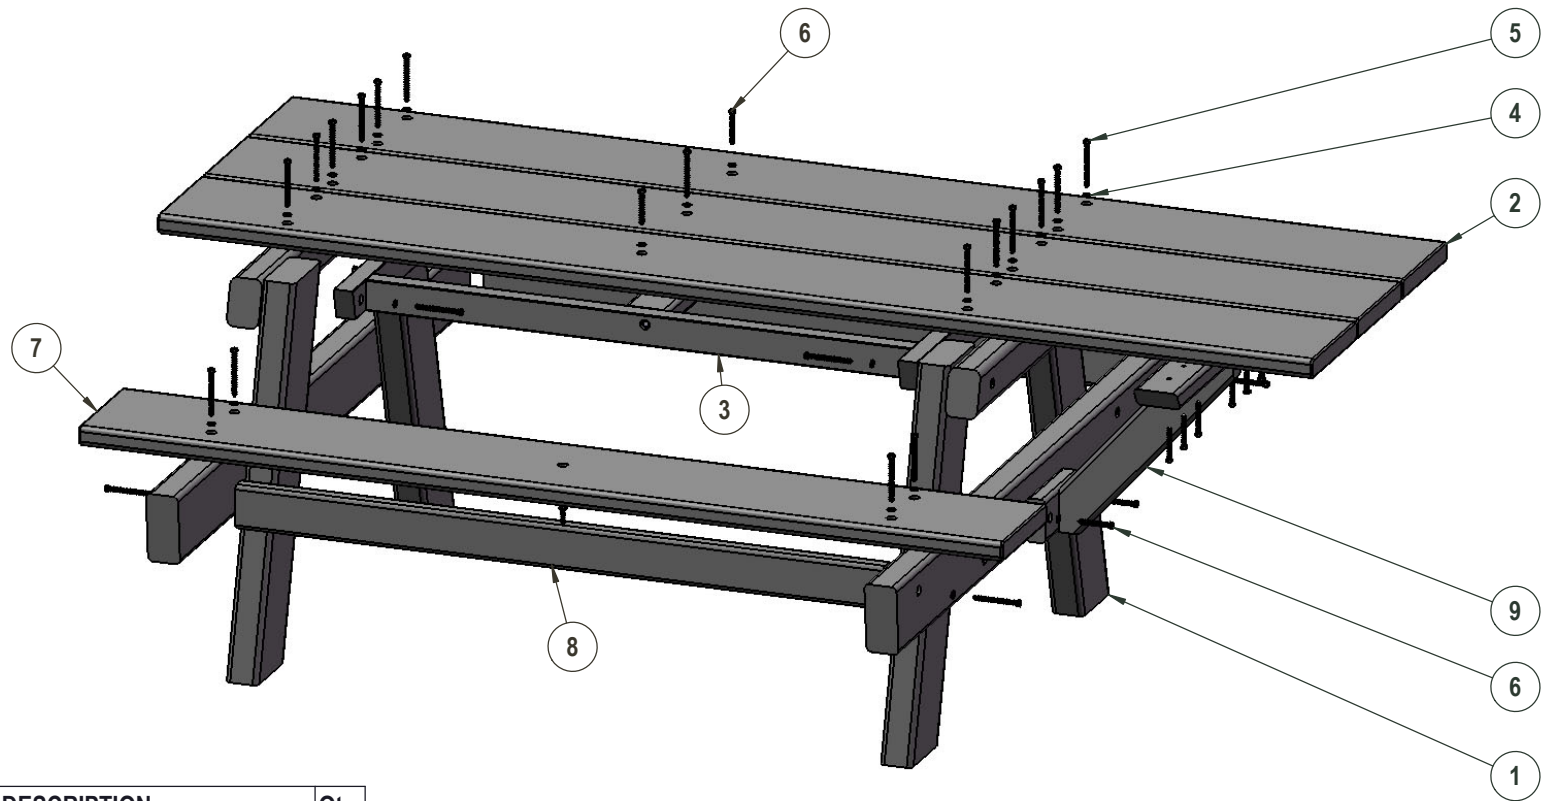


| ITEM NO. | DESCRIPTION                        | Qty. |
|----------|------------------------------------|------|
| 1        | A frame base                       | 2    |
| 2        | ADA top A frame                    | 3    |
| 3        | H frame support (no umbrella hole) | 1    |
| 4        | 1/4" flat washer SS                | 41   |
| 5        | 1/4" x 3-1/2" lag bolt, SS         | 31   |
| 6        | 1/4" x 2-1/2" lag bolt, SS         | 10   |
| 7        | 6' top A frame                     | 2    |
| 8        | A frame 6' seat support            | 2    |
| 9        | 6' A frame ADA support bracket     | 1    |

## STEP 1

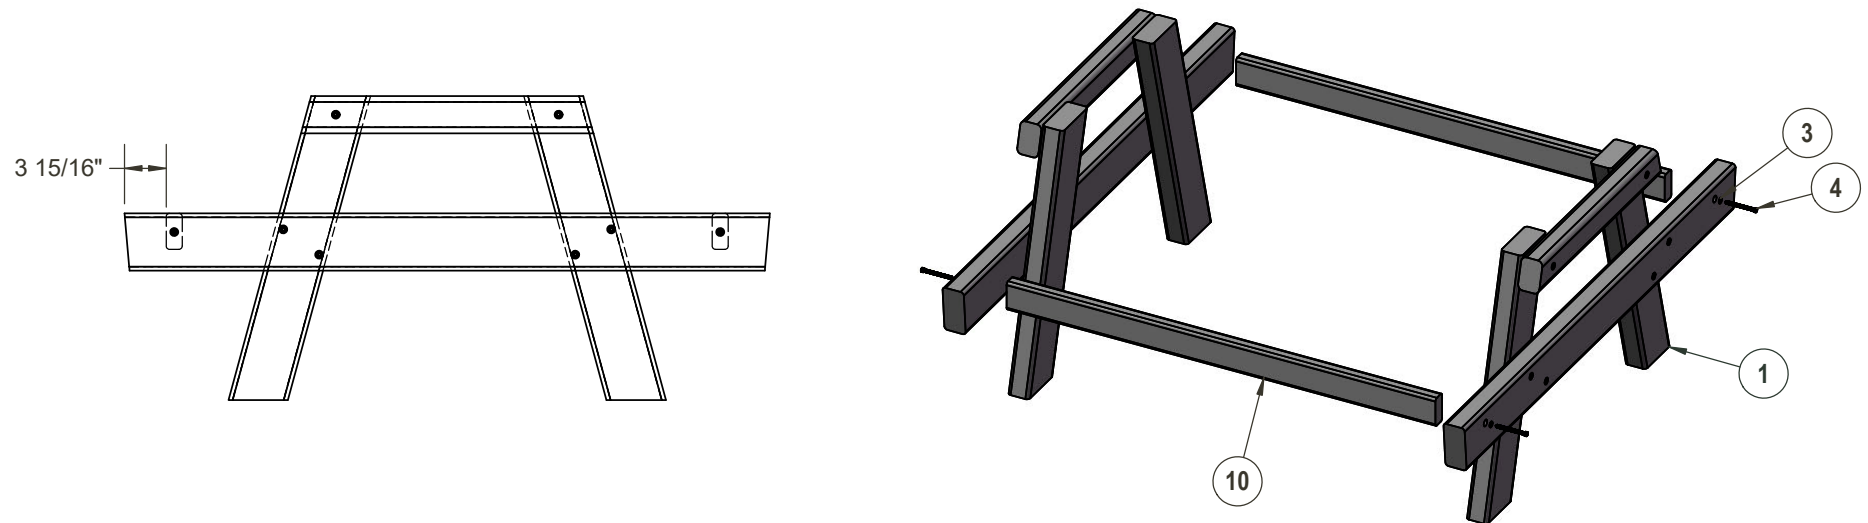




Stand A-frame bases upright and parallel to each other. Use the pre-drilled holes in the A frame (closest to the outside) as a guide to drill a 3/16" hole into the 2" x 4" support. Attach using the specified hardware.

## STEP 2

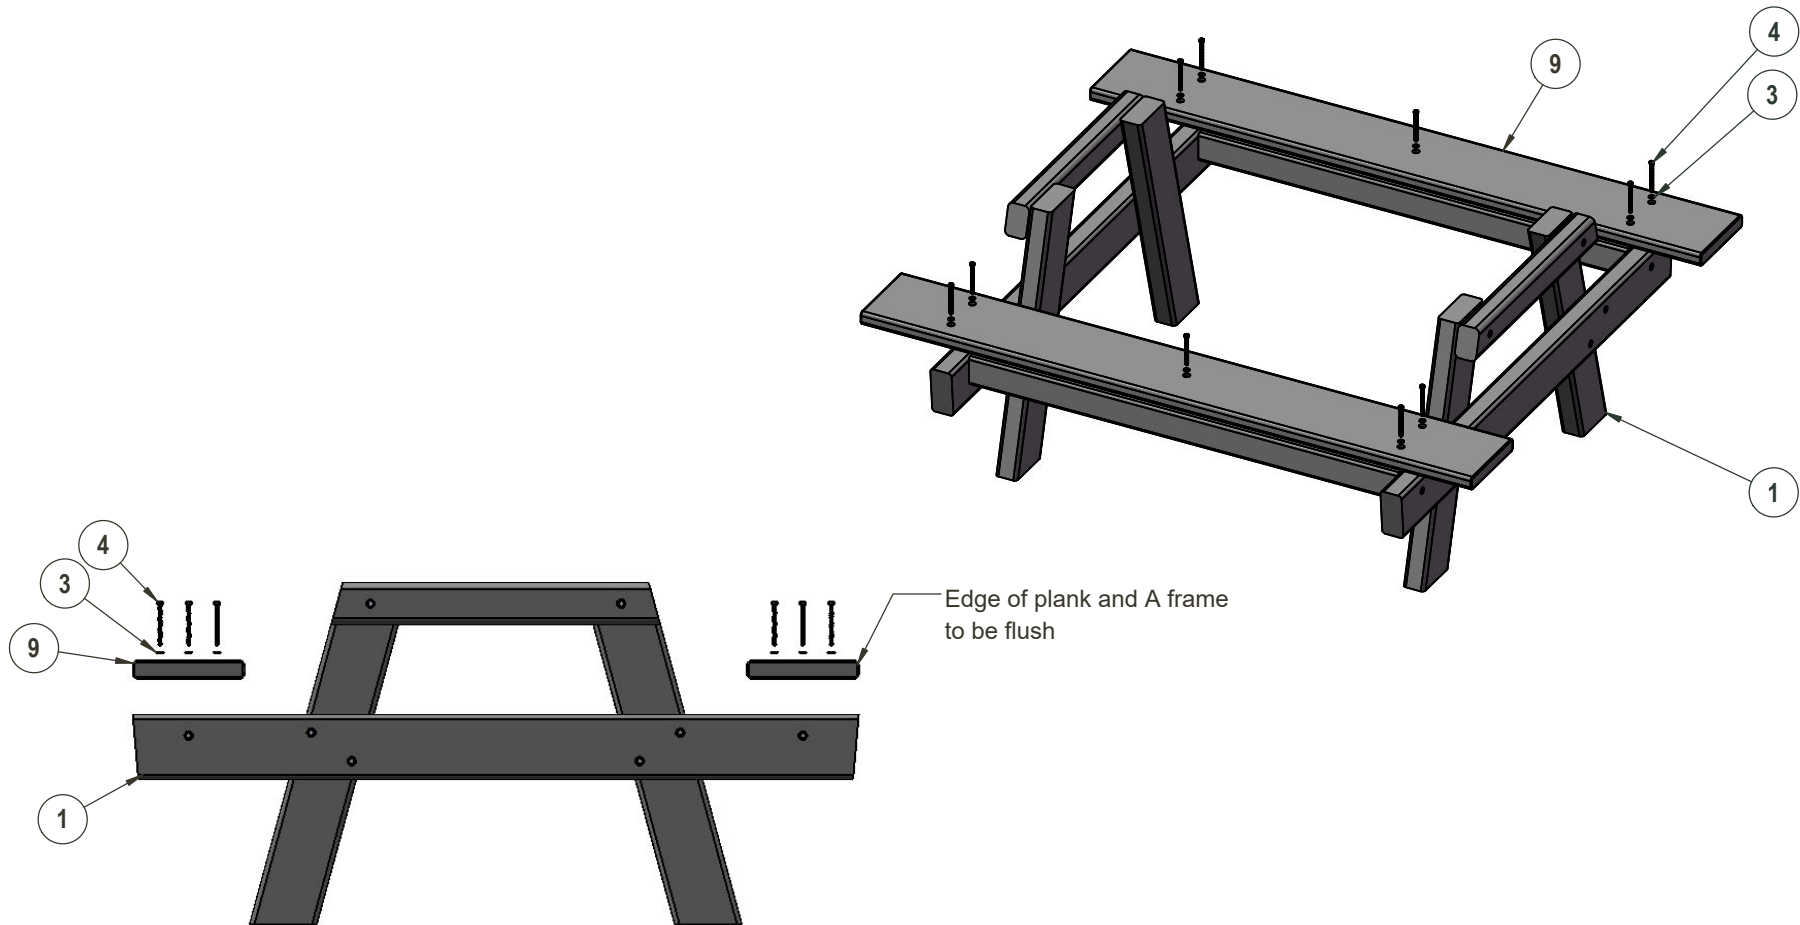


Use the predrilled holes in the seat plank to drill 3/16" starter holes into the A frames and 2" x 4" supports. Attach the planks using the specified hardware.

## STEP 3

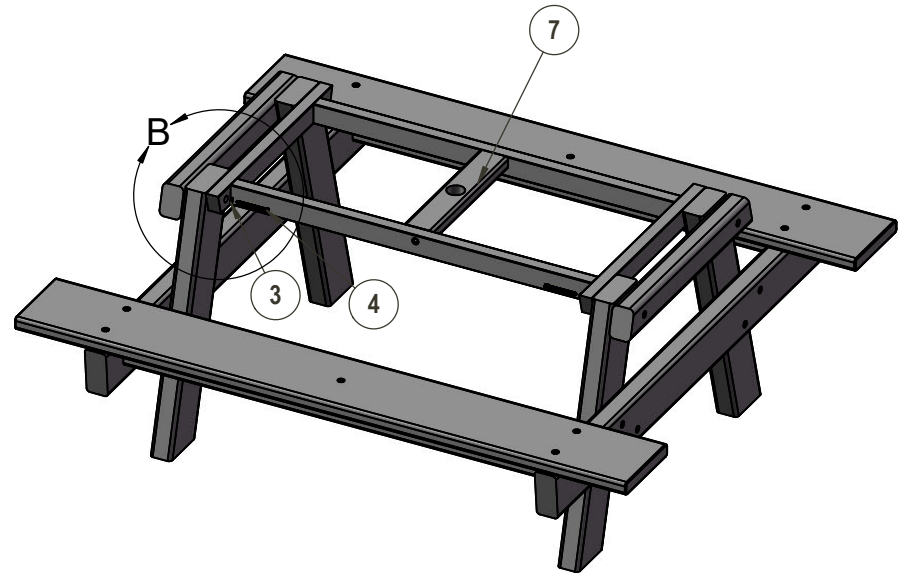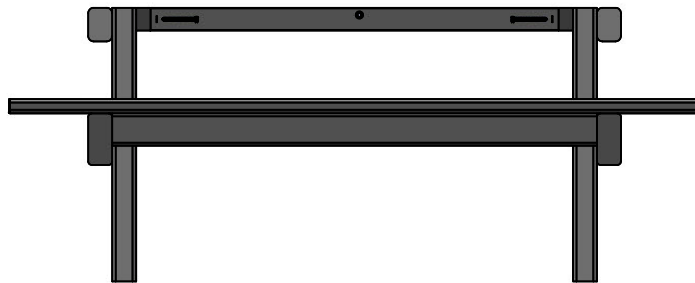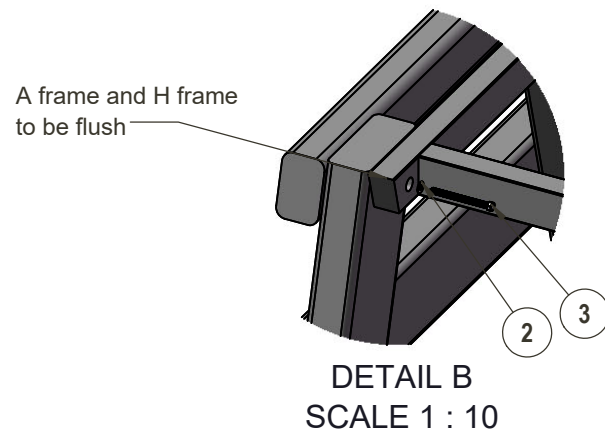


Seat the H frame in between the A frames. Use the predrilled holes in the H frame to drill 3/16" starter holes into the A frame. Attach using the specified hardware.

## STEP 4

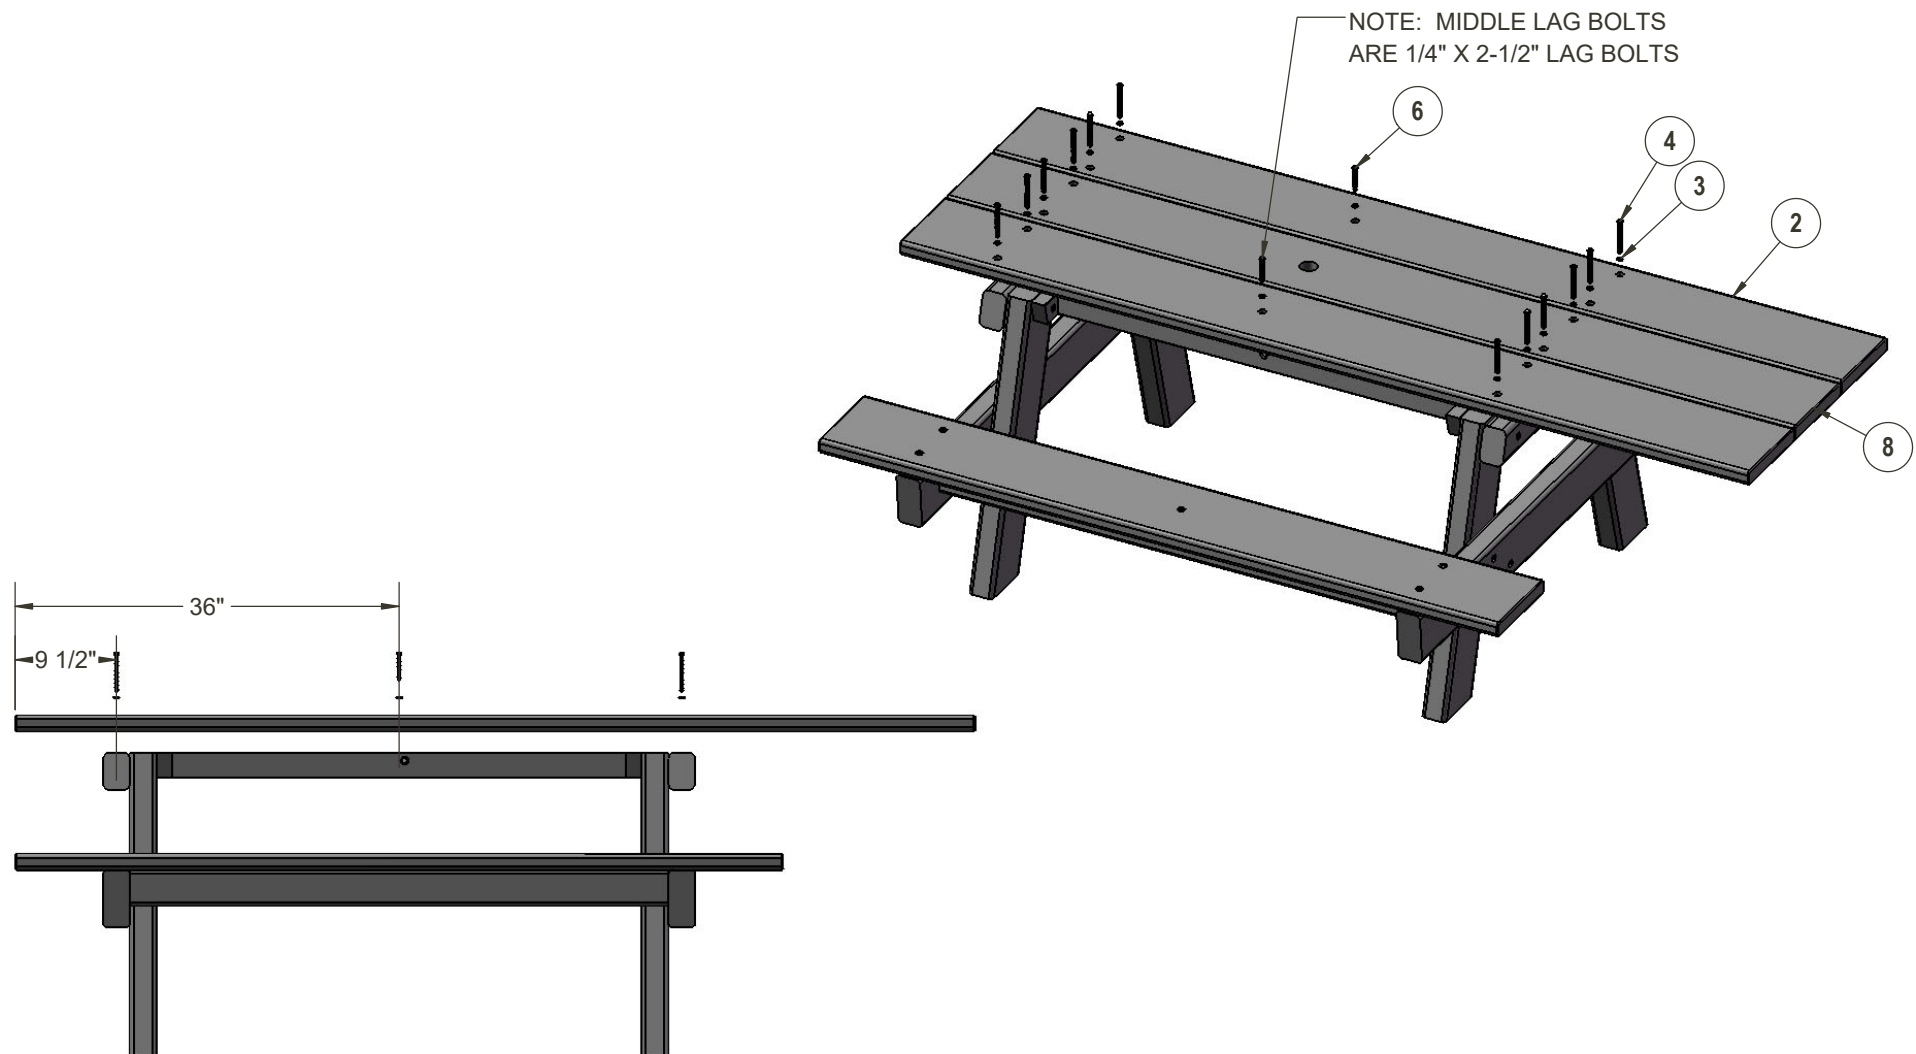


Use the predrill holes in the planks to drill 3/16" starter holes into the A frame & H frame. Attach the planks using the specified hardware.

## STEP 4 FOR OPTIONAL TABLE WITHOUT AN UMBRELLA HOLE

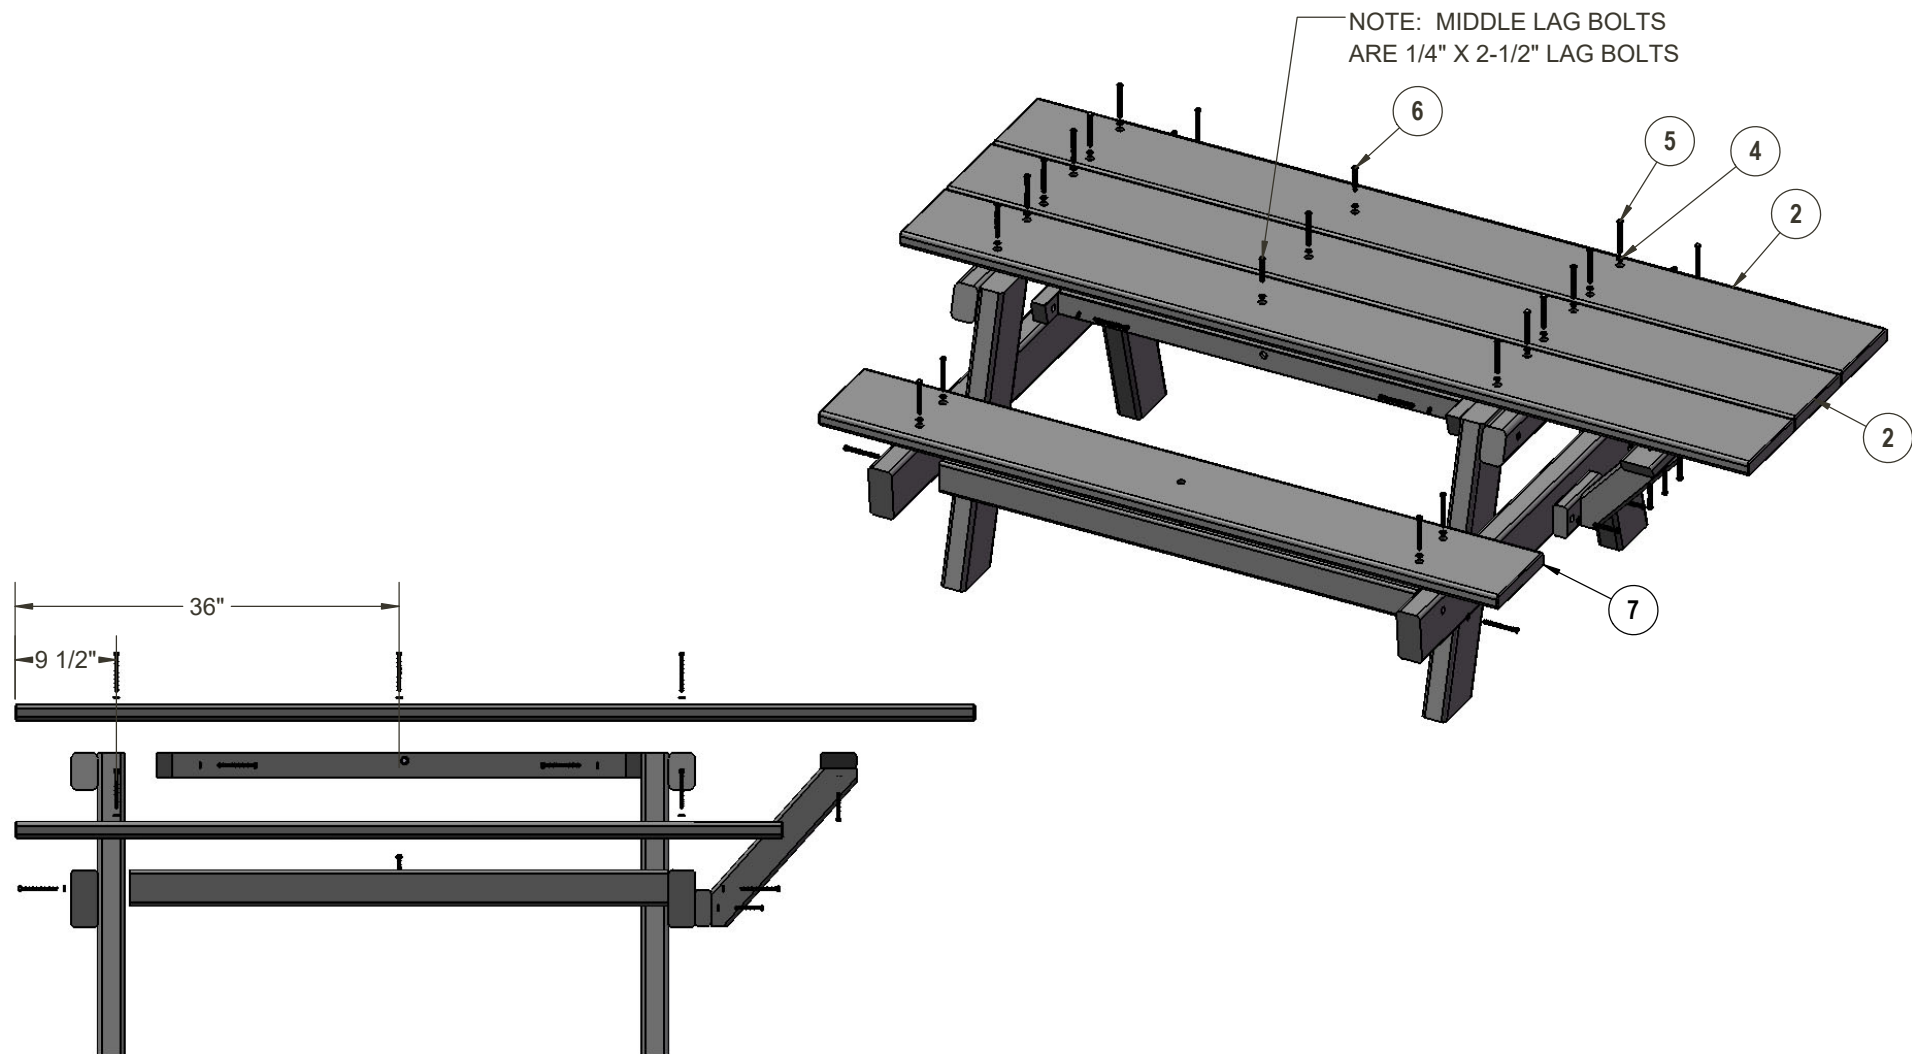

Use the predrill holes in the planks to drill 3/16" starter holes into the A frame & H frame. Attach the planks using the specified hardware.

## STEP 5

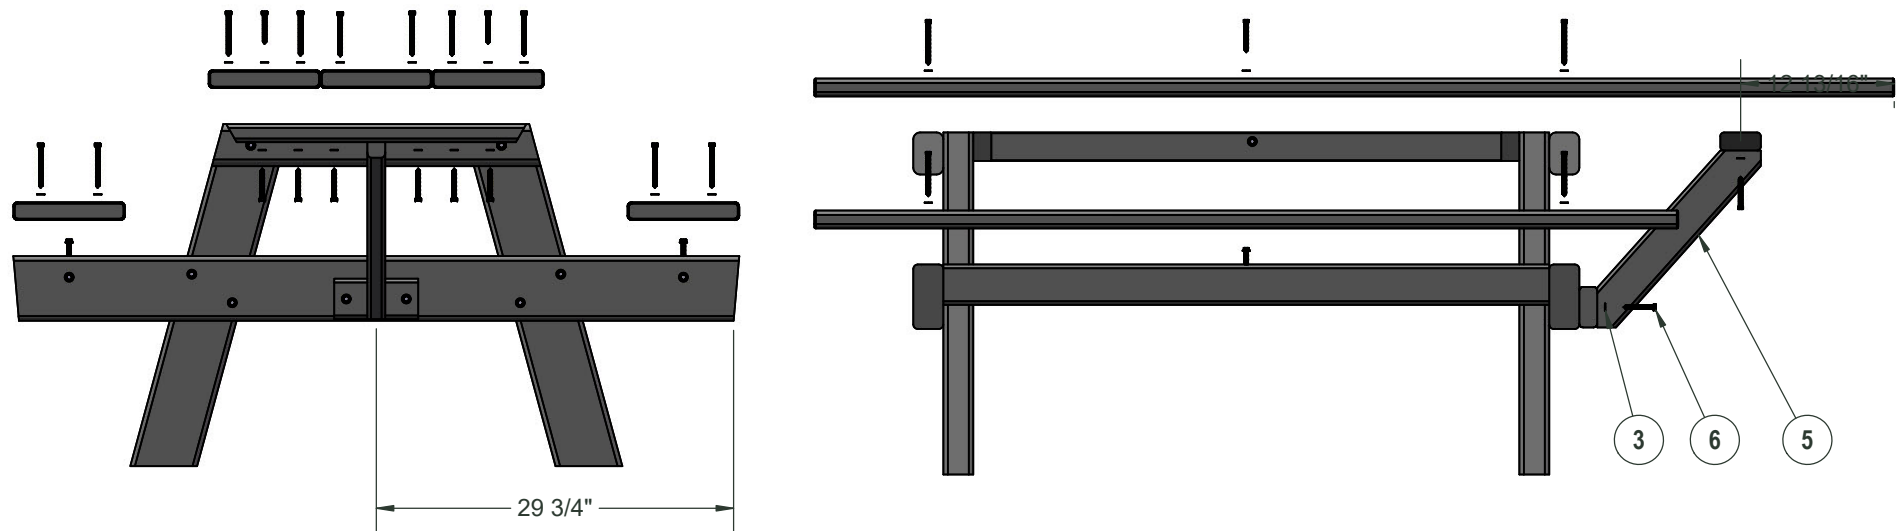

Attach the Support Arm to the A Frame Base and bottom side of table top boards using 1/4 x 2 1/2" hex lag bolts. Drill 3/16" starter holes before installing hex lag bolts.

# OVERALL DIMENSIONS

